

# Order just the Additional/Replacement Keypad Buttons You Need!

Need additional or replacement pre-printed buttons for Metreau Keypads? They're available to order for just about any device, source or preset number you need. Use the chart below to select and order the additional buttons you need in the quantity you need them. Please see the Metreau Keypad Installation Manual available at:

[amx.com//techdocs/MetreauKeypads.OperationReferenceGuide.pdf](http://amx.com//techdocs/MetreauKeypads.OperationReferenceGuide.pdf) for instructions on how to replace the buttons

## Metreau Series Keypad Button Ordering

	STANDARD BUTTONS					SINGLE WIDTH			DOUBLE WIDTH		
	MET-6N	MET-7	MET-13	DAS-MET-SRC	DAS-MET-NUM	BLACK	WHITE	Light Almond	BLACK	WHITE	Light Almond
Blank						EMA5794-02BL	EMA5794-02WH	EMA5794-02LA	EMA5794-03BL	EMA5794-03WH	EMA5794-03LA
0			•		•	MA5794-02BL-0	MA5794-02WH-0	MA5794-02LA-0	MA5794-03BL-0	MA5794-03WH-0	MA5794-03LA-0
1			•		•	MA5794-02BL-1	MA5794-02WH-1	MA5794-02LA-1	MA5794-03BL-1	MA5794-03WH-1	MA5794-03LA-1
2			•		•	MA5794-02BL-2	MA5794-02WH-2	MA5794-02LA-2	MA5794-03BL-2	MA5794-03WH-2	MA5794-03LA-2
3			•		•	MA5794-02BL-3	MA5794-02WH-3	MA5794-02LA-3	MA5794-03BL-3	MA5794-03WH-3	MA5794-03LA-3
4			•		•	MA5794-02BL-4	MA5794-02WH-4	MA5794-02LA-4	MA5794-03BL-4	MA5794-03WH-4	MA5794-03LA-4
5			•		•	MA5794-02BL-5	MA5794-02WH-5	MA5794-02LA-5	MA5794-03BL-5	MA5794-03WH-5	MA5794-03LA-5
6			•		•	MA5794-02BL-6	MA5794-02WH-6	MA5794-02LA-6	MA5794-03BL-6	MA5794-03WH-6	MA5794-03LA-6
7			•		•	MA5794-02BL-7	MA5794-02WH-7	MA5794-02LA-7	MA5794-03BL-7	MA5794-03WH-7	MA5794-03LA-7
8			•		•	MA5794-02BL-8	MA5794-02WH-8	MA5794-02LA-8	MA5794-03BL-8	MA5794-03WH-8	MA5794-03LA-8
9			•		•	MA5794-02BL-9	MA5794-02WH-9	MA5794-02LA-9	MA5794-03BL-9	MA5794-03WH-9	MA5794-03LA-9
+/-		•	•			N/A	N/A	N/A	MA5794-03BL-+-	MA5794-03WH-+-	MA5794-03LA-+-
ACONF						MA5794-02BL-AC	MA5794-02WH-AC	MA5794-02LA-AC	MA5794-03BL-AC	MA5794-03WH-AC	MA5794-03LA-AC
ARM						MA5794-02BL-AR	MA5794-02WH-AR	MA5794-02LA-AR	MA5794-03BL-AR	MA5794-03WH-AR	MA5794-03LA-AR
AUX				•		MA5794-02BL-AU	MA5794-02WH-AU	MA5794-02LA-AU	MA5794-03BL-AU	MA5794-03WH-AU	MA5794-03LA-AU
AWAY						MA5794-02BL-AW	MA5794-02WH-AW	MA5794-02LA-AW	MA5794-03BL-AW	MA5794-03WH-AW	MA5794-03LA-AW
BLINDS		•				MA5794-02BL-BL	MA5794-02WH-BL	MA5794-02LA-BL	MA5794-03BL-BL	MA5794-03WH-BL	MA5794-03LA-BL
CABLE						MA5794-02BL-CB	MA5794-02WH-CB	MA5794-02LA-CB	MA5794-03BL-CB	MA5794-03WH-CB	MA5794-03LA-CB
CD				•		MA5794-02BL-CD	MA5794-02WH-CD	MA5794-02LA-CD	MA5794-03BL-CD	MA5794-03WH-CD	MA5794-03LA-CD
DISARM						MA5794-02BL-DA	MA5794-02WH-DA	MA5794-02LA-DA	MA5794-03BL-DA	MA5794-03WH-DA	MA5794-03LA-DA
DAY						MA5794-02BL-DY	MA5794-02WH-DY	MA5794-02LA-DY	MA5794-03BL-DY	MA5794-03WH-DY	MA5794-03LA-DY
DISPLAY		•				MA5794-02BL-DS	MA5794-02WH-DS	MA5794-02LA-DS	MA5794-03BL-DS	MA5794-03WH-DS	MA5794-03LA-DS
DOOR						MA5794-02BL-DO	MA5794-02WH-DO	MA5794-02LA-DO	MA5794-03BL-DO	MA5794-03WH-DO	MA5794-03LA-DO
DVD	•	•		•		MA5794-02BL-DD	MA5794-02WH-DD	MA5794-02LA-DD	MA5794-03BL-DD	MA5794-03WH-DD	MA5794-03LA-DD
DVR						MA5794-02BL-DR	MA5794-02WH-DR	MA5794-02LA-DR	MA5794-03BL-DR	MA5794-03WH-DR	MA5794-03LA-DR
ENTER			•		•	MA5794-02BL-EN	MA5794-02WH-EN	MA5794-02LA-EN	MA5794-03BL-EN	MA5794-03WH-EN	MA5794-03LA-EN
FAN	•	•				MA5794-02BL-FN	MA5794-02WH-FN	MA5794-02LA-FN	MA5794-03BL-FN	MA5794-03WH-FN	MA5794-03LA-FN
GROUP					•	MA5794-02BL-GR	MA5794-02WH-GR	MA5794-02LA-GR	MA5794-03BL-GR	MA5794-03WH-GR	MA5794-03LA-GR
HOME						MA5794-02BL-HM	MA5794-02WH-HM	MA5794-02LA-HM	MA5794-03BL-HM	MA5794-03WH-HM	MA5794-03LA-HM
IPOD						MA5794-02BL-IP	MA5794-02WH-IP	MA5794-02LA-IP	MA5794-03BL-IP	MA5794-03WH-IP	MA5794-03LA-IP
LIGHTS	•	•				MA5794-02BL-LT	MA5794-02WH-LT	MA5794-02LA-LT	MA5794-03BL-LT	MA5794-03WH-LT	MA5794-03LA-LT
MAX						MA5794-02BL-MX	MA5794-02WH-MX	MA5794-02LA-MX	MA5794-03BL-MX	MA5794-03WH-MX	MA5794-03LA-MX
MP3	•			•		MA5794-02BL-M3	MA5794-02WH-M3	MA5794-02LA-M3	MA5794-03BL-M3	MA5794-03WH-M3	MA5794-03LA-M3
MUTE						MA5794-02BL-MU	MA5794-02WH-MU	MA5794-02LA-MU	MA5794-03BL-MU	MA5794-03WH-MU	MA5794-03LA-MU
NIGHT						MA5794-02BL-NT	MA5794-02WH-NT	MA5794-02LA-NT	MA5794-03BL-NT	MA5794-03WH-NT	MA5794-03LA-NT
PC						MA5794-02BL-PC	MA5794-02WH-PC	MA5794-02LA-PC	MA5794-03BL-PC	MA5794-03WH-PC	MA5794-03LA-PC
PRES						MA5794-02BL-PR	MA5794-02WH-PR	MA5794-02LA-PR	MA5794-03BL-PR	MA5794-03WH-PR	MA5794-03LA-PR
PROJ						MA5794-02BL-PJ	MA5794-02WH-PJ	MA5794-02LA-PJ	MA5794-03BL-PJ	MA5794-03WH-PJ	MA5794-03LA-PJ
PRESET					•	MA5794-02BL-PS	MA5794-02WH-PS	MA5794-02LA-PS	MA5794-03BL-PS	MA5794-03WH-PS	MA5794-03LA-PS
PARTY						MA5794-02BL-PT	MA5794-02WH-PT	MA5794-02LA-PT	MA5794-03BL-PT	MA5794-03WH-PT	MA5794-03LA-PT
SAT						MA5794-02BL-SA	MA5794-02WH-SA	MA5794-02LA-SA	MA5794-03BL-SA	MA5794-03WH-SA	MA5794-03LA-SA
SAVE			•			MA5794-02BL-SV	MA5794-02WH-SV	MA5794-02LA-SV	MA5794-03BL-SV	MA5794-03WH-SV	MA5794-03LA-SV
SIRIUS	•			•		MA5794-02BL-SI	MA5794-02WH-SI	MA5794-02LA-SI	MA5794-03BL-SI	MA5794-03WH-SI	MA5794-03LA-SI
TUNER	•	•		•		MA5794-02BL-TU	MA5794-02WH-TU	MA5794-02LA-TU	MA5794-03BL-TU	MA5794-03WH-TU	MA5794-03LA-TU
TV						MA5794-02BL-TV	MA5794-02WH-TV	MA5794-02LA-TV	MA5794-03BL-TV	MA5794-03WH-TV	MA5794-03LA-TV
VCONF						MA5794-02BL-VC	MA5794-02WH-VC	MA5794-02LA-VC	MA5794-03BL-VC	MA5794-03WH-VC	MA5794-03LA-VC
XM						MA5794-02BL-XM	MA5794-02WH-XM	MA5794-02LA-XM	MA5794-03BL-XM	MA5794-03WH-XM	MA5794-03LA-XM