

Overview

The MST-1001 10.1" Modero S Series Tabletop Touch Panel (**FG2265-05**) includes VoIP, brilliant 24-bit color depth, PoE connectivity, USB and streaming video. The MST-1001 also supports Bluetooth keyboard and mouse via the optional MXA-BT Bluetooth Adapter.



FIG. 1 MST-1001

Product Specifications

MST-1001 SPECIFICATIONS	
Dimensions (HWD)	6 3/16" x 10 1/16" x 4 1/16" (157mm x 255mm x 103mm)
Weight	2.6 lbs (1.179 Kg)
Power Consumption	<ul style="list-style-type: none"> • Full-On: 14W (max) • Typical: 7.5W • Standby: 4.5W • Shutdown: 0.7W • Start-Up Inrush Current: Not applicable due to PoE standard
External Power Supply Required	Optimal performance requires use of one of the following AMX PoE power supplies (not included): <ul style="list-style-type: none"> • PS-POE-AF-TC, PoE Injector, 802.3AF Compliant (FG423-83) • NXA-ENET8-2POE, Gigabit PoE Ethernet Switch (FG2178-63)
Certifications	<ul style="list-style-type: none"> • FCC Part 15 Class B • CE EN 55022, 55024, 60950-1 • IEC 60950-1 • C-Tick CISPR 22 Class B • IC CISPR 22 Class B • UL 60950-1 • VCCI CISPR 22 Class B • RoHS • WEEE
Environmental	<ul style="list-style-type: none"> • Temperature (Operating): 32°F to 104°F (0°C to 40°C) • Temperature (Storage): 4°F to 140°F (-20°C to 60°C) • Humidity (Operating): 20% to 85% RH • Humidity (Storage): 5% to 85% RH • Power ("Heat") Dissipation: <ul style="list-style-type: none"> • On: 109.2 BTU/hr • Standby: 10.6 BTU/hr
Included Accessories	<ul style="list-style-type: none"> • MXA-USB-C, USB Port Cover Kit (FG5968-18) • Cat5e Ethernet Cable, Flat Black (ECA2265-10) • UTP CAT.5E Snap In Coupler, Black (64-5968-01)

Connector Locations

USB peripherals (mouse, keyboard, etc.) may be connected to the USB port on the rear of the device. Updates to the device's firmware can also be made via the USB port.

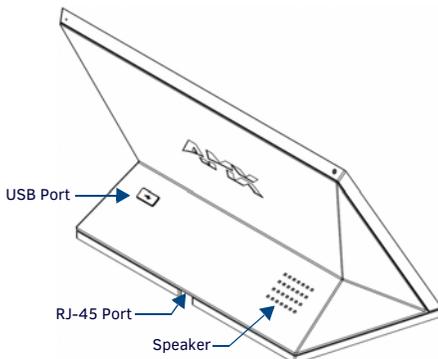


FIG. 2 MST-1001 USB PORT LOCATION

Power via Power Over Ethernet

Power for the MST-1001 is supplied via Power Over Ethernet (PoE), utilizing an AMX-certified, capacitive touch-compliant PoE injector such as the PS-POE-AT-TC High Power PoE Injector (**FG423-83**) or other approved AMX PoE power source. The incoming Ethernet cable should be connected to the RJ45 port on the panel.

Configuring and Programming

S Series touch panels are equipped with a *Settings* menu that provides the ability to set and configure various features on the panels.

Note: Information on the Settings menu, panel configuration and programming is provided in the Modero S Series Programming Guide, available at www.amx.com.

Accessing the Settings Menu

To access the Settings menu, press and hold the Sleep button on the top of the panel for 3 seconds. This invokes an on-screen prompt to release the button to enter the main Settings page (FIG. 3).



FIG. 3 SETTINGS MENU

Accessing the Configuration Page

1. From the *Settings* menu, select *Configuration*.
If the *Configuration* page is password protected, this opens a password keypad.
2. Enter the panel password into the keypad (the default is 1988) and select **OK** to access the page (FIG. 4).

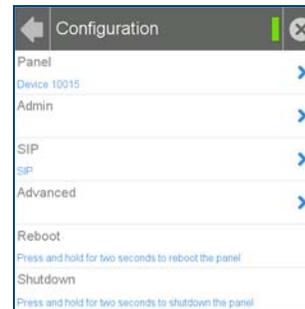


FIG. 4 CONFIGURATION PAGE

- To reboot the panel, press and hold the text under the *Reboot* section for two seconds.
- To shut down the panel, press and hold the text under the *Shutdown* section for two seconds.

Setting the Panel's Device Number and Device Name

In the *Configuration* page:

1. Press *Panel* to open the *Panel Configuration* page.
2. In the *Device Name* page, ensure that the *Synchronize Device Names* button is not selected, and click it to deselect it if it is.
3. Press *Device Number* to open the Device Number keypad.
4. Enter a unique Device Number assignment for the panel and press **OK**.
5. Press the *Device Name* field to open the Device Name keypad.
6. Enter a unique Device Name assignment for the panel and press **OK**.
7. Click the arrow on the top left of the page once to return to the *Configuration* page and twice to return to the *Settings* page.

Accessing the Connection & Networks Page

- From the Settings menu, select *Connection & Networks*.
If the page is password protected, this opens a password keypad.
- Enter the panel password into the keypad (the default is 1988) and select **OK** to access the page (FIG. 5).



FIG. 5 CONNECTION & NETWORKS PAGE

Configuring the Panel's IP Address

The first step is to configure the panel's communication parameters. This only configures the panel to communicate with a network, and it is still necessary to tell the panel with which Master it should be communicating.

Network Communication With a DHCP Address

In the *Connection & Networks* page:

- Select **Network Connection** to open the *Network Connection* page (FIG. 6).



FIG. 6 NETWORK CONNECTION PAGE

- Toggle the *DHCP/Static* field until the choice cycles to *DHCP*. This action causes all fields on the page (other than *Host Name*) to be greyed-out.
- Select *Host Name* to open the Host Name keyboard. Enter the new host name and click **OK**.

Setting Static IP Information

When using *DHCP* settings for a panel, the DHCP server will automatically populate almost all of the *Network Connections* page fields, with the exception of *Hostname*. When setting the panel for *Static*, however, this information must be entered manually. To enter the network connection information:

- In *DHCP/Static*, press the field until the entry reads "Static". This enables all of the editable *Network Connections* page fields.
- Select the *IP Address* field to open the *Wired IP Address* keypad (FIG. 7).



FIG. 7 WIRED IP ADDRESS KEYBOARD

- Enter the server's IP address and click **OK**.
- Repeat this procedure with the other fields on the *Network Connections* page.
- When finished, the new connection information will be visible in the *Network Connections* page.

Connecting to a NetLinx Master

To establish the type of connection to make between the panel and NetLinx Master:

- In the *Connection & Networks* page, select **Master Connection** to open the *Master Connection* page (FIG. 8).



FIG. 8 MASTER CONNECTION PAGE

- Press **Mode** to toggle through the available connection modes (*Auto*, *URL* or *Listen*):

CONNECTION MODES		
Mode	Description	Procedures
URL	The device connects to the target Master's IP address via a TCP connection.	<ol style="list-style-type: none"> 1) Select URL in the <i>Mode</i> menu. 2) Enter the <i>Master IP/URL</i>, <i>Master Port Number</i>, and <i>Username/Password</i> (if required by the Master). Press OK to save changes.
Listen	This mode allows the panel to "listen" for the Master's communication signals. Note that in this mode, the <i>System Number</i> and <i>Master IP/URL</i> fields are read-only.	<ol style="list-style-type: none"> 1) Select Listen in the <i>Mode</i> menu. 2) Confirm the panel's IP address is on the Master's URL list (via NetLinx Studio). 3) Press OK to save changes. Note: The <i>Host Name</i> can be used to locate the panel on the Master (particularly useful for DHCP connections where the IP address can change).
Auto	Use this mode when both the panel and the NetLinx Master are on the same Subnet.	<ol style="list-style-type: none"> 1) Select Auto in the <i>Mode</i> menu. 2) Enter the System Number and Username and Password (if applicable). 3) Press OK to save changes.

- If you have enabled password security on your Master, you need to set the username and password within the device.
 - Select *Username* to open the Master User keyboard.
 - Set your Username and select **OK**.
 - Select the *Password* to open the Master Password keyboard.
 - Set your Master Password and select **OK**.
 - Press the **Back** button twice to return to the *Settings* page.

Related Software and Additional Documentation (at www.amx.com)

- Programming the Modero S Series touch panels requires the use of the latest versions of NetLinx Studio and TPDesign4, both available to download at www.amx.com. Refer to the NetLinx Studio and TPDesign4 online help for information.
- For additional information on the MST-1001 panel, refer to the *S-Series Touch Panels MSD/T-1001, MSD/T-701 & MSD/T-431 Instruction Manual*.
- For detailed information on the Settings menu as well programming information and instructions on upgrading firmware, refer to the *Modero S Series Programming Guide*.



© 2015 Harman. All rights reserved. Modero, AMX, AV FOR AN IT WORLD, and HARMAN, and their respective logos are registered trademarks of HARMAN. Oracle, Java and any other company or brand name referenced may be trademarks/registered trademarks of their respective companies.

AMX does not assume responsibility for errors or omissions. AMX also reserves the right to alter specifications without prior notice at any time. The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.

3000 RESEARCH DRIVE, RICHARDSON, TX 75082 AMX.com | 800.222.0193 | 469.624.8000 | +1.469.624.7400 | fax 469.624.7153

AMX (UK) LTD, AMX by HARMAN - Auster Road, Clifton Moor, York, YO30 4GD United Kingdom • +44 1904-343-100 • www.amx.com/eu/

93-2265-05 REV: H

