



## CONFIGURATION & PROGRAMMING MANUAL

VERSION 1.5

# VARIA TOUCH PANELS

<b>VARIA SL50</b>	5.5" ULTRA-SLIM WALL MOUNT TOUCH PANEL
<b>VARIA SL80</b>	8" ULTRA-SLIM WALL MOUNT TOUCH PANEL
<b>VARIA 80</b>	8" TOUCH PANEL
<b>VARIA 80N</b>	8" TOUCH PANEL (NO-COMM)
<b>VARIA 100</b>	10.1" TOUCH PANEL
<b>VARIA 100N</b>	10.1" TOUCH PANEL (NO-COMM)
<b>VARIA 150</b>	15.6" TOUCH PANEL
<b>VARIA 150N</b>	15.6" TOUCH PANEL (NO-COMM)



AV FOR AN IT WORLD®

## IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. ONLY USE attachments/accessories specified by the manufacturer.
10. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
11. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
13. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle or disconnect the PoE injector.
14. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
15. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause electric shock or fire.
16. The unit is to be connected only to PoE networks without routing to the outside plant.
17. DO NOT hang anything on the panel when it is mounted to a wall, glass, and other smooth surfaces. The equipment is only suitable for mounting at heights  $\leq 2$  m (6.56ft).



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



ESD Warning: The icon to the left indicates text regarding potential danger associated with the discharge of static electricity from an outside source (such as human hands) into an integrated circuit, often resulting in damage to the circuit.

**WARNING:** To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

**WARNING:** No naked flame sources – such as lighted candles – should be placed on the product.

**CAUTION:** To be installed by instructed, or skilled, persons only.

**WARNING:** This product is intended to be operated ONLY from the voltages listed on the back panel or the recommended, or included power supply of the product. Operation from other voltages other than those indicated may cause irreversible damage to the product and void the products warranty. The use of AC Plug Adapters is cautioned because it can allow the product to be plugged into voltages in which the product was not designed to operate. If you are unsure of the correct operational voltage, please contact your local distributor and/or retailer. If the product is equipped with a detachable power cord, use only the type provided, or specified, by the manufacturer or your local distributor.



**WARNING:** Do Not Open! Risk of Electrical Shock. Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel.

Place the equipment near a main power supply outlet and make sure that you can easily access the power breaker switch.

### BATTERY INFORMATION:

This product contains batteries that are covered under the 2006/66/EC European Directive, which cannot be disposed of with normal household waste. Please follow local regulations. Do not incinerate.

**WARNING: 40 °C / 104 °F** is maximum ambient operating temperature. Avoid exposure to extreme heat or cold.

### LASER SAFETY:

This product complies with FDA performance standards for laser products except for conformance with IEC 60825-1 Ed. 3., as described in Laser Notice No. 56, dated May 8, 2019.

Date of manufacture: the date code shown on the product label represents the manufacturing date of this laser product.



**CAUTION:** Invisible laser radiation when open. Avoid exposure to beam. Class I laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

**CAUTION:** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

### FCC AND CANADA EMC COMPLIANCE INFORMATION:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3(B)

### FCC SDOC SUPPLIER'S DECLARATION OF CONFORMITY:

HARMAN Professional, Inc. hereby declares that this equipment is in compliance with the FCC part 15 Subpart B.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Approved under the verification provision of FCC Part 15 as a Class B Digital Device.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

### WIRELESS TRANSMITTER COMPLIANCE INFORMATION:

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Le terme «IC:» avant le numéro de certification radio signifie seulement que les spécifications techniques d'Industrie Canada ont été respectées.

This device complies with part 15 of the FCC Rules and the applicable Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20mm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


Cet appareil est conforme à FCC et IC l'exposition aux rayonnements limites fixées pour un environnement non contrôlé. Cet appareil doit être installé et utilisé avec une distance minimale de 20mm entre le radiateur et votre corps. Cet transmetteur ne doit pas être co-situé ou opérant en liaison avec toute autre antenne ou transmetteur.

## EU COMPLIANCE INFORMATION:

Hereby, Harman Professional, Inc. declares that the radio equipment type AMX VARIA-SL80, VARIA-80, VARIA-100 and VARIA-150 are in compliance with directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.amx.com>.

This radio product operates in frequency of 13.56 MHz with maximum power 0.01mW.

## WEEE NOTICE:

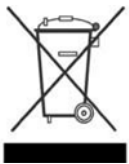

This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

## RoHS Compliance:

This product is in compliance with Directive 2011/65/EU and (EU) 2015/863 of the European Parliament and of the Council of 31/03/2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

## REACH Compliance:

REACH (Regulation No 1907/2006) addresses the production and use of chemical substances and their potential impacts on human health and the environment. Article 33 (1) of REACH Regulation requires suppliers to inform the recipients if an article contains more than 0.1% (per weight per article) of any substance(s) on the Substances of Very High Concern (SVHC) Candidate List ('REACH candidate list').

This product contains the substance "lead" (CAS-No. 7439-92-1) in a concentration of more than 0.1% per weight.

At the time of release of this product, except for the lead substance, no other substances of REACH candidate list are contained in a concentration of more than 0.1% per weight in this product.

Note: on June 27, 2018, lead was added to the REACH candidate list. The inclusion of lead in the REACH candidate list does not mean that lead-containing materials pose an immediate risk or results in a restriction of permissibility of its use.



此标识适用于在中华人民共和国销售的电子信息产品。标识中间的数字为环保实用期限的年数。

This logo applies to electronic information products sold in the People's Republic of China. The number in the middle of the logo is the number of years of environmental utility.

**Manufacturer Information:**

HARMAN Professional, Inc.  
Address: 8500 Balboa Blvd. Northridge, CA 91329 USA

**EU Regulatory Contact:**

Harman Professional Denmark ApS  
Olof Palmes Allé 44, 8200 Aarhus N, Denmark

**UK Regulatory Contact:**

Harman Professional Solutions  
2 Westside, London Road, Apsley, Hemel Hempstead, HP3 9TD, UK

## COPYRIGHT NOTICE

AMX© 2025, all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AMX. Copyright protection claimed extends to AMX hardware and software and includes all forms and matters copyrightable material and information now allowed by statutory or judicial law or herein after granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen display looks, etc. Reproduction or disassembly of embodied computer programs or algorithms is expressly prohibited.

## LIABILITY NOTICE

No patent liability is assumed with respect to the use of information contained herein. While every precaution has been taken in the preparation of this publication, AMX assumes no responsibility for error or omissions. No liability is assumed for damages resulting from the use of the information contained herein. Further, this publication and features described herein are subject to change without notice.

## AMX WARRANTY AND RETURN POLICY

The AMX Warranty and Return Policy and related documents can be viewed/downloaded at [www.amx.com](http://www.amx.com).

# Table of Contents

IMPORTANT SAFETY INSTRUCTIONS.....	2
Varia Touch Panels Configuration & Programming.....	11
Overview.....	11
Additional Documentation.....	11
Out of the Box Setup Wizard.....	12
Overview.....	12
The Setup Wizard.....	12
Language.....	12
Date & Time.....	12
Network.....	13
Persona Selection.....	14
Wizard - AMX Control.....	15
Overview.....	15
2 Simple Steps.....	15
Netlinx Setup.....	15
Load TP5 File.....	16
Wizard - AMX Book.....	17
Overview.....	17
Setup.....	17
Wizard - Zoom Rooms Controller.....	17
Overview.....	17
Setup.....	17
Wizard - Web Kiosk.....	18
Overview.....	18
Setup.....	18
Wizard – Custom Persona (Any-App).....	18
Overview.....	18
Setup.....	18
Panel Settings Menu.....	19
Overview.....	19
Accessing the Settings Menu.....	19
Using the Settings Menu.....	19
AMX Control.....	21
Overview.....	21
Controller.....	21
Scanning for Controllers.....	22
Changing the Controller Connection Mode.....	22

Changing the Controller IP/URL.....	23
Changing the Controller Port Number.....	23
Changing the Controller Username.....	23
Changing the Controller Password.....	23
Changing the Device Number and Device Name.....	23
Enabling a Secure Controller Connection.....	24
Enabling Hostname Verification.....	24
G5 Settings.....	24
System.....	28
AMX Book.....	30
Overview.....	30
Calendar.....	30
Microsoft Exchange.....	30
Office 365.....	31
Meeting Time.....	32
Group.....	33
Room.....	34
Security.....	35
Google Calendar.....	35
Web Kiosk.....	37
Overview.....	37
Advanced Settings.....	38
Overview.....	38
About Panel.....	38
Apps.....	40
Sound.....	41
Display.....	43
Date & Time.....	46
Network.....	50
System.....	53
Security.....	57
Diagnostics.....	62
Gestures.....	64
Overview.....	64
Touch Gesture Recognition.....	64
Gesture Velocity.....	64
Gesture Prioritization.....	64
Gesture VNC/Mouse Support.....	65
Gesture Custom Event.....	65

Gesture numbers and velocity values .....	65
Precise gesture velocity.....	65
Enabling or Disabling the Gesture Custom Event.....	65
Programming - Send Commands .....	66
Overview .....	66
Using the “Pipe” (   ) Character .....	66
Panel Commands .....	66
Page Commands.....	86
Page Commands are case in-sensitive.....	86
Button Commands .....	91
Text Effect Name/Numbers .....	120
Dynamic Image Commands.....	122
^RAF and ^RMF Embedded Codes / Escape Sequences .....	125
Listview (Data Access) Commands.....	127
Terminology.....	127
Programming Numbers.....	133
Justification Values .....	135
Border Styles .....	135
ISO-8859-1 Character Encoding/Decoding table .....	136
Virtual Keystroke Commands .....	137
Appendix A: Upgrading Firmware via NetLinx Studio.....	139
Overview .....	139
NetLinx Studio 4.....	<b>Error! Bookmark not defined.</b>
Upgrading Firmware via NetLinx Studio (v4 or Higher).....	139
Appendix B: Using NetLinx to Define a Data Source (Listview Buttons).....	142
Example Listview Workflow - NetLinx Data Source .....	142
1) Create the Listview Button and Set Button Properties.....	142
2) Create the Data Source .....	146
NetLinx Usage Example - ASCII.....	146
3) Configure the Response to a User Selection .....	149
Appendix C: Text Formatting.....	150
Text Formatting Codes for Bargraphs.....	150
Text Area Input Masking.....	150
Input mask character types.....	151
Input Mask Ranges .....	151
Input Mask Operations .....	152
Input Mask Literals.....	152
Input Mask Output Examples.....	152
Special Escape Sequences.....	153

Appendix D: Bargraph Functions .....	154
Overview .....	154
Setup Codes.....	154
Appendix E: Video Streaming .....	155
Optimizing Motion JPEG Video Presentation and Speed.....	155
Streaming a Video File Saved on the Panel via Custom URL Scheme .....	155
Transcoding Guidelines .....	157
Appendix F: Modern Authentication.....	158
Pre-requisites:.....	158
I. Self-signed Certificate creation .....	158
II. Export Certificate.....	158
a. Export Certificate - Without Private Key (.CER).....	159
b. Export Certificate - With Private Key (.PFX).....	159
III. Generate the keyCredentials value using PowerShell.....	160
IV. Create your App registration in Azure Active Directory .....	161
V. Add Graph API permissions to the app .....	163
VI. Application Credentials.....	167
VII. Adding Credentials to the Application (Client Secret) .....	167
VIII. Adding Credentials to the Application (Client Certificate) .....	169
IX. Modify the Manifest of Azure AD Application .....	170
Appendix G: Limiting application permissions to specific Exchange Online mailboxes .....	171
In this article .....	171
Background.....	171
Configure ApplicationAccessPolicy .....	172
Supported permissions and additional resources.....	172
Handling API errors .....	173
Appendix H: Google Authentication Configuration.....	174
Create the App Registration .....	174
Create the App Registration .....	174
Creating Client Credentials.....	175
Getting Client Secret and JSON.....	175
Usage of Web Authentication .....	175
Create Service Account .....	175
Creating Key for Service Account.....	175
Creating Base64 from the Key .....	176
Usage of Service Account .....	176
Appendix I: Hardware API .....	176
Overview .....	176
Device Peripherals.....	176

Any-Color Side LEDs.....	176
Appendix J: Loading Android apps to Varia Touch Panels.....	178
Overview .....	178
Manager.....	178
Discovering Devices.....	178
Transferring Apps .....	179
Appendix K: Government Security Standards.....	181
Overview .....	181
Password Complexity.....	181
FIPS 140-3 Encryption.....	181
Common Access Card (CAC) use for multi-factor authentication .....	181
Credential Storage for CA Certificates .....	182
Additional Security Features .....	183

# Varia Touch Panels Configuration & Programming

## Overview

The AMX Varia touch panels redefine control with personas that fit any application. Any AMX Varia touch panel can be configured as any persona:

- **AMX G5 Control** that utilizes AMX G5 programming tools like TPDesign5 & NetLinx Studio
- **AMX Book Scheduling** that directly connects directly to popular scheduling software
- **Zoom Rooms Controller** to manage Zoom Rooms environments
- **Web Kiosk** that can display HTML5 & web content on a full-screen borderless browser
- **Any-app** which allows any Android app to be the primary persona
- **AVX Control** for BSS OMNI systems (coming soon)

The VARIA touch panels covered in this document are listed below:

VARIA TOUCH PANELS		
AMX-UTP050I	VARIA-SL50	5.5" ULTRA-SLIM WALL MOUNT TOUCH PANEL, PORTRAIT
AMX-UTP080I	VARIA-SL80	8" ULTRA-SLIM WALL MOUNT TOUCH PANEL
AMX-UTP081I	VARIA-80	8" TOUCH PANEL
AMX-UTP081IN	VARIA-80N	8" TOUCH PANEL (NO-COMM)
AMX-UTPI01I	VARIA-100	10.1" TOUCH PANEL
AMX-UTPI01IN	VARIA-100N	10.1" TOUCH PANEL (NO-COMM)
AMX-UTPI51I	VARIA-150	15.6" TOUCH PANEL
AMX-UTPI51IN	VARIA-150N	15.6" TOUCH PANEL (NO-COMM)

NO-COMM Touch Panels are used in highly secure environments where device peripherals are not allowed. NO-COMM panels omit the camera, microphone, and NFC reader. NO-COMM panels include speakers, ambient light sensor, and proximity sensor.

For NO-COMM panels, please disregard any section of this manual that refers to camera, microphones, or NFC.

To use the AMX G5 Control persona, please use the minimum required versions of the following AMX software:

- TPDesign5 version 1.5.0, Build 111, Border Version 25
  - o G5 Support Files 1.5.69
- NetLinx Studio 4.4.1915
- Resource Management Suite 4.8.4.1

Software can be downloaded from AMX.com.

## Additional Documentation

- For instructions on using NetLinx Studio, refer to NetLinx Studio online help, or the NetLinx Studio v4 Instruction Manual.
- For instructions on using TPDesign5, refer to TPDesign5 online help, or the TPDesign5 Instruction Manual.
- For installation instructions for Varia panels, refer to the Varia Touch Panels' Quick Start Guides.

# Out of the Box Setup Wizard

## Overview

AMX Varia touch panels include a step-by-step wizard to walk a user through basic setup requirements. This includes language selection, date & time, network, and touch panel persona.

## The Setup Wizard


When a panel is first turned on (either out of the box, or after a factory reset operation), the setup wizard appears. Follow the steps to select your preferences. After making selections on each page, press [Continue] on the bottom-right of the screen to go to the next page. To go back, press [Back] on the bottom-left of the screen.

## Language

Use the dropdown to select your language.

**NOTE:** The selected language will only apply to the operating system.

Additional language selections/decisions may be required based on the selected persona or app settings.

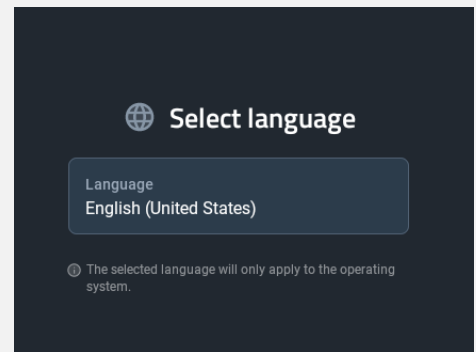


## Date & Time

Use the dropdown to select your time zone.

You can select *Set date & time automatically* to utilize NTP.

Or, if required, adjust your date & time manually by using the dropdowns.

Select either 12-hour or 24-hour time format.

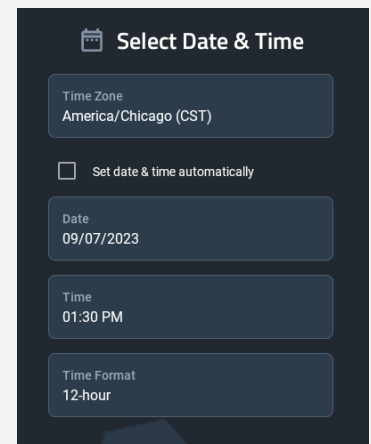


# Network


Select your network configuration

The current configuration will be shown. Default is DHCP with 802.1X disabled and no proxy.

A blue Change button is available to modify settings as needed.




Make sure to press [Save] after making changes, or your newly entered network settings will not be saved.

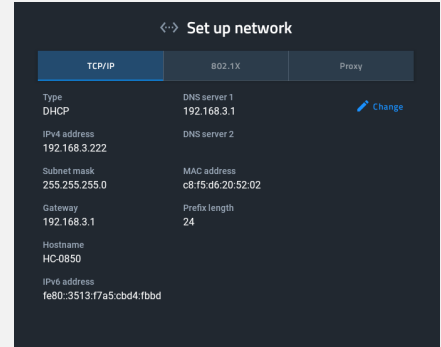

## DHCP


Network DHCP server will automatically assign IP address, subnet mask, default gateway, and DNS server info.

In this mode, IP fields are read-only. Hostname is available to change as needed.

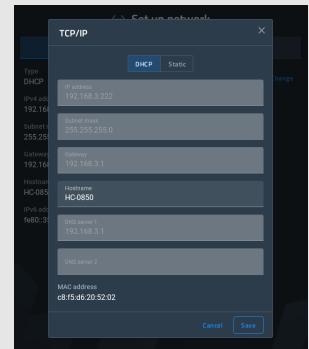

## Static IP


IP address, subnet mask, default gateway, and DNS server info must be entered manually. Make sure to press [Save] after entering the information. Press [Cancel] to leave without saving any edits.

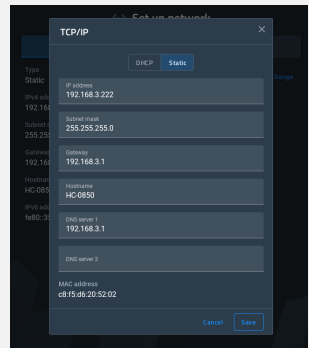

## 802.1X

If 802.1X is available/required, turn it [ON], select your EAP method, and enter the required info for that method (eg. certificate, domain, identity, password, etc.).


For further assistance and detail on whether your network supports or requires 802.1X, please contact your or your client's IT department.

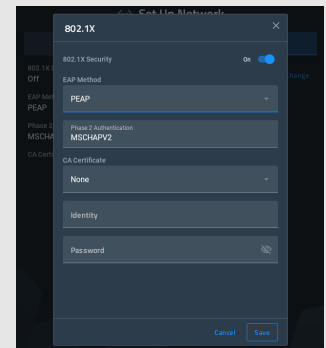

## Proxy

If a proxy is available/required, turn it [ON] and enter the appropriate configuration information.

For further assistance and detail on whether your network supports or requires 802.1X, please contact your or your client's IT department.

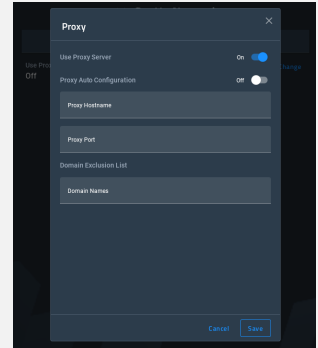


## Persona Selection

Select the panel's persona, which is the primary app that will be used by the panel. Each subsequent reboot will launch only this persona.

Each persona is described in detail later in this manual.

Once selected, press [Continue].


**NOTE:** The panel persona may be changed at any time in Advanced Settings.

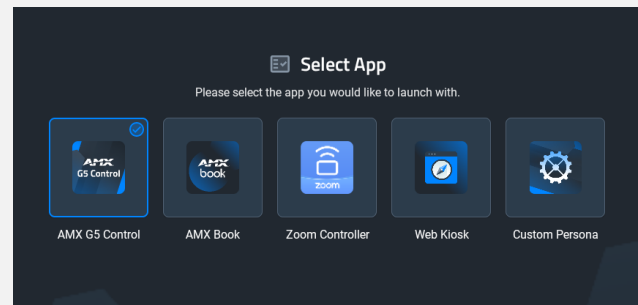

## Confirm Panel App

Your selection will be confirmed in a pop-up. Press [Yes, continue] to complete the selection or [Cancel] to go back and select a different persona.

**NOTE:** Once confirmed, the panel may take up to one (1) minute to initially configure the persona.

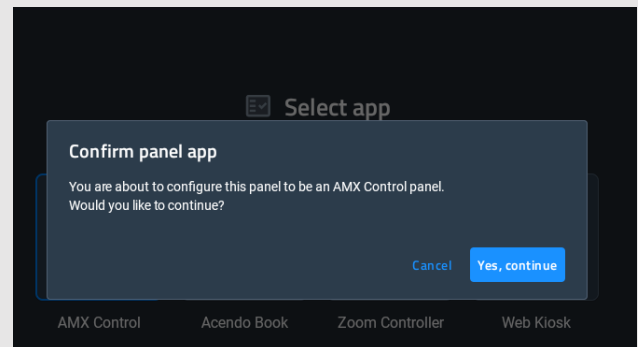

# Wizard - AMX Control


## Overview

The AMX Control persona utilizes familiar G5 touch panel technology & features, used with Netlinx control systems. The touch panel GUI (graphical user interface) is programmed with TPDesign5 and is compatible with .TP5 files.

## 2 Simple Steps

When the AMX Control persona is selected & configured, the wizard continues to help guide through the setup of Netlinx controller and load the TPDesign5 (TP5) UI file.

Select [Get Started] to continue, or [Maybe Later] to exit the wizard.

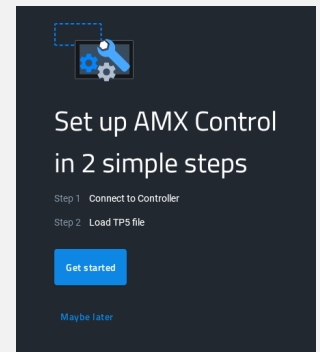


## Controller Setup

Connect to your Netlinx or MUSE controller. Start by pressing the blue [Change] button on the right.




Select one of the three (3) available connection methods. Each is described in detail below.

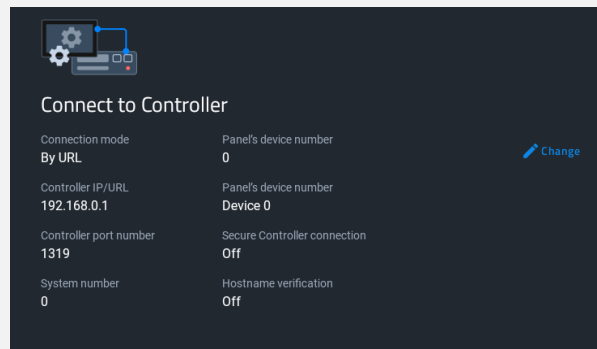

### By URL


Enter the Controller's IP/URL, port number (if not using default 1319), and username/password (if used). The System Number field is read-only; the panel obtains this information from the controller.

Assign your touch panel a Device ID and a Device Name for your panel.

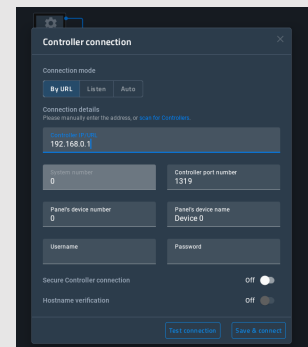

## Listen


Add the panel address into the URL List in NetLinx Studio and set the connection mode to Listen. This mode allows the panel to “listen” for the Controller’s communication signals. The System Number and Controller IP/URL fields are read-only.

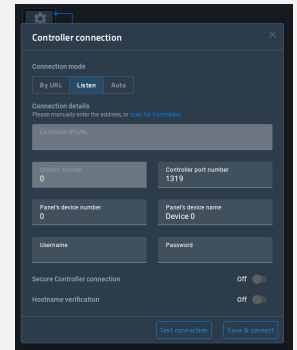

## Auto

Enter the System Number and a username/password (if applicable).

Use this mode when both the panel & NetLinx Controller are on the same Subnet. The Controller IP/URL field is read-only.

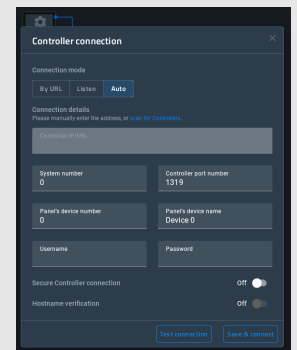

## Load TP5 File

Choose one of the three (3) available options to load a .TP5 file to the panel.


**Demo TP5 file** will load a pre-loaded & pre-built panel file

**Load from USB** will allow a file to be loaded via a USB thumb drive.

**Load from URL** will allow the user to enter a URL from which the .TP5 file will be downloaded.

Alternatively, Manager software may be used to load a .TP5 file to one or more touch panels.

If you don't wish to load a .TP5 file right now, the final option [Maybe Later] may be selected at the bottom of the screen

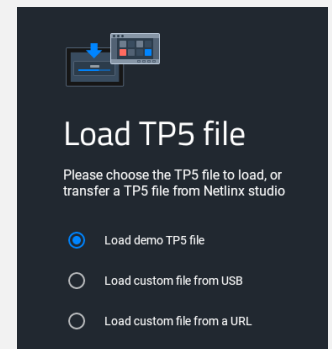

To use the AMX G5 Control persona, please use the minimum required versions of the following AMX software:

- TPDesign5 version 1.5.0, Build 111, Border Version 25
  - o G5 Support Files 1.5.68
- NetLinx Studio 4.4.1915
- Resource Management Suite 4.8.4.1

Software can be downloaded from AMX.com.

# Wizard - AMX Book

## Overview

AMX Book offers an out-of-the box room scheduling solution, connects directly to popular scheduling platforms and supports the latest authentication protocols like Microsoft Modern Authentication.


## Setup

Complete setup instructions can be found later in this manual.

# Wizard - Zoom Rooms Controller

## Overview

The built-in Zooms Room Controller persona can be used to control & manage Zoom Rooms environments. Varia panels can be set up as a Zoom Rooms **Room Controller** or a Zoom Rooms **Scheduling Display**.

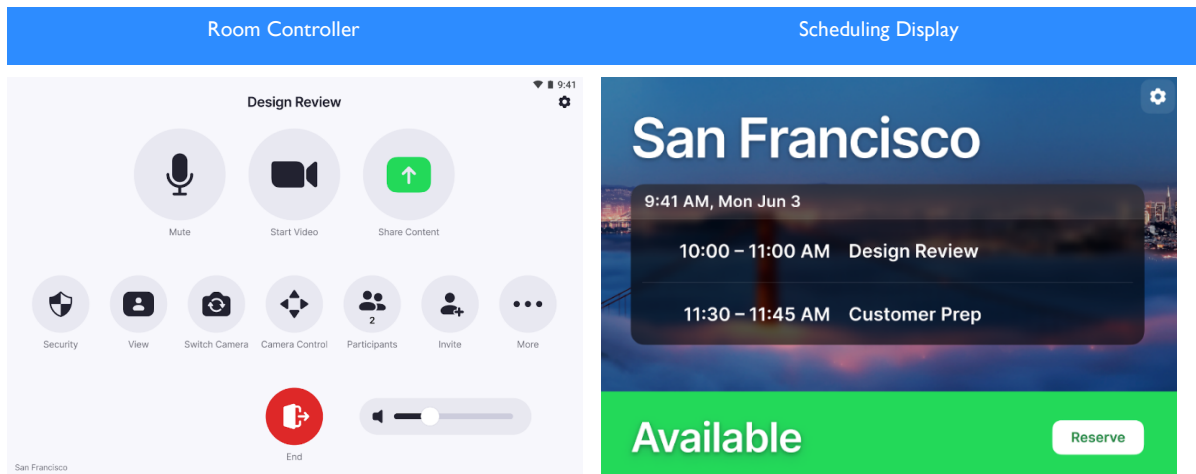

## Setup

Setup for ZRC environments is completed within the ZRC app. More information on Zoom Rooms can be found here:



<https://www.zoom.com/en/products/meeting-rooms/resources/configuration/>

Please note that the ZRC app is very sensitive to correct date, time, and time zone. If an incorrect date/time is set on the panel, Zoom will refuse to connect.

# Wizard - Web Kiosk

## Overview


A full-screen borderless browser for HTML5, JavaScript, & web can be selected as a persona to turn your panel into a standards-based kiosk designed around web content.

## Setup

Use the dropdown to select **https://** (preferred) or **http://**. Be careful not to repeat this in the URL field.

Enter the URL to be displayed in the field.

Press [Save], and then [Continue]. Your web content will load immediately and will also load on any subsequent panel reboot.

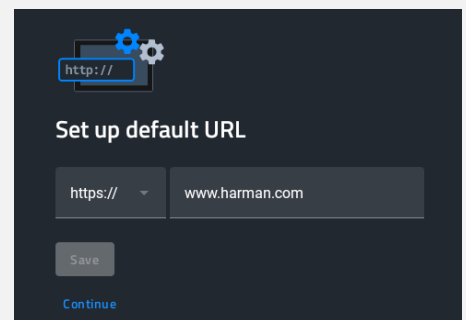

# Wizard – Custom Persona (Any-App)

## Overview


Select any Android app as your panel persona. The Varia panel will load the app full screen & borderless by default.

## Setup

After selecting Custom Persona, -select your app from the list.

**NOTE:** the app must be installed prior to selecting it. Apps can be loaded to your Varia touch panels using Manager software available at [AMX.com](http://AMX.com)


For more information on loading Android apps onto Varia touch panels, see Appendix J.

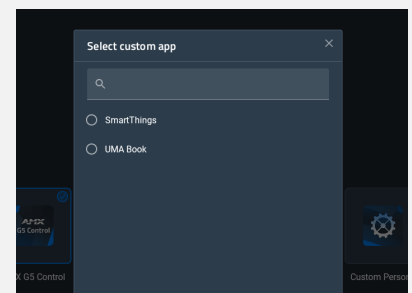

Selecting an app will return you to the selection page and populate the Custom Persona button with your selected app

Press [Continue] to select that app as your custom persona.

If you need to change apps, press the Custom Persona button again.

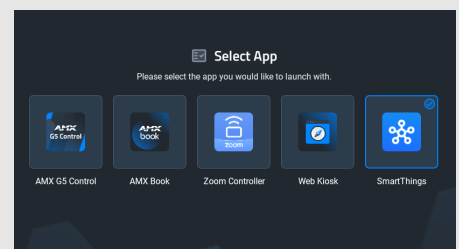



# Panel Settings Menu

## Overview

Panel Settings contain configuration info for the currently active persona, and advanced settings.

## Accessing the Settings Menu

To access the Panel Settings menu, briefly press & release the Settings Button. The Settings Button is the pin-hole button on the top-right of the panel bezel, next to the rectangular Function button. The default password to access Panel Settings is 1988.

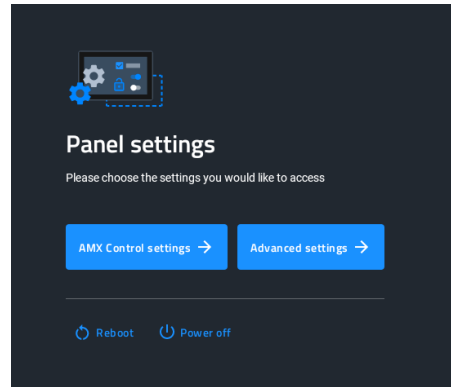
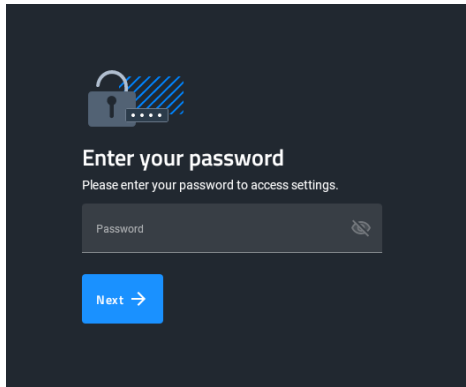


**NOTE:** Do not confuse the Settings button (pin-hole button) with any of the microphone or sensor holes. The Settings button is the **larger hole located closest to the Function Button**. Irreparable damage may occur if a foreign object is pushed down the microphone hole or into one of the sensors.

## Using the Settings Menu

When opened, the Settings menu appears in the center of the panel display. Please note that many of the pages in the menu may be longer than they initially appear. To reach additional functions on a given page, the page itself may be scrolled up & down to reveal those functions.



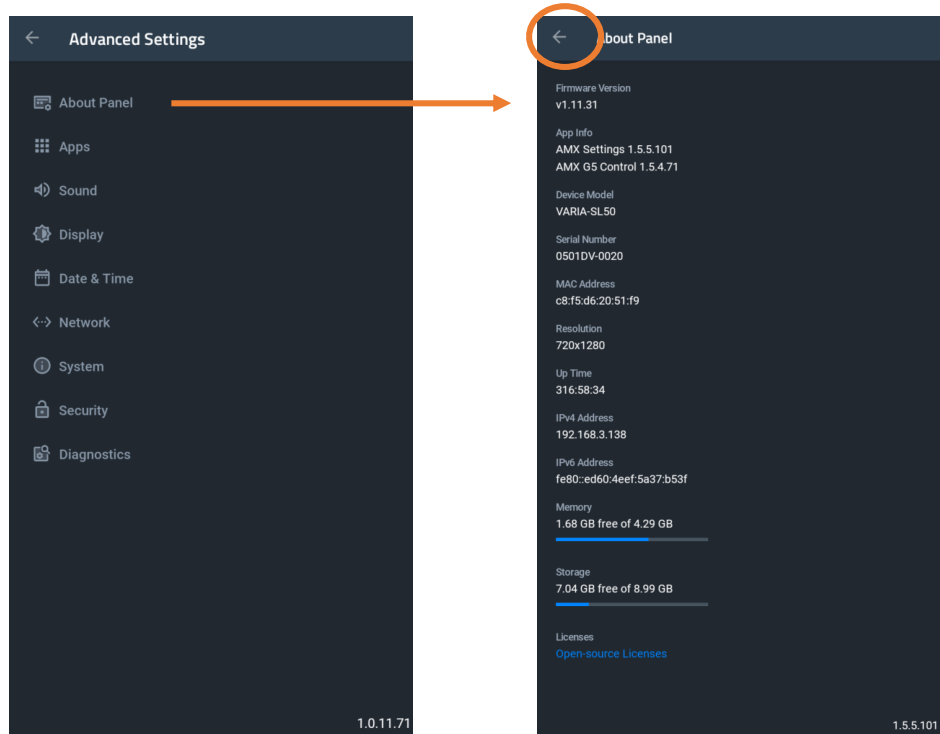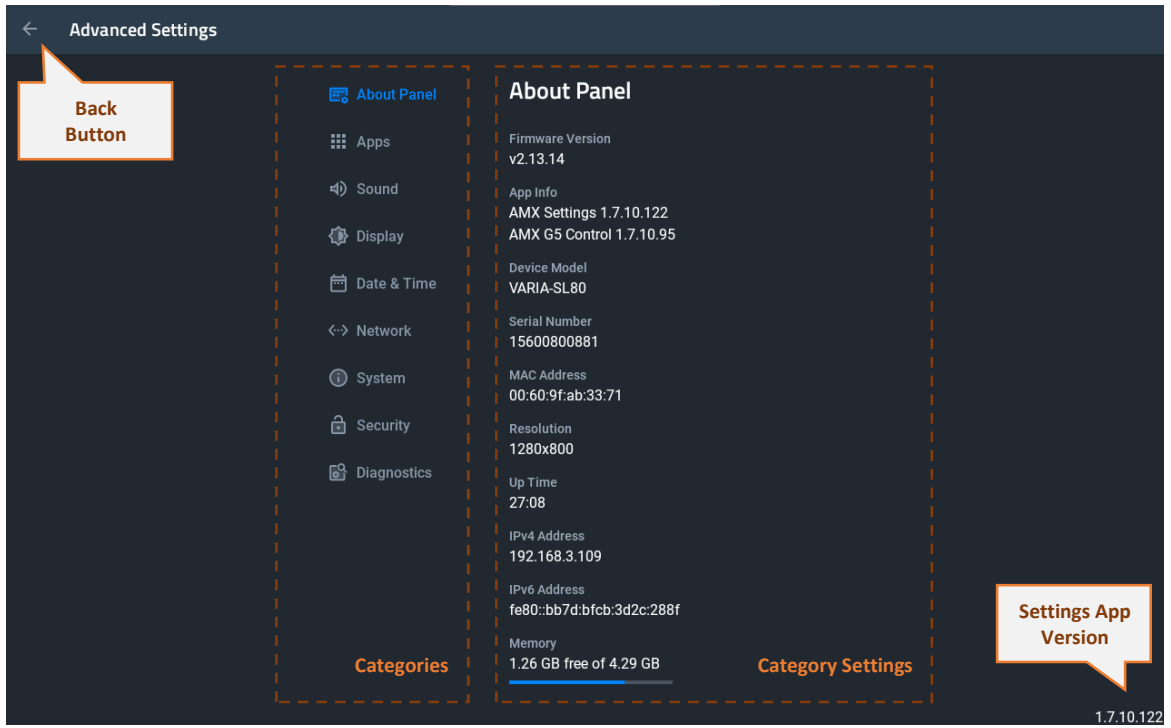

Please note on the 5.5" panel, the Categories Menu is shown on the full screen and then flips to each Categories' settings page. Press the ← arrow on the top-left of the page to go back to the Categories Menu.


# AMX Control

## Overview

The Overview page presents a summary of the options available in an AMX NetLinX control system.

## Controller

The NetLinX page controls the method of connecting to a NetLinX Controller.

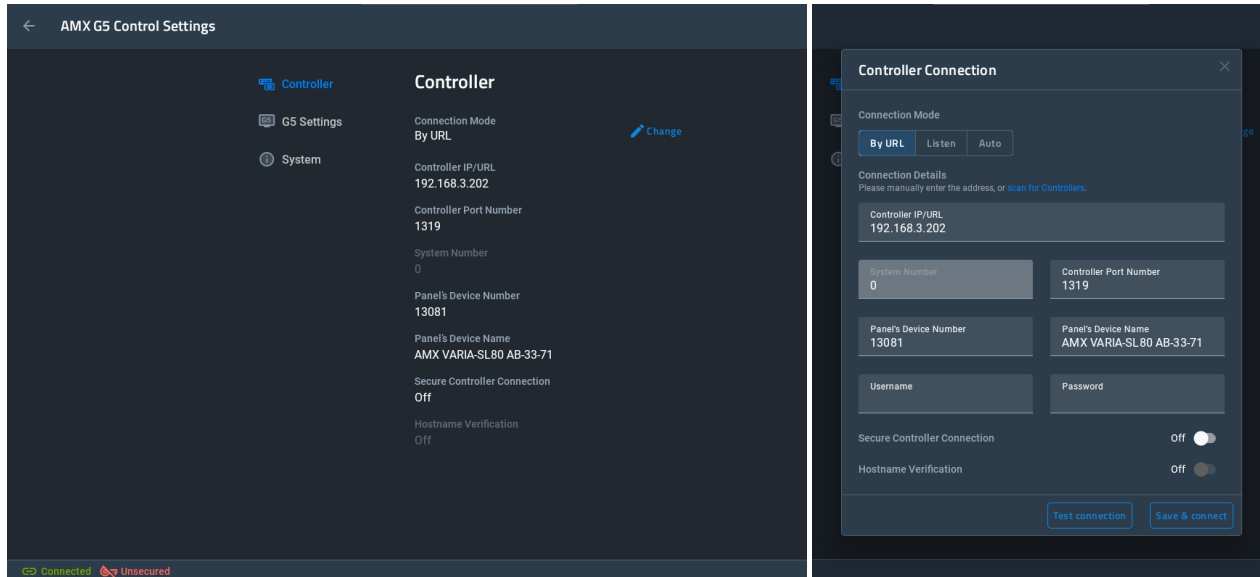


Controller	
	Cycles between the connection modes: URL, Listen, and Auto.
Mode	<b>URL</b> - Enter the IP/URL, Controller Port Number, and username/password (if used) on the Controller. The System Number field is read-only - the panel obtains this information from the Controller.
	<b>Listen</b> - Add the panel address into the URL List in NetLinX Studio and set the connection mode to Listen. This mode allows the panel to “listen” for the Controller’s communication signals. The System Number and Controller IP/URL fields are read-only.
	<b>Auto</b> - Enter the System Number and a username/password (if applicable). Use this mode when both the panel and the NetLinX Controller are on the same Subnet. The Controller IP/URL field is read-only.
Scan for Controllers	Press to scan for NetLinX controllers on the network, via the Controller Connection window. See Scanning for Controllers on the next page for details.
Controller IP/URL	Sets the Controller IP or URL of the NetLinX Controller. Note: Available in URL Only - disabled when Listen or Auto is selected.
Controller/Port Number	Allows entry of the port number used with the NetLinX Controller. Default = 1319.
System Number	Allows entry of a system number. Default value is 0 (zero). Note: Available in Auto Mode Only - disabled when URL or Listen is selected.
Device Number	Displays the panel’s device number and allows entry of a new one.
Device Name	Displays the panel’s device name and allows entry of a new one.

Controller	
Username	If the target Controller has been previously secured, enter the alpha-numeric string (into each field) assigned to a preconfigured user profile on the Controller. This profile should have the predefined level of access/configuration rights.
Password	If the target Controller has been previously secured, enter the alpha-numeric string (into each field) assigned to a preconfigured user profile on the Controller. This profile should have the predefined level of access/configuration rights.
Scan for Controller Connection	Press to enable and configure a connection a secured NetLinx Controller, via options in the NetLinx window. Note: The secure connection is a TLS connection to a NetLinx Controller on port 1320.
Hostname Verification	Press to enable hostname verification of the NetLinx Controller via the Controller's device certificate. Note: This option is only available if the Secure Controller Connection option is enabled.
Connection Status	Displays the panel's connection status to the Controller

## Scanning for Controllers

Use the Scan For Controllers feature to quickly and easily identify all of the available NetLinx Controllers on the network. The site survey on this page passively listens to network traffic and presents all the compatible Controllers for easy selection. Selecting the desired Controller automatically updates the NetLinx Controller section and establishes a connection.

- In the NetLinx page, press **Scan For Controllers** to begin listening for NetLinx controllers and open the Controller Connection window (FIG. 64): Select the NetLinx Controller for this panel.

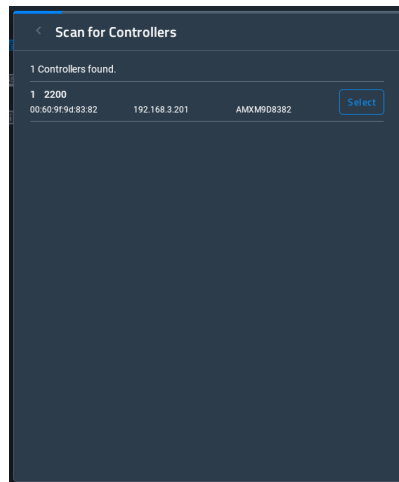


- The NetLinx page will automatically display the connection information on the selected Controller

## Changing the Controller Connection Mode

To select the Controller Connection mode (URL, Listen, or Auto):

- In the NetLinx page, press **Mode** to open NetLinx Options window:

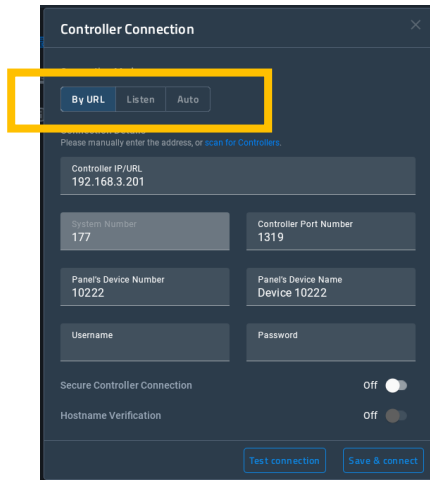

2. Select the desired option from the **Mode** menu - URL (default setting), Listen or Auto.
3. When finished, press **OK** to return to the NetLinx page.

### Changing the Controller IP/URL

To change the IP address or URL for the chosen Controller:

1. In the NetLinx page, press **Controller IP/URL** to open the NetLinx Options window and on-screen keyboard.
2. Enter the IP address or the URL.
3. Press the double-down arrow key at the bottom right of the on-screen keyboard to close the keyboard.
4. The new IP address/URL is now displayed in the Controller IP/URL field.
5. Press **OK** to save the changes and return to the NetLinx page.:

### Changing the Controller Port Number

To change the Controller Port Number from its default:

1. In the NetLinx page, press **Controller Port Number** to open the NetLinx Options window and on-screen keyboard.
2. Enter the new Controller Port Number.
3. Press the double-down arrow key at the bottom right of the on-screen keyboard to close the keyboard.
4. The new Port Number is now displayed in the Controller Port Number field.
5. Press **OK** to save the changes and return to the NetLinx page.

### Changing the Controller Username

1. In the NetLinx page, press the Username field to open the NetLinx Options window and on-screen keyboard.
2. Enter the new username.
3. Press the double-down arrow key at the bottom right of the on-screen keyboard to close the keyboard.
4. The new Username is now displayed in the Username field.
5. Press **OK** to save the changes and return to the NetLinx page

### Changing the Controller Password

1. In the NetLinx page, press **Password** to open the NetLinx Options window and on-screen keyboard.
2. Enter the new password.
3. Press the double-down arrow key at the bottom right of the on-screen keyboard to close the keyboard.
4. The new Password is now displayed in the Password field.
5. Press **OK** to close the NetLinx window and return to the NetLinx


### Changing the Device Number and Device Name

1. In the NetLinx page, press the Device Number field to open the NetLinx Options window and on-screen keypad.
2. Enter a new Device Number.
3. Press **Next**, to select Device Name in the NetLinx page and open the n-screen keyboard.
4. Enter a new Device Name.
5. Press **Done** to close the keypad and keyboard.

6. The new Device Number and Device Name are now displayed in the Device Number and Device Name fields.
7. Press **OK** to save changes and close the NetLinx window and return to the NetLinx page.


### Enabling a Secure Controller Connection

1. In the NetLinx page, press the Secure Controller Connection field to open the NetLinx Options window.
2. Scroll to the bottom of the options list and toggle the Secure Controller Connection option ON:

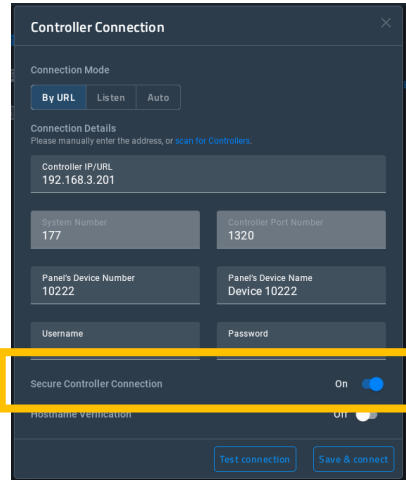

### Enabling Hostname Verification


1. In the NetLinx page, press the Hostname Verification field to open the NetLinx Options window.
2. Scroll to the bottom of the options list and toggle the Hostname Verification option **ON** (FIG. 67):

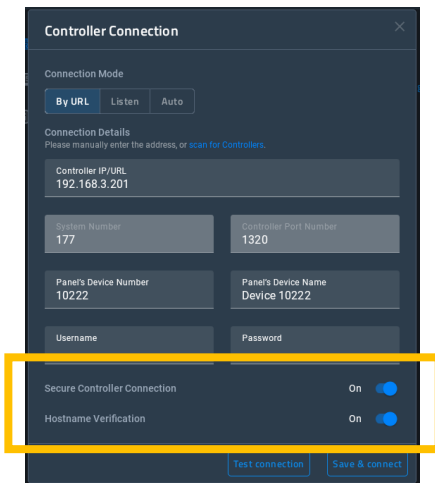

Note that this option is available only if the Secure Controller Connection option is ON.


## G5 Settings

The G5 Settings contains specific settings related to the G5 experience and to the TP5 project file loaded.

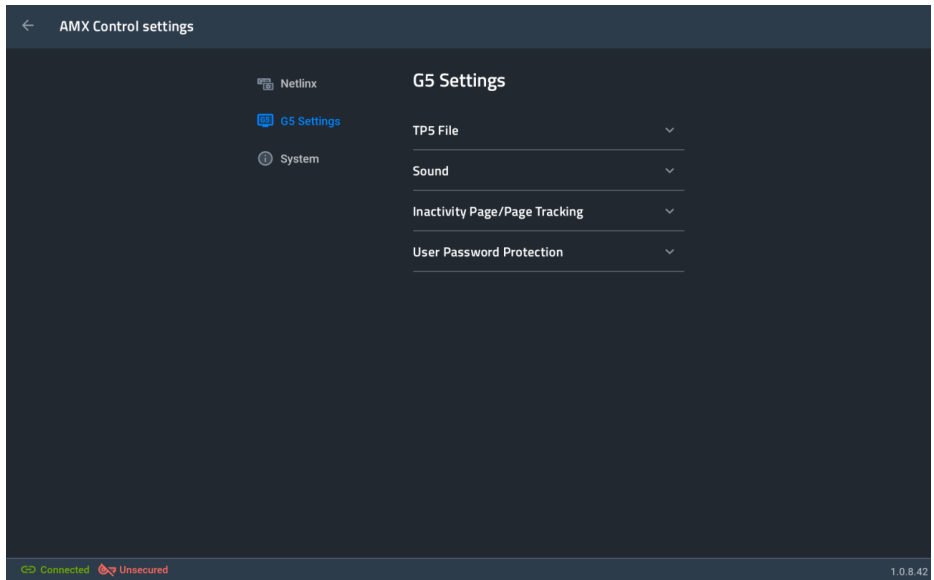

## G5 Settings Options

This tab contains information related to your TP5 project file, and also gives the option to change the TP5 file loaded.

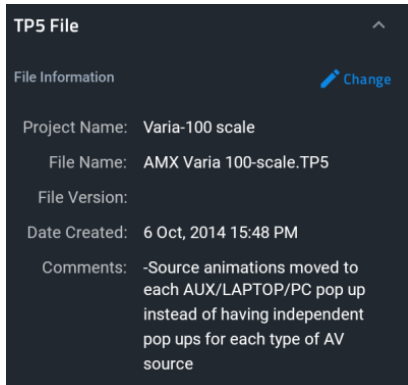


TP5 File

To change the TP5 project file, press [Change].



There are options to load from USB, URL, demo file, or remove the current TP5 project file

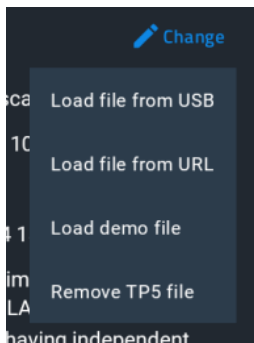


## G5 Settings Options

**Note:** USB drives should be formatted to FAT32 file system.

TP5 files can also be transferred via TPDesign5, Netlinx Studio, or Manager desktop software.

**Note:** A TP5 file created for the wrong panel type will not load on a Varuia touch panel. As a result the default demo pages will be shown. Always make sure you are sending a TP5 file made for the correct panel type to the correct panel device.

This tab contains sound settings for your touch panel. Dedicated sounds for *Button Hit* & *Button Miss* can be applied here.

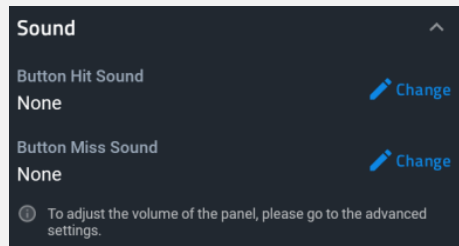


To change either of these sounds, or to select no sound, press its respective [Change] button.




Sound

Scroll through and select a new sound. The options for *None* is at the very top.

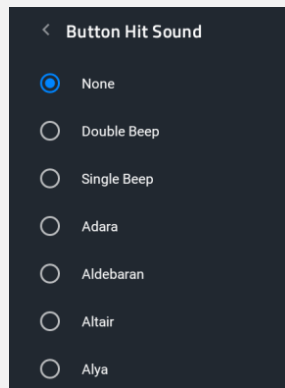

This contains options to set up an Inactivity page Flip Time, which is a page flip made inside a TP5 project file after a specified period of inactivity on the panel (ie. no touches), and to enable or disable Page Tracking.

Inactivity Page /  
Page Tracking

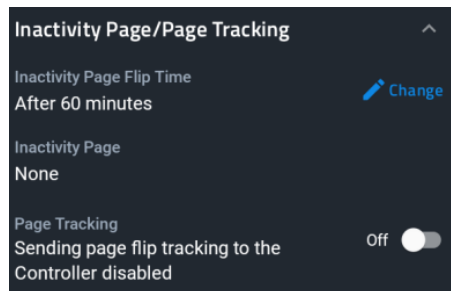


To set up, press [Change].



## G5 Settings Options


Select On or Off. If On, select the desired amount of time.

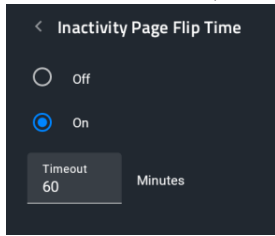

**Inactivity Page** is read-only, and dictated by the TP5 project file. See TPDesign5 for more information.

**Page Tracking**, if enabled, will send page flip tracking messages to the Netlinx controller.

This provides the option of assigning passwords to the secured Settings pages. Users have the the ability to assign alphanumeric values to particular password sets.

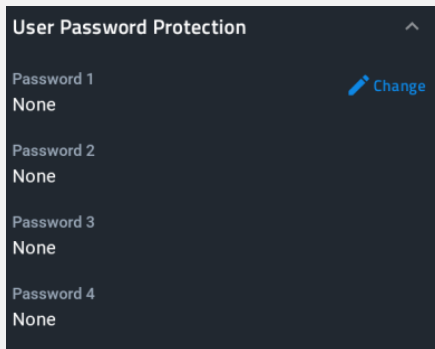


To assign, change, or delete a password, press [Change].



You may enter up to four (4) passwords.

User Password Protection

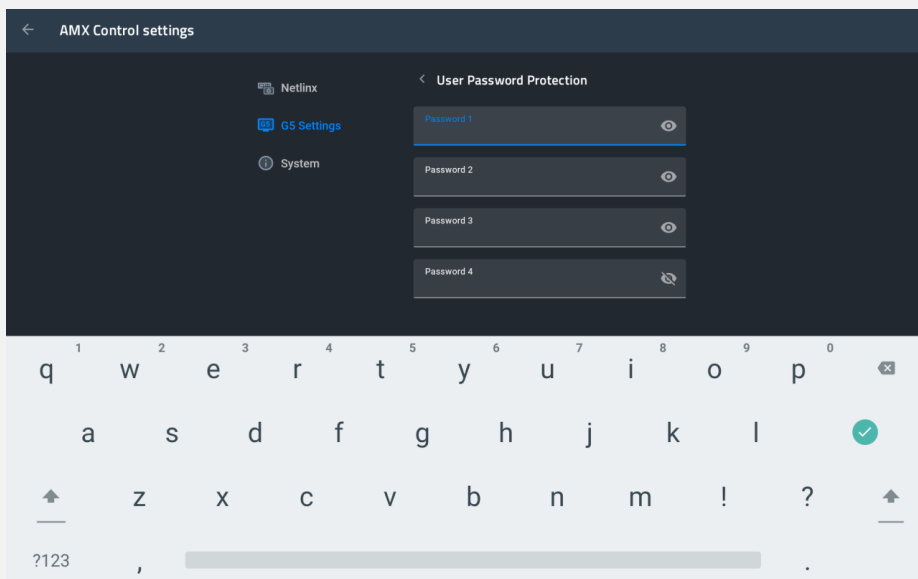


## G5 Settings Options

**Note:** This function does not overwrite the default settings password (1988).


## System

The System settings contain options for the panel configuration, date & time, and date & time.

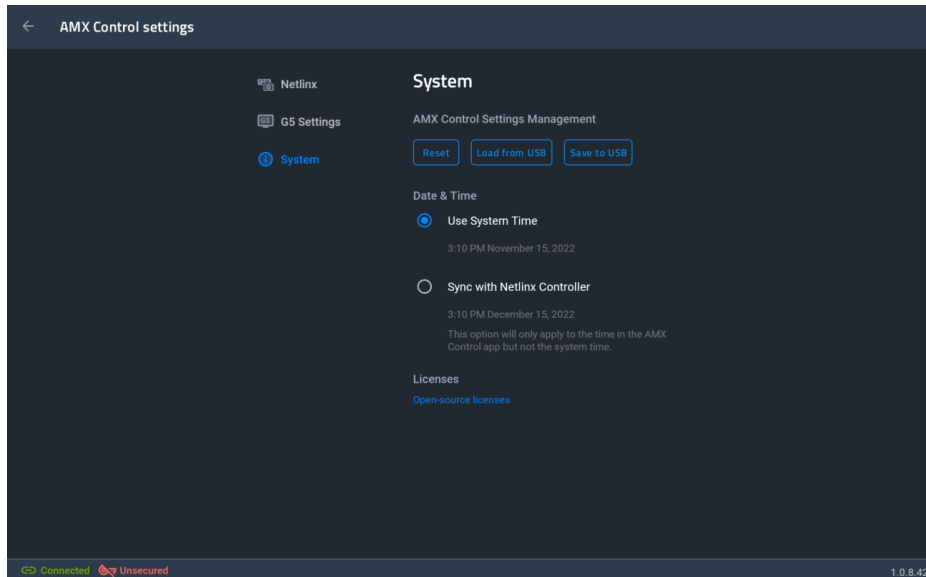

## System

This allows management of the settings in the AMX G5 Control persona:



AMX Control  
Settings Management

**Reset** will revert all AMX Control settings to their default values.


**Load from USB** will allow a panel config file to be loaded via connected storage device.

**Save to USB** saves the current panel configuration to USB.

**Note:** USB drives should be formatted to FAT32 file system.

Allows syncing with either the touch panel system date & time or the controller date & time.

Date & Time

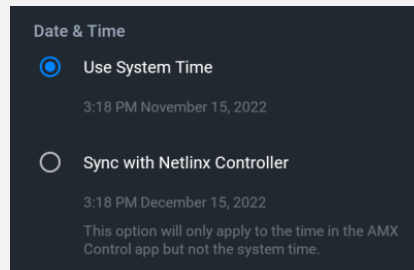

**Note:** this will only apply to the AMX Control persona.

## System


Licenses

This displays all the open sources licenses being utilized, if applicable.

# AMX Book


## Overview

The Overview page presents a summary of the steps that entail the Scheduling Panel Setup Wizard. Press [Next] to start.

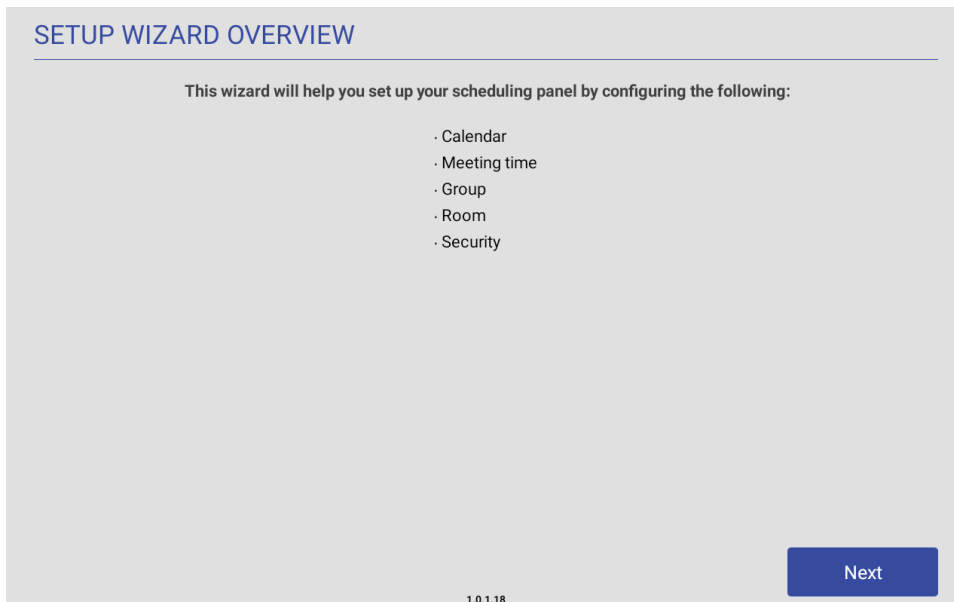

## Calendar

Use the options in the CALENDAR page to configure the scheduling panel's connection to the scheduling system.



## Microsoft Exchange

SETUP WIZARD - CALENDAR

Microsoft Exchange  Office 365  Google Calendar

Server URL

Username

Password

Calendar Email ID

Certificate Validation

Poll Time  seconds

Next

## Microsoft Exchange Calendar Configuration Settings

Server URL	Enter the full URL for the scheduling server. Example syntax: https://<EXCHANGE_SERVER_HOSTNAME>/EWS/Exchange.asmx
Username	Enter the Username (including domain) required to login to the scheduling server (as required). Example: "JaneDoe@acme.onmicrosoft.com".
Password	Enter the Password required to login to the scheduling server (as required).
Calendar Email ID	Enter the Email ID (including domain) used by the scheduling service. Example: "ConfRoom1@acme.onmicrosoft.com"
Certificate Validation	<ul style="list-style-type: none"> <li>• Select <b>Strict</b> to include hostname validation and apply certain certificate requirements - see <i>SSL Validation Schemes</i> (below).</li> <li>• Select <b>None</b> to disable validation schemes - see <i>SSL Validation Schemes</i> (below).</li> <li>• Select <b>Manage Certificates</b> to open the <i>Security (Advanced Settings)</i> page, which provides access to <i>Credential Storage</i> options, as described in the <i>Installing Certificates</i> section.</li> </ul>
Poll Time	•

## Office 365

## Office 365 Calendar Configuration Settings

	Enter the required information regarding your O365 Tenant.
Tenant ID	Please refer to your Azure Portal <a href="https://portal.azure.com">https://portal.azure.com</a> for more information and see Appendix F for steps to find this ID.
Client ID	Enter the required information regarding your O365 Client. Please refer to your Azure Portal <a href="https://portal.azure.com">https://portal.azure.com</a> for more information and see Appendix F for steps to find this ID.
Client Secret	Enter the required information regarding your O365 Client Secret. Please refer to your Azure Portal <a href="https://portal.azure.com">https://portal.azure.com</a> for more information and see Appendix F for steps to find this ID.
Certificate	You may select Client Certificate instead of using a Client Secret. Upload the required certificate here.


Please refer to your Azure Portal <https://portal.azure.com> for more information and see Appendix F for steps to find this ID.

Verify


Once entered, the wizard will attempt a connection to your O365 server. You will be prompted to log in with your email & password as normal when accessing Microsoft services. Depending on your configurations and the calendars to which you have access, you may be prompted to select a calendar.

**NOTE:** Only Modern Authentication is supported. Support for Basic Authentication has ended and will not be supported.

Microsoft login & calendar selection:

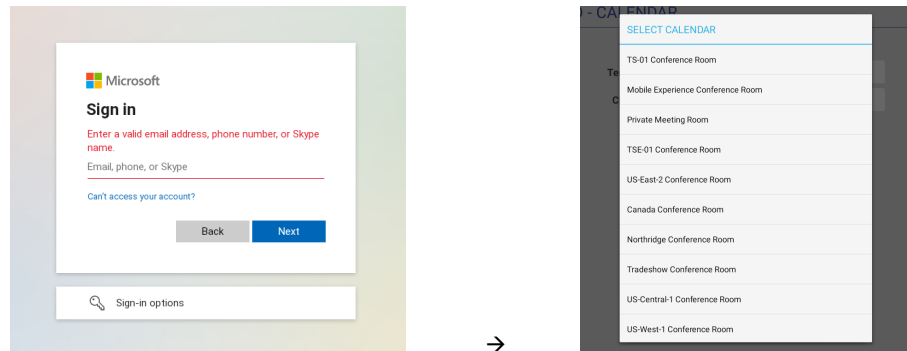


A correctly setup mailbox will look like this:

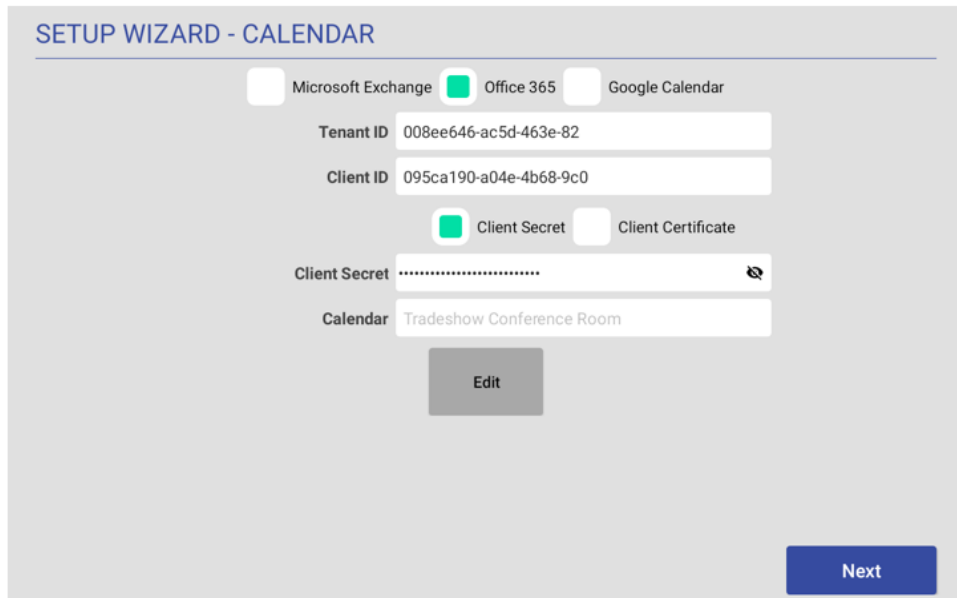

## Meeting Time

Use the options in the MEETING TIME page to customize default meeting & timing options.

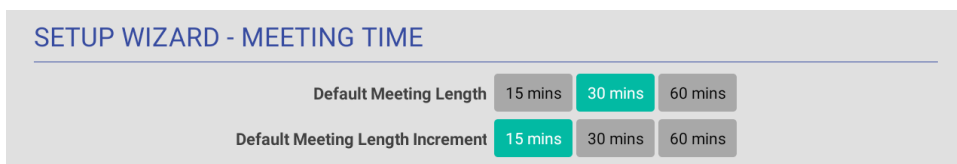

Setup Wizard - LOCALIZATION page options

This setting specifies how many times each hour this panel can indicate separate meetings. The default setting is

*15 minutes*, in which case this panel can schedule up to 4 meetings in an hour.

**Default Meeting Length** To change the default meeting increment setting, press either the **30 mins** or **60 mins** button.

- With *30 mins* selected, this panel can schedule a meeting every 30 minutes.

With *60 mins* selected, this panel can schedule a meeting every 60 minutes.

**Default Meeting Increment** Indicates the current default meeting length setting for this panel (default = *30 minutes*). To change the default meeting length setting, press either the **15 mins** or **60 mins** button.

## Group

AMX Book touch panels can be configured either as a Primary or Secondary, as it relates to a Scheduling Panel Group. Secondary panels communicate with the Primary panel, which enables panels to browse the schedules of panels in the same Group. This provides users with the ability to schedule a meeting in any room included in the Scheduling Panel Group, from any panel in the Group. For example, when a room is occupied, users can browse other rooms and schedule a meeting in any of the rooms in the Group.

Use the options in the GROUP page to configure this panel as either the Primary or Secondary of a Scheduling Panel Group. Note that there can be only one Primary panel for a Group. If there is only one stand-alone AMX Book panel, then it must be configured as a Primary.

**NOTE:** Up to 49 AMX Book panels can be configured as Members of a Primary panel's Group (for a total of 50 panels including the Primary). However, note that when configuring Scheduling Groups, smaller Room Groups typically have quicker responsiveness for "Browse Rooms" requests.

**NOTE:** Using Screen Timeout is not recommended when using Groups. Screen Timeout will cause panels in groups (both primary & secondary) to appear offline.

The screenshot shows the 'SETUP WIZARD - GROUP' interface. At the top, there are two radio buttons: 'Primary' (selected) and 'Secondary'. Below this is the 'Primary Panel Configuration' section with three input fields: 'IP/Hostname' (containing '192.168.3.109'), 'Username', and 'Password'. There is also a 'Refresh Secondary panels' button and a 'Refresh' button.

The screenshot shows the 'SETUP WIZARD - GROUP' interface. At the top, there are two radio buttons: 'Primary' and 'Secondary' (selected). Below this is the 'Secondary Panel Configuration' section with three input fields: 'IP/Hostname', 'Username', and 'Password'.

### Setup Wizard - GROUP page options

**Primary/Secondary** Specify to use this panel either as a Primary panel or as a Secondary panel, as part of a Scheduling Panel Group (default = *Primary*).

**Primary Configuration** With *Primary* selected, the following Primary Configuration options are presented:

**IP/Hostname** This read-only field displays the Primary IP/Hostname currently assigned to this panel.

**Username** Enter a Username to associate with this panel (required for Primary panels).

**Password** Enter a Password to associate with this panel (required for Primary panels).

**Refresh Secondary Panels** Press to refresh all members of the Group with which this Primary panel is associated.

Secondary Configuration	
With <i>Secondary</i> selected, the following Secondary Configuration options are presented:	
IP/Hostname	Enter the Primary IP/Hostname of the Primary panel for the Group to which this Secondary panel belongs.
Username	Enter the Username associated with the Primary panel for this panel's Group.
Password	Enter the Passwords associated with the Primary panel for this panel's Group.

## Room

Use the options in the ROOM pages to set room-level options for this panel

### Setup Wizard - ROOM page options

Room Name	Enter the room name as it will appear on this panel.
Default Meeting Subject	Enter a default meeting subject to be displayed on this panel. Note that this default subject can be over-written in the Room page (see the <i>Editing Meeting Details</i> section).
Support Contact Name	Enter the name of the support personnel as it will appear on this panel.
Support Contact Phone	Enter the phone number of the support personnel as it will appear on this panel.
Room Status LED	Press to toggle the Room Status LEDs on the panel, which light green when the Room is available, or red when the Room is occupied (default = <i>enabled</i> ).
Logo Image	Indicates the current logo image, if applicable. Press <b>Add</b> to add a custom logo image. <ul style="list-style-type: none"> <li>Supported Formats: JPG, PNG</li> <li>The custom logo image window is 375 x 165. AMX Book Panels will take the downloaded image and scale it down to fit in the window. However, to maximize the available space, the downloaded logo should have a similar aspect ratio (~2.2).</li> </ul>



## Security

Use the options in the SECURITY pages to set security & privacy options for this panel.

SETUP WIZARD - SECURITY

Require Meeting PIN Code

Read Only Mode

Privacy Mode

Private Meeting Subject

Back Finish

1.0.1.18

### Setup Wizard - SECURITY page options

Require Meeting PIN Code	When enabled, the PIN code will be required to reserve a meeting, edit Meeting Time/Details and Delete Meeting. Press to enable this option (default = <i>disabled</i> ).
Meeting PIN Code	Enter the 4-digit PIN code that will be required to reserve, edit or delete a meeting on this panel, only if the <i>Require Meeting PIN Code</i> option (above) is enabled.
Read Only Mode	Press to toggle this option (default = <i>disabled</i> ). When enabled, all fields on the Room page are displayed, but are read-only. In this case, users will be able to see all meetings and reservation details, but will not be allowed to reserve, edit or delete meetings on this panel.
Privacy Mode	Press to toggle this option (default = <i>disabled</i> ). When in Privacy Mode, information considered to be private is hidden and immutable on this panel. See the <i>Privacy Mode</i> section for details. <i>Note: If a meeting is booked outside of an AMX Book panel (i.e. directly via the scheduling system software), then the subject line of the meeting will be replaced with the Private Meeting Subject text (default = "Private Meeting"). The default Private Meeting Subject text can be edited if desired.</i>
Private Meeting Subject	Press to enter the text that will be used as the meeting subject displayed for private meetings. The text entered here provides the meeting subject for all types of private meetings: <ul style="list-style-type: none"><li>• It will be used when <i>Privacy Mode</i> is enabled on the AMX Book panel.</li><li>• Will be used when a meeting is marked as <i>Private</i> by the calendar server (Exchange/Office 365/Google).</li></ul>
Finish	Press to exit the Setup Wizard (see <i>Exiting the Scheduling Panel Setup Wizard</i> ).

## Google Calendar

**CALENDAR**

Microsoft Exchange
  Office 365
  Google Calendar

Web Authentication
  Service Account

**Service Account ID**

**Service Account Certificate**

**Impersonation Account ID**

**Verify**

1.5.4.67


**Google Calendar Configuration Settings**

Web Authentication	Log into your Google Account via web browser and assign a calendar resource.
Service Account	<p>Use login credentials to assign a calendar resource.</p> <p>A Service Account is an account that belongs to an application instead of to an individual user. AMX Book will call Google APIs on behalf of the service account.</p> <p>Please also see Appendix G for more information.</p>
Service Account ID	Enter your Service Account ID.
Service Account Certificate	Enter Service Account Certificate
Impersonation Account ID	Enter your Service Account Impersonation ID.

# Web Kiosk


## Overview

These are settings available for the Web Kiosk persona.

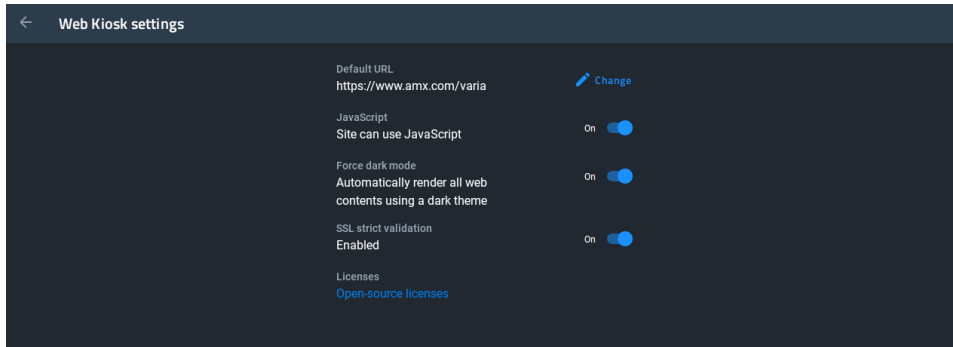


### Web Kiosk Settings

The URL that the Kiosk will access. To make adjustments, press [Change].



Use the dropdown to select **https://** (preferred) or **http://**. Be careful not to repeat this protocol in the URL field.

Default URL

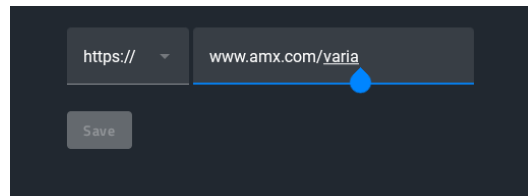

To save your changes, Press [Save]. To exit without saving, press the back arrow on the top-left of the screen.

JavaScript	Allow the kiosk to use JavaScript
Force Dark Mode	Automatically render all web content using a dark theme (website-dependent).
SSL Strict Validation	Enable or disable strict SSL certificate validation
Licenses	This displays all the open sources licenses being utilized, if applicable.


# Advanced Settings

## Overview

Advanced Settings allow configuration & customization of the touch panel. Settings can be accessed by pressing the pin-hole button on the top of each touch panel. The recommended tool is a SIM card ejector tool, or a paperclip can be used.

**Do not confuse the pin-hole button with the touch panel's microphone holes.**

## About Panel

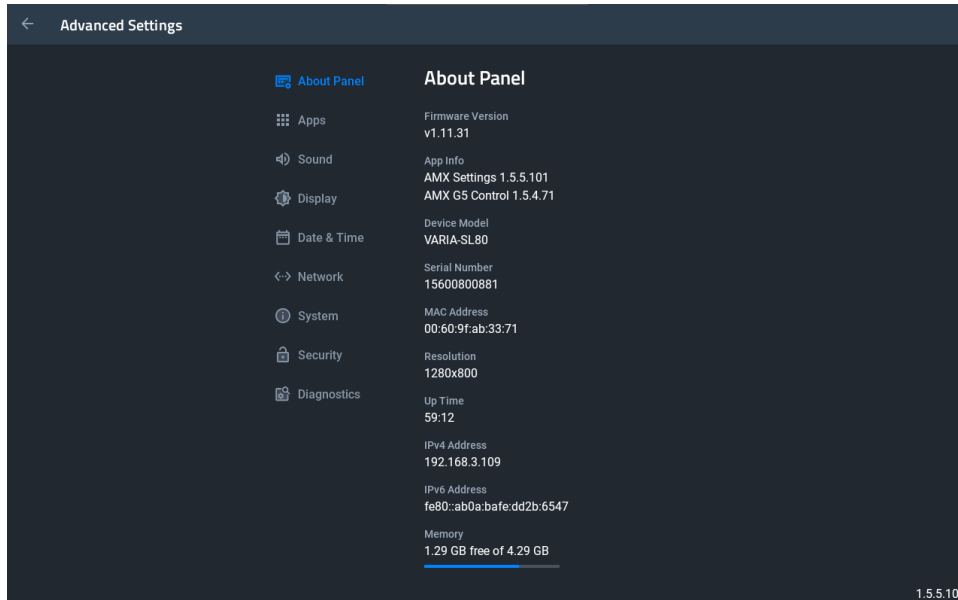


### About Panel

Firmware Version	Displays the panel's FW version
App Info	Displays the app versions for Settings, and for the currently selected persona
Device Model	Displays the panel's model number.
Serial Number	Displays the specific serial number value assigned to the panel.
MAC Address	Displays the panel MAC address
Resolution	Displays the panel's screen width & height in pixels.
Up Time	Displays the time elapsed since the panel was last started.
IPv4 Address	Displays the panel's IP address (v4).
IPv6 Address	Displays the panel's IP address (v6).
Memory	Displays the panel's used & total memory (RAM).
Storage	Displays the panel's used & total storage (eMMC)
Licenses	This displays all the open sources licenses being utilized.



# Apps

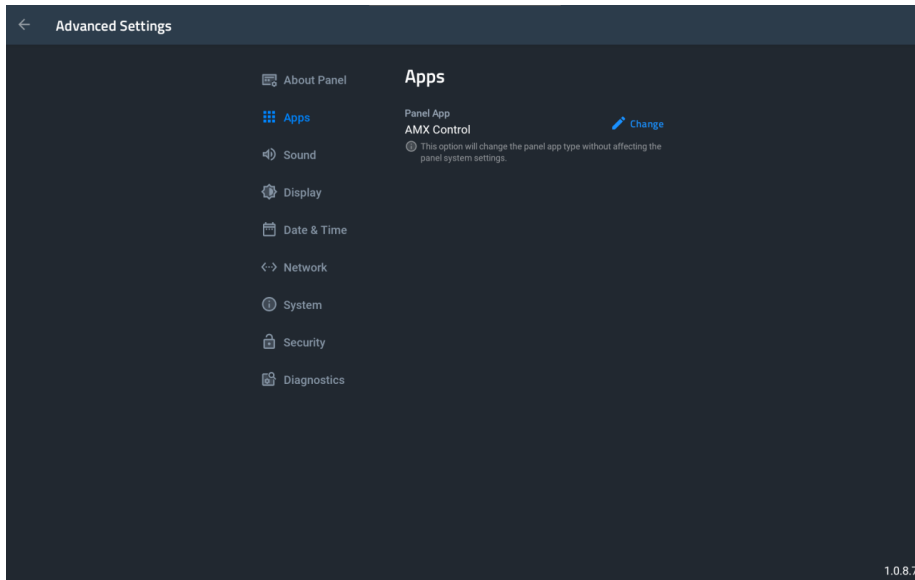


## Apps

Displays the panel's currently selected Persona, and gives the option to change to a new persona.



By pressing [Change], you may choose a new panel persona. Select the desired Persona and press [Continue].


### Panel App

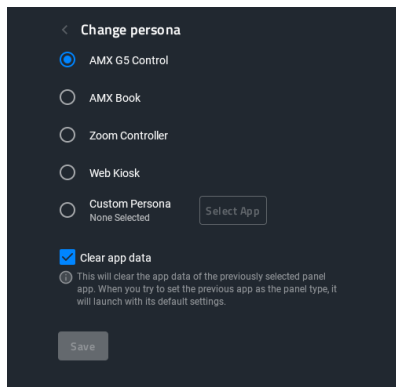

If you wish to exit without selecting a new persona, press [Cancel] or the [x] button.

**Clear App Data** will clear or preserve (checked or unchecked, respectively) the app data of the **current** persona, before switching to the new persona. This is helpful if you ever wish to return to the previous persona.

# Sound

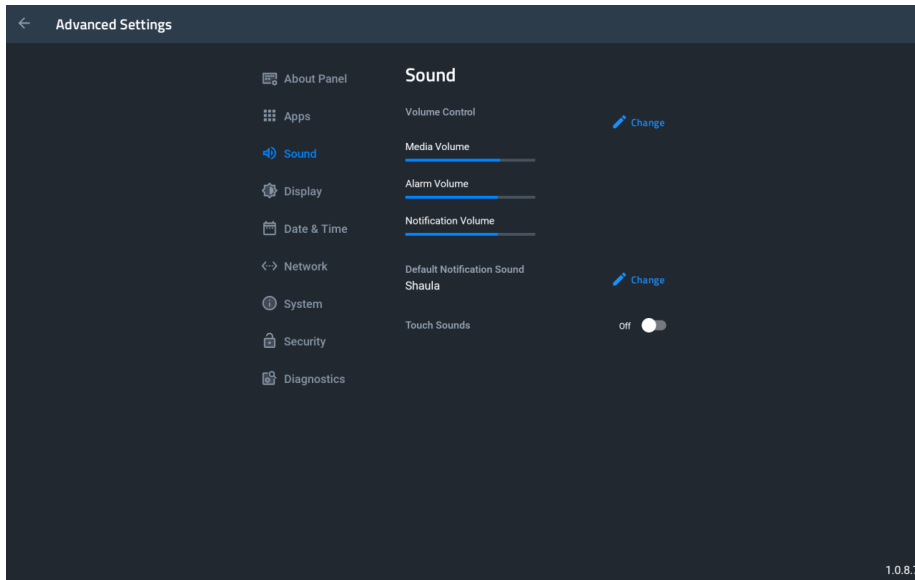


## Sound

Displays the current volume level for media, alarm, & notifications. If adjustment is needed, press the [Change] button.



Press or drag your finger across the slider and let go at the desired volume level. A sound will play at that new volume level to confirm loudness.


## Volume Control

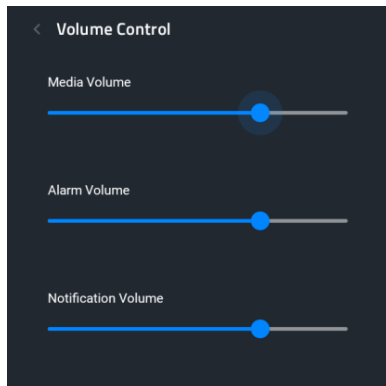

Press the Back arrow [←] to return.

## Default Notification Sound


Changes the default notification sound on the panel.



To select a notification sound, press [Change].



## Sound

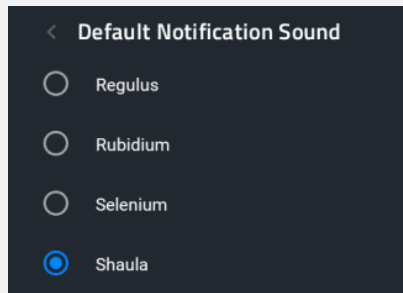


Press the Back arrow [<] to return.

**Note:** this is not the *Button Hit* or *Button Miss* sound for the AMX G5 Control persona. Button Hit & Button Miss can be found in G5 Settings.

Touch Sounds      Displays the specific serial number value assigned to the panel.

# Display

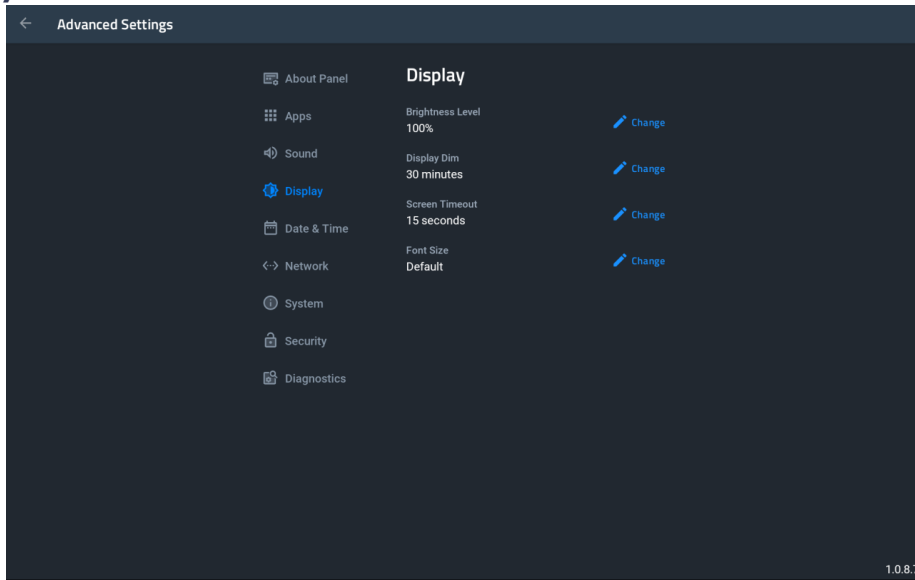

## Display

Contains settings for panel brightness & Auto Display Brightness. If adjustment is needed, press the respective [Change] button.



Press or drag your finger across the slider and let go at the desired brightness level. The panel will react to your changes when you lift your finger.

Brightness



When **Automatically Adjust Brightness** is enabled, the panel will automatically adjust its brightness relative to the light levels in the environment.

Press the Back arrow [<] to return.

Display Dim




Display dim will lower the brightness level after a period of inactivity.

To adjust the time interval before dimming, press [Change].

Select a new time, or select Never to keep the screen at full brightness.

## Display

Screen Timeout (below) starts after Display Dim. If Never is selected here, the panel will also never timeout (ie. display turn off).

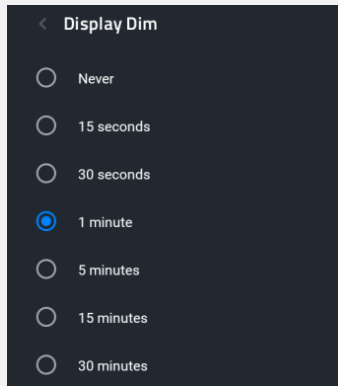

Press the Back arrow [<] to return.

Screen timeout will turn off the display after a period of inactivity. This time is **in addition to** the Display Dim value selected.

To adjust the time interval before timeout, press [Change].




Select a new time, or select Never to keep the screen on at all times.

Wake On Approach will utilize the proximity sensor to wake the panel up when someone approaches it.

Disable LEDs will turn the side LEDs off with Screen Timeout.

## Screen Timeout

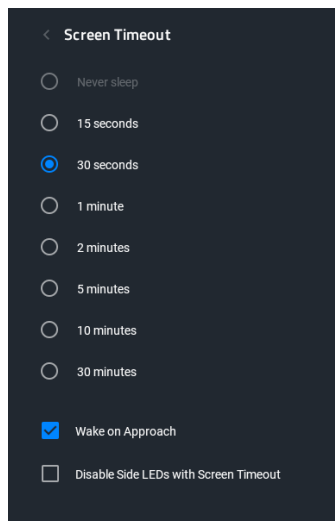

Press the Back arrow [<] to return.

## Display

**Note:** Some apps may override these settings. For example, the Zoom Rooms Controller (ZRC) app ignores Screen Timeout values.


**Note:** If the panel times out while in Settings, user may be required to re-enter the protected password. A notification will pop up on the panel.

The font size can be increased or decreased to your desired level. To adjust, press [Change].




Select a new font size from the choices.

Font Size

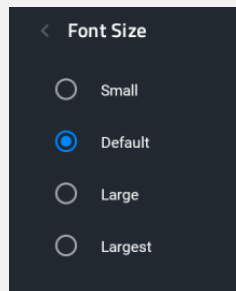

Press the Back arrow [<] to return.

## Date & Time

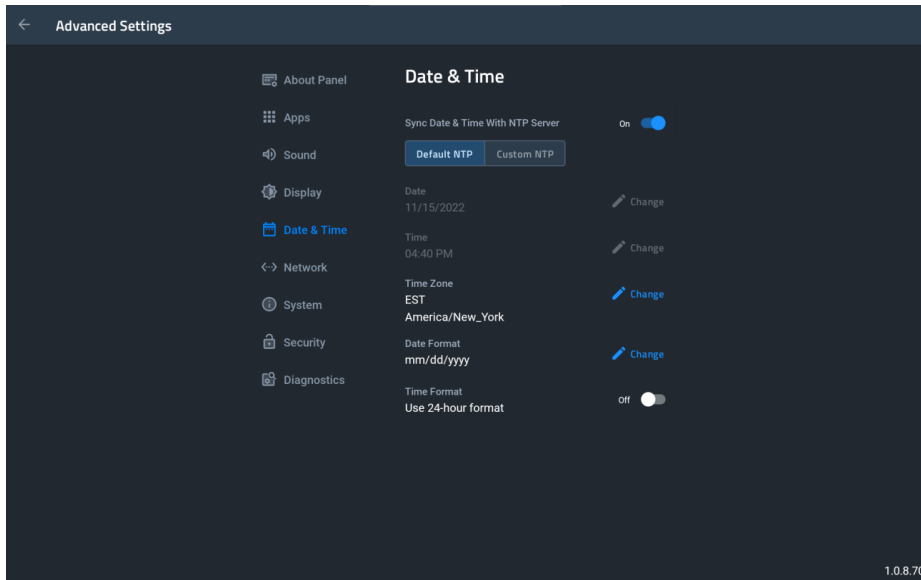

### Date & Time

When enabled, the touch panel's date & time will be synced to either the default NTP (Network Time Protocol) server, or a custom NTP server (eg. *time.google.com*)


To enable, turn the radio button ON.



For Default NTP, there are no additional settings to enter. The panel will periodically check the NTP server for date & time. A reboot may be required if you want immediate synchronization. If your panel's date & time are drastically different than actual, it may take up to 24 hours or more for the correct time to be synchronized.


Sync  
Date & Time  
with NTP  
Server

For Custom NTP, select this option and then press [add server].

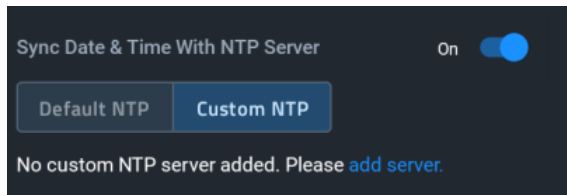


Enter the custom NTP server URL and press [Sync].

## Date & Time

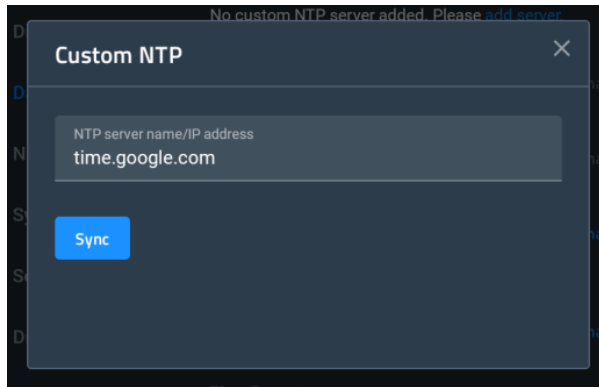

The panel will attempt to connect and list the last successful sync.

If you need to change the NTP, press [Change NTP server].

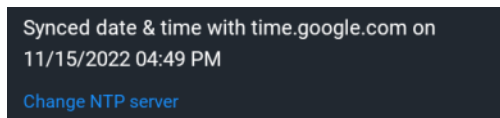

To disable NTP and set the date & time manually, turn the radio button OFF.


When using NTP, the Date field is read-only.

With NTP disabled, adjust the date by pressing the [Change] button.



Use the calendar to select the date, either by using the calendar picker or by selecting the pencil icon to enter the numeric value.

Date

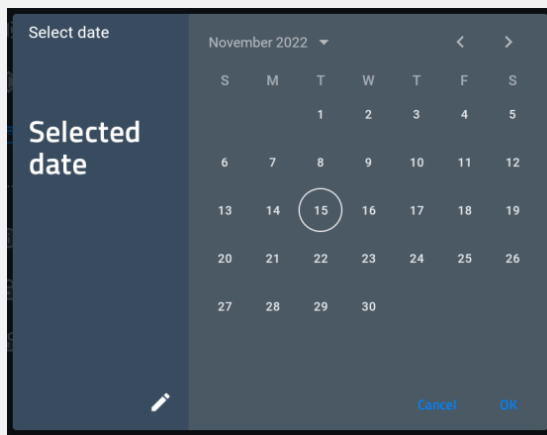


To save your changes, press [OK]. To close without saving changes, press [Cancel].

Time


When using NTP, the Time field is read-only.

With NTP disabled, adjust the date by pressing the [Change] button.


## Date & Time



Press the Hours and Minutes fields to numerically enter the time, and appropriately select AM or PM.

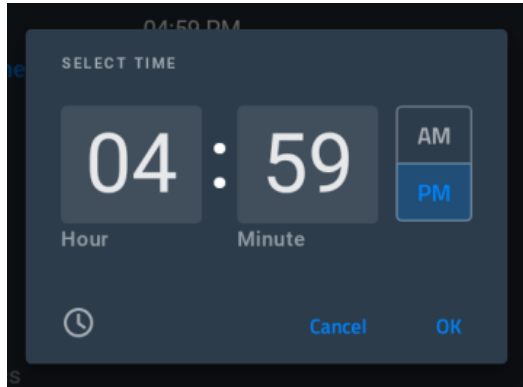

Or, press the clock icon on the lower-left to switch to the clock picker, and drag the clock hands to the correct hours & minutes, respectively. Then, appropriately select AM or PM.

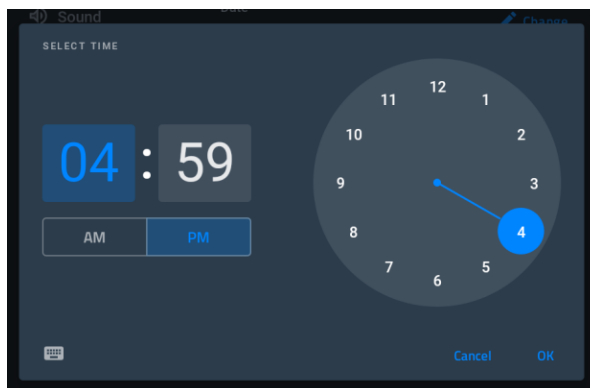

To save your changes, press [OK]. To close without saving changes, press [Cancel].

Whether using NTP or setting Date & Time manually, the Time Zone requires a selection.


To adjust, press [Change].

Time Zone



Scroll through the list and select your time zone.

## Date & Time

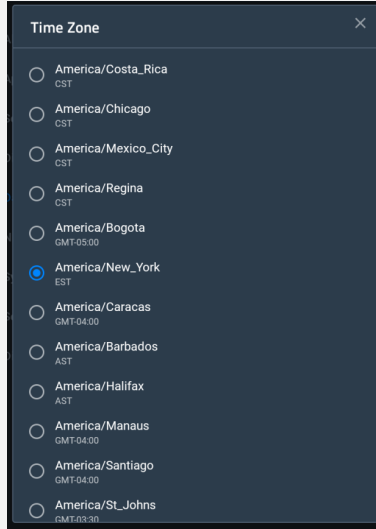

Press the [X] to exit.


Format the date to preferred arrangement.

To make adjustments, press [Change].



Select the preferred date format.

Date Format

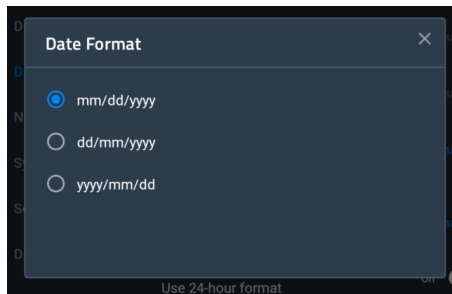


Press the [X] to exit.

Time Format

The time can be shown in either 12-hour or 24-hour format.

Turn the radio button ON to enable 24-hour time format, or OFF to enable 12-hour time format.


# Network

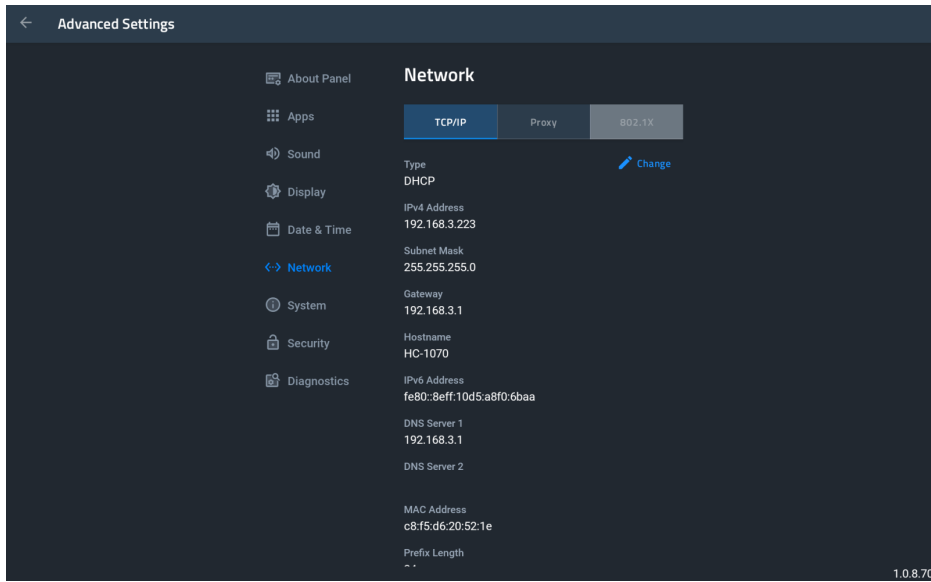

## Network

IP address can be either IPv4 or IPv6, DHCP or static (IPv4 only).


TCP/IP

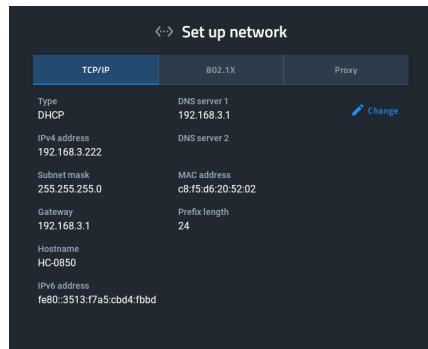

To make adjustments to IP address, press [Change].



DHCP  
(preferred)

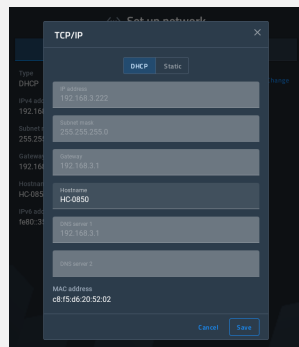


Network DHCP server will automatically assign IP address, subnet mask, default gateway, and DNS server info. In this mode, IP fields are read-only.

## Network

Press [Save] after making changes, or your newly entered network settings will not be saved.

IP address, subnet mask, default gateway, and DNS server info must be entered manually.


### Static IP

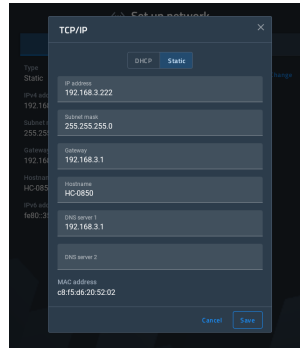

Press [Save] after entering the information. Press [Cancel] to leave without saving any edits.

If 802.1X is available/required, turn it [ON], select your EAP method, and enter the required info for that method (eg. certificate, domain, identity, password, etc.).


### 802.1X

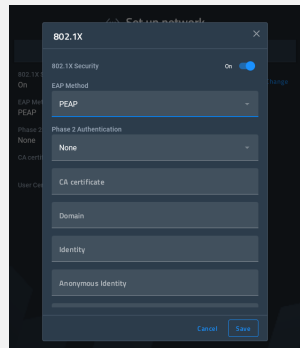


For further assistance and detail on whether your network supports or requires 802.1X, please contact your (or your client's) IT department.

If a proxy is available/required, turn it [ON] and enter the appropriate configuration information.


### Proxy

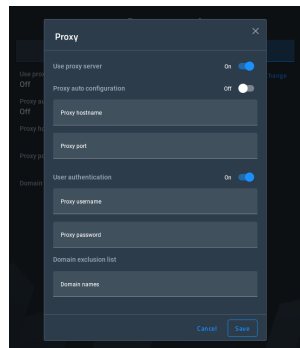

For further assistance and detail on whether your network supports or requires 802.1X, please contact your (or your client's) IT department.



## System

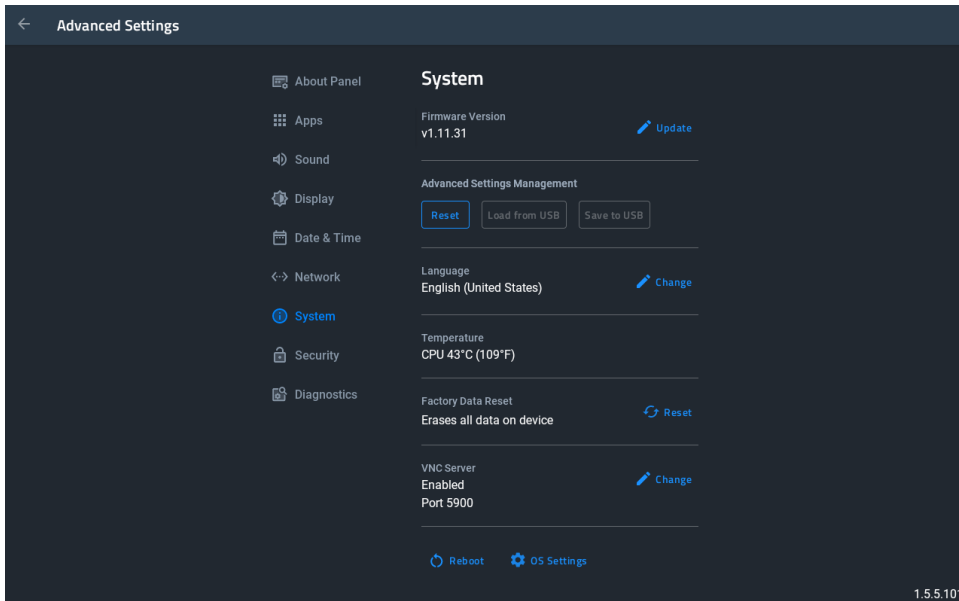


## System

The currently loaded firmware version is shown. To update firmware via USB, press [Change].




Insert a USB drive and press [Update firmware from USB].

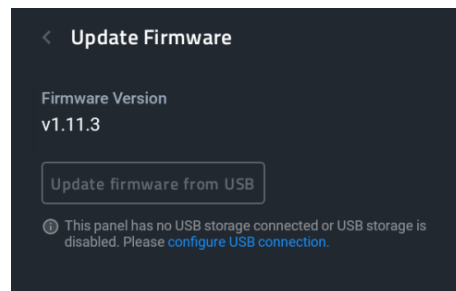

## Firmware

The button will turn from gray to blue when the USB drive is inserted. Remember to Enable USB Storage in the System Settings menu.




Follow the prompts to find the appropriate KIT file on the USB drive.

Once completed, a reboot of the touch panel is recommended. Follow instructions in the USB Storage Settings section.

**Note:** USB drives should be formatted to FAT32 file system.


The Advanced Settings can be reset to default values using the [Reset] button here.

Note: All app data for the currently selected persona will be reset using this option. For example, mailbox credentials when using AMX Book, or the TP5 file when using AMX G5 Control.

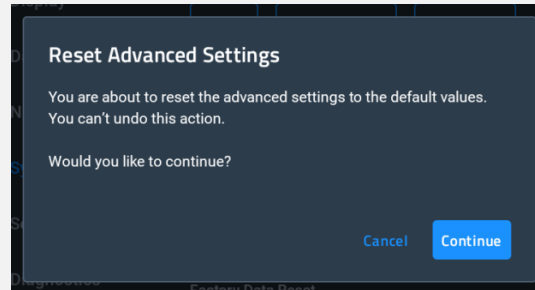


To Save the current Advanced Settings configuration to USB, insert a USB Drive and press [Save to USB]. Select the desired folder location and press [Save].

Advanced  
Settings  
Management

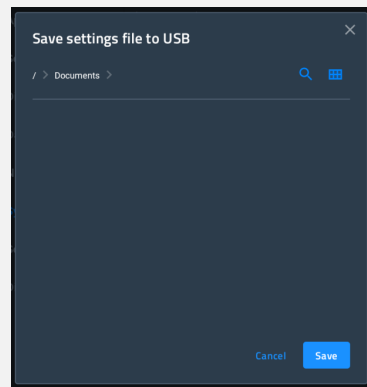

To load a previously saved settings configuration from USB, press [Load from USB]. Browse to the desired folder location and select the file.

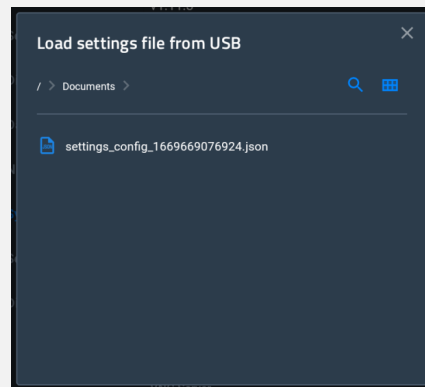

Once completed, a reboot of the touch panel is recommended. Follow instructions in the USB Storage Settings section.

**Note:** USB drives should be formatted to FAT32 file system.

Language

Select your desired language from the list.

**Note:** this selection will only apply to the OS Settings and not to the selected Persona.

## Temperature

CPU temperature can be monitored here.

This field is read-only



Pressing the [Reset] button will initiate a Factory Reset on the touch panel.



This will revert the panel back to its default state, using the last firmware transferred.

**This cannot be undone.** You will be prompted twice to confirm your choice.

## Factory Data Reset

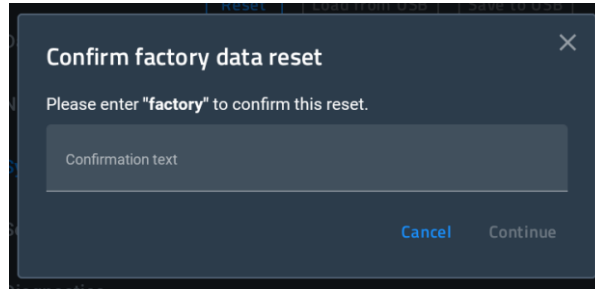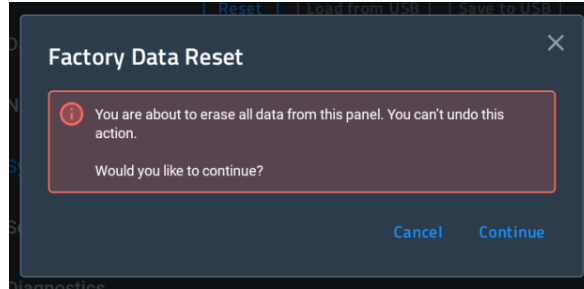

To exit without resetting, press [Cancel].

## VNC Server

The VNC Server is used to access the panel from another device, which is running a VNC client app.


To make adjustments to the VNC settings, press [Change].



Enable or Disable the VNC Server by pressing the appropriate selection.

A password is optional, but recommended to secure your connection. You can use the "eye" icon to view or hide the password.

Port 5900 is default, but can be adjusted if required.

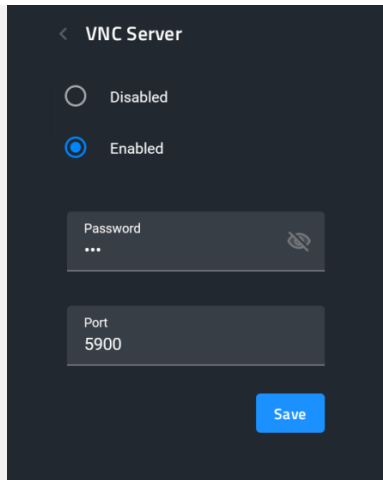

Changes are saved as they are made. To exit, press the back [<] button.

**Note:** During an active VNC session, the panel may not dim or enter Screen Timeout.

Reboot

Pressing [Reboot] will reboot the touch panel. This is the same as a press & hold of the pin-hole button for four (4) seconds.

OS Settings


[OS Settings] will open the Android OS Settings menu.

**Note:** Entering this area is for advanced use only, and not recommended or needed for normal operation.

If you need assistance, please contact HARMAN Professional Service & Support:

<https://pro.harman.com/service>


## Security

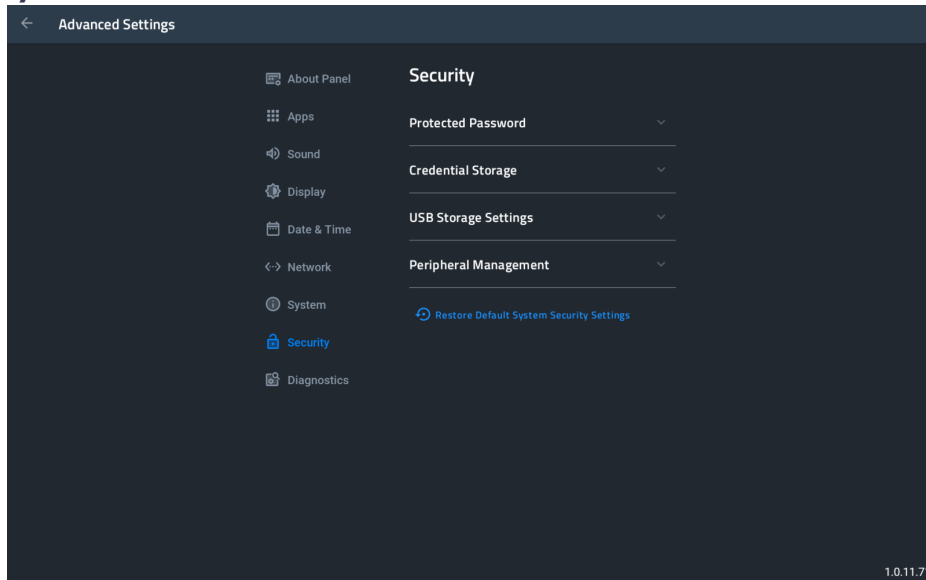

### Security


Contains settings for panel's protected password, used to access the Advanced Settings menu.

### Protected Password

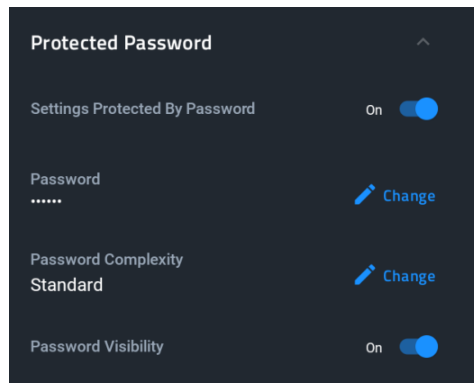

**Settings Protected by Password** will turn [ON] or [OFF] the password required to enter Advanced Settings. Use the button to select the preferred setting.

**Note:** Re-enabling the password after disabling it will revert to their default values.

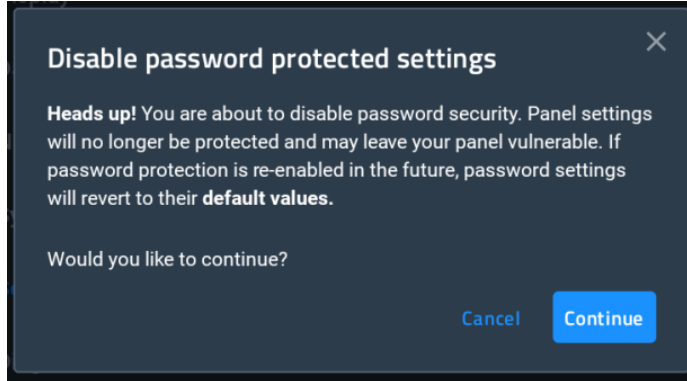

The default PIN to access Panel Settings is 1988.

To change the password, press [Change] next to the current password value.




Enter a new password into both fields below. Requirements will vary based on the current *Password Complexity* (see below).

To reveal the passwords being entered, press the “eye.”

Passwords must be entered in both fields and must match for the [Save] button to become active (ie. blue).

Press [Save] to save the new password entry, or press the Back [<] button to exit/cancel.


You will need to confirm you want to discard your changes before exiting.

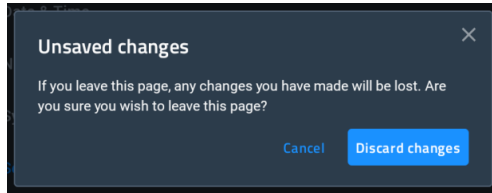

**Password Complexity** dictates length, characters, and character usage rules.


- **STANDARD** - There are no complexity rules for a STANDARD complexity password. In this case, the password can be any length, including empty, and there are no minimum requirements for characters in the password.
- **HIGH** - HIGH complexity passwords must contain at least 15 characters such that the following conditions are met:
  - The password must contain at least one uppercase alphabetic character.
  - The password must contain at least one lowercase alphabetic character.
  - The password must contain at least one numeric character.
  - The password must contain at least one special character.
  - The password must not contain more than three consecutive repeating characters.

**Note:** If the current password does not meet the high complexity password requirements, when this option is selected the panel will prompt you to change the current password to one that does meet the high complexity requirements.

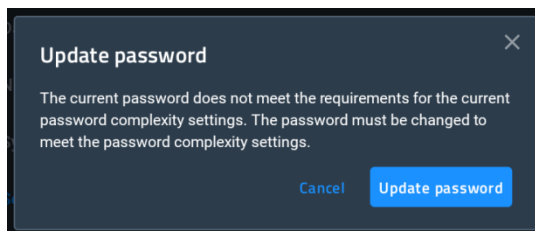

**Password Visibility** allows you to see the number of characters in a password, and to see, briefly, the character just typed in clear text for verification. If this option is not selected, then characters are not displayed in the password text input field.

This section helps manage or install certificates.

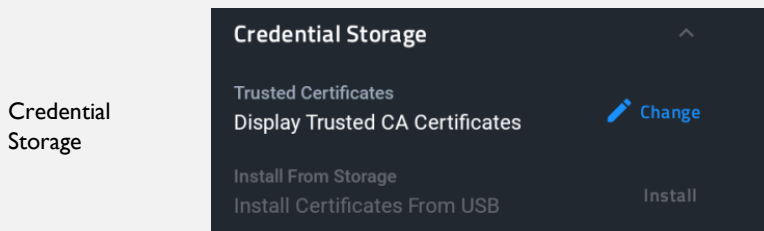


To manage credentials, press [Change].



Navigate to *Encryption & Credentials* → *Trusted Credentials*

Credentials can be enabled or disabled with each of their respective buttons:

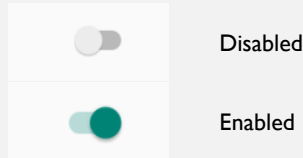

**Note:** Credentials are part of the OS Settings. Entering this area is for advanced use only, and not recommended or needed for normal operation.

If you need assistance, please contact HARMAN Professional Service & Support: <https://pro.harman.com/service>



To install certificate from USB, insert a USB drive and press [Install].

The button will turn from gray to blue when the USB drive is inserted. Remember to Enable USB Storage in the System Settings menu.



Browse to the desired folder location and select the appropriate certificate.

The panel's USB ports can be enabled or disabled here. Use the button to turn USB ports [ON] or [OFF].

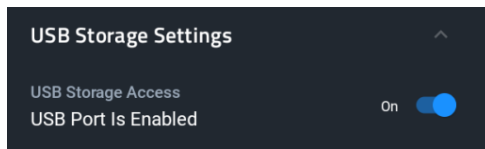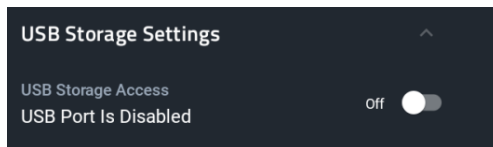

USB Storage Settings

After using USB for file transfers (eg. touch panel project files, firmware, logs, etc.), a reboot of the touch panel is recommended.


1. Disable USB by navigating to *Advanced Settings* → *Security* → *USB Peripheral*
2. Once disabled, remove your USB drive and any associate dongles, OTG adapters, etc.
3. Reboot the panel by either of these three methods:
  - a. Select [Reboot] from the Panel Settings menu
  - b. Press & hold the pin-hole button for four (4) seconds until the panel reboots, then release.
  - c. Power cycle by unplugging the networking cable. Then wait 10 seconds and reinsert.

Failure to unmount the USB properly can cause an issue where the panel does not wake up from its Screen Timeout. If this happens, remove all USB drives, dongles, & OTG adapters and reboot the panel.

**Note:** USB drives should be formatted to FAT32 file system.

The device's communication & intelligence peripherals can be enabled or disabled here.


Peripheral Management

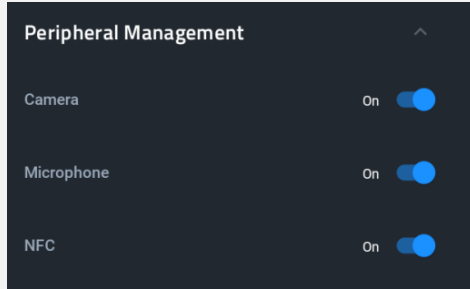

Use each button to turn [ON] or [OFF] the respective peripheral.


**Note:** Panels that do not include these peripherals (eg. VARIA-SL50 & No-Comm touch panels) will have some or all of these options grayed out.

Pressing this option will restore all System Security Settings to their default values.




You will be prompted to continue.

Restore Default System Security Settings

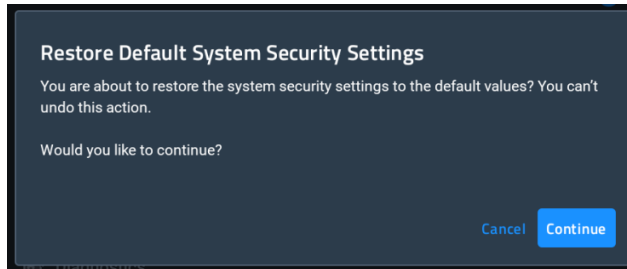

To exit without performing this action, press [Cancel].


# Diagnostics

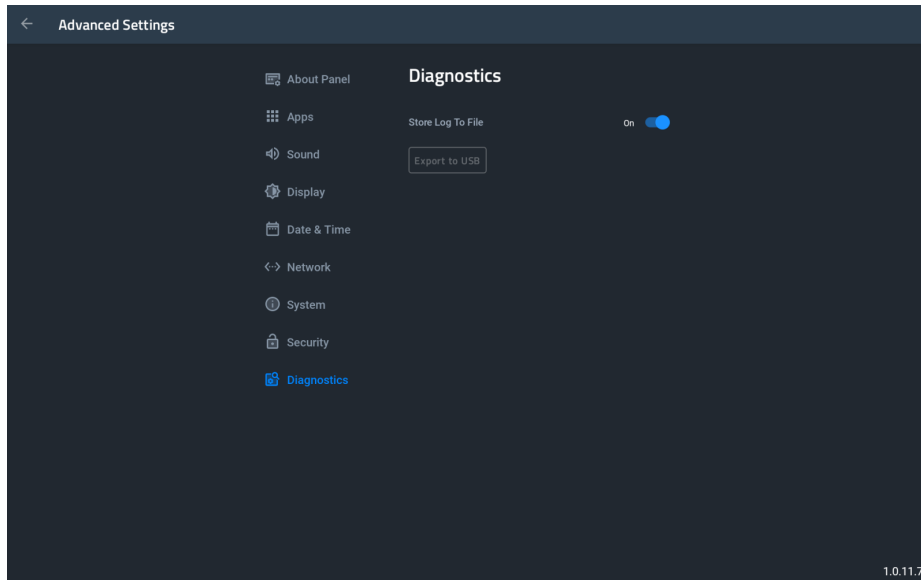

## Diagnostics

Turn this [ON] to record logs to file. That file can then be exported to USB for investigation by technicians or HARMAN Pro Tech Support.


Save Log to File

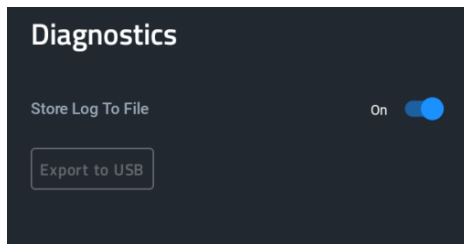


To export the saved logs to USB, insert a USB drive and press [Export to USB].

The button will turn from gray to blue when the USB drive is inserted. Remember to Enable USB Storage in the System Settings menu.

Export to USB



Browse to the desired folder location and press [Export].

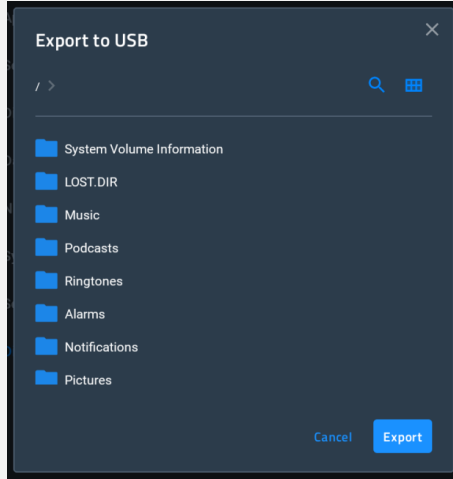

A dialog window will show progress and a toast message will confirm completion.

Once completed, a reboot of the touch panel is recommended. Follow instructions in the USB Storage Settings section.

**Note:** USB drives should be formatted to FAT32 file system.

# Gestures

## Overview

You can program Varia touch panels using the commands in this section to perform a wide variety of operations using Send Commands and variable text commands.

**A device must first be defined in the NetLinx programming language with values for the Device: Port: System** (in all programming examples - Panel is used in place of these values and represents all Varia panels).

**NOTE:** Verify you are using the latest NetLinx Controller and Varia firmware, as well as the latest version of NetLinx Studio and TPD5.

**NOTE:** For more information on gestures and on designing touch panel pages, please refer to the TPDesign 5 online help, available at [www.amx.com](http://www.amx.com).

## Touch Gesture Recognition

Gestureing refers to the act of moving a finger or stylus across the overlay and having the panel recognize and process this motion as a gesture. In G5, gesture events are assigned as individual buttons or pages. In addition, a gesture velocity is calculated and transmitted to the controller along with the gesture type itself in a custom event message.

**NOTE:** Nothing will be processed if the button associated with this gesture has no gesture event operations programmed, is disabled, or has no values programmed for address, channel, level, string output or command output. The custom event, however, is always transmitted.

The following gesture types are supported:

1. Swipe up
2. Swipe down
3. Swipe right
4. Swipe left
5. Double-tap
6. 2 Finger Swipe Up
7. 2 Finger Swipe Down
8. 2 Finger Swipe Right
9. 2 Finger Swipe Left

## Gesture Velocity

A gesture “velocity” is calculated to represent the speed of the gesture. This is done by measuring the time from when the user first presses the screen until the user releases. The following simplified velocities are supported and transferred to the controller in the custom event message:

1. Fast
2. Normal
3. Slow

A precise velocity is sent in the custom event message which represents the velocity in terms of pixels per second for slides and circles. For a double tap, this value is the total time in milliseconds from the first press to the second release.

## Gesture Prioritization

The following table describes the process used to determine what the user meant whenever a gesture operation is defined globally versus for the current page.

Gesture Prioritization	
The user presses outside of a button or slider and moves before releasing.	The firmware will always try to recognize a gesture as long as the user moves at least 20 pixels before the release occurs.
The user presses inside of a slider and moves before releasing.	This will always be processed as a slider operation and no attempt will be made to recognize a gesture.

The user moves a movable popup page.	This will always be processed as a popup page move and not a gesture.
The user presses on a button and then moves.	In this case, the press will not be sent for the first 0.15 second. If the user has moved at least 60 pixels by this time, then a button press/release will not be processed, but this will be processed as a gesture. At 0.15 second, the button press is processed and once the user releases, the release is processed and no gesture recognition is attempted. To be clear, it is not necessary for the user to move off of a button to be considered a gesture, but to move at least 60 pixels in that first 0.15 of a second.
The user double taps on a button or slider.	This will not be recognized as a gesture. This would be considered two quick press/release operations on the button or slider.
The user double taps outside of a button or slider.	This will be registered as a gesture.

## Gesture VNC/Mouse Support

Gestures are recognized when the user is using a finger or stylus on the panel's screen overlay, a mouse on a VNC connection, or a mouse connected to the local USB port on the panel.

## Gesture Custom Event

Whenever a gesture is recognized and processed a custom event is also sent to the controller. The following values describe this event:

CUSTOM\_EVENT ADDRESS is 1

CUSTOM\_EVENT EVENTID is 600

Custom.Value1 is the gesture number

Custom.Value2 is the simplified gesture velocity

Custom.Value3 is the precise gesture velocity

## Gesture numbers and velocity values

Gesture Numbers and Velocity Values				
Gesture numbers			Simplified gesture velocity values	
1-	Swipe up	7	Double-Tap	1 - Fast
2-	Swipe down	8	Two-Finger Swipe up	2 - Normal
3-	Swipe right	9	Two-Finger Swipe down	3 - Slow
4-	Swipe left	10	Two-Finger Swipe right	
5-	Circle (not implemented)	11	Two-Finger Swipe left.	
6-	CCW Circle (not implemented)			

## Precise gesture velocity

For double taps, this is the time in milliseconds from the first press to the second release.

## Enabling or Disabling the Gesture Custom Event

The **^GCE** Send Command sets whether or not the panel sends a custom event to the controller whenever a gesture is detected.

- The value sent is not retained - gesture custom events will be enabled each time the panel restarts.
- The default is to always NOT send the events.

# Programming - Send Commands

## Overview

You can program VARIA touch panels, using the commands in this section, to perform a wide variety of operations using Send Commands and variable text commands.

**A device must first be defined in the NetLinx programming language with values for the Device: Port: System** (in all programming examples - Panel is used in place of these values and represents all Varia panels).

- Verify you are using the latest NetLinx Controller and VARIA firmware, as well as the latest version of NetLinx Studio and TPDesign5.
- The Send Commands described in this document are case-insensitive.

## Using the “Pipe” ( | ) Character

Previously, in G4, the pipe character ( | ) was used to create a new line.

G5 uses carriage return / line feed (\$0d,\$0a) instead.

The examples below illustrate indicating a new line (between the words “Hello” and “World”) in G4 and in G5 programming:

**G4:** “^TXT-200,0,Hello|World”

**G5:** “^TXT-200,0,Hello',\$0d,\$0a,'World”


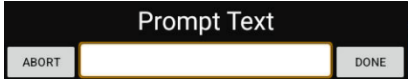

## Panel Commands

Panel Commands	
<b>^ABP</b> <b>ABEEP</b>	<p>Single Beep Command - Output a single beep. The ‘ABEEP’ command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^ABP” or “ABEEP”</li> <li>• <b>Variables:</b> None</li> <li>• <b>Example:</b> SEND COMMAND Panel,“^ABP”</li> </ul>
<b>^ADB</b> <b>ADBEEP</b>	<p>Double Beep Command - Output a double beep. The ‘ADBEEP’ command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^ADB” or “ADBEEP”</li> <li>• <b>Variables:</b> None</li> <li>• <b>Example:</b> SEND COMMAND Panel,“^ADP”</li> </ul>
<b>^AKB</b> <b>@AKB</b> <b>AKEYB</b>	<p>Show System Keyboard Command - Brings up system keyboard. When user presses the “Done” button, a string is returned to the controller with the user-entered value. The keyboard can be removed either by the Back button or the “^AKR” command. The ‘@AKB’ and ‘AKEYB’ commands are implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^AKB-[optional initial text];[optional prompt text];[optional hint text]; [optional return prefix];[optional return port]” or “@AKB-[optional initial text];[optional prompt text];[optional hint text]; [optional return prefix];[optional return port]” or “AKEYB-[optional initial text];[optional prompt text];[optional hint text]; [optional return prefix];[optional return port]”</li> </ul>

## Panel Commands

- **Variables:**  
 Initial text: Pre-populated text to appear on keyboard (i.e. default)  
 Prompt text: Descriptive header to appear above keyboard text entry box  
 Hint Text: Hint text to appear behind the keyboard text entry box  
 Return prefix: Prefix to the send string returned to the controller. If not specified, the entered text will be preceded by “AKB-”.  
 Return port: The port number to return the response on if different than the port to which the command is sent.

- **Example:**

<pre>""^AKB-;;; ""</pre> <p>Keyboard string will return on port 1 with a prefix of AKB-</p>	
<pre>""^AKB-Enter Text;;; ""</pre> <p>Text window shows Enter Text (If you do not clear this text before typing in your string it will be returned with the string) String will return on port 1 with a prefix of AKB-</p>	
<pre>""^AKB-;Prompt Text;;; ""</pre> <p>Text window blank Top prompt text says Prompt Text String will return on port 1 with a prefix of AKB-</p>	
<pre>""^AKB-;;Hint Text;; ""</pre> <p>Text window blank Top prompt text blank Hint text says Hint Text (disappears once you start typing) String will return on port 1 with a prefix of AKB-</p>	
<pre>""^AKB-;;;RF-; ""</pre> <p>Text window blank Top prompt text blank Hint text blank String will return on port 1 with a prefix of RF-</p>	
<pre>""^AKB-;;;2 ""</pre> <p>Text window blank Top prompt text blank Hint text blank String will return on port 2 with a prefix of AKB-</p>	

You can mix and match all parameters, but they must all be accounted for when you send the command. Use semicolons as placeholders.

**^AKP  
@AKP  
AKEYP**










Show System Keypad Command - Brings up system keypad. When user presses the “Done” button, a string is returned to the controller with the user-entered value. The keypad can be removed either by the Back button or the “^AKR” command. The ‘@AKP’ and ‘AKEYP’ commands are implemented for G4 compatibility.

- **Syntax:**

```
""^AKP-[optional initial text];[optional prompt text];[optional hint text];
[optional return prefix];[optional return port]"" or
""@AKP-[optional initial text];[optional prompt text];[optional hint text];
[optional return prefix];[optional return port]"" or
""AKEYP-[optional initial text];[optional prompt text];[optional hint text]; [optional return prefix];[optional return port]""
```

- **Variables:**

## Panel Commands

	<p>Initial text: Pre-populated text to appear on keyboard (i.e. default)          Prompt text: Descriptive header to appear above keyboard text entry box          Hint Text: Hint text to appear behind the keyboard text entry box          Return prefix: Prefix to the send string returned to the controller. If not specified, the entered text will be preceded by "AKP-".          Return port: The port number to return the response on if different than the port to which the command is sent.</p> <p>• <b>Example:</b></p> <table border="1" data-bbox="396 520 1495 1373"> <tr> <td data-bbox="396 520 1062 579"> <pre>""^AKP-;;; ""</pre> <p>Keyboard string will return on port 1 with a prefix of AKP-</p> </td> <td data-bbox="1062 520 1495 579"></td> </tr> <tr> <td data-bbox="396 579 1062 722"> <pre>""^AKP-Enter Text;;; ""</pre> <p>Text window shows Enter Text            (If you do not clear this text before typing in your string it will be returned with the string)            String will return on port 1 with a prefix of AKP-</p> </td> <td data-bbox="1062 579 1495 722">  </td> </tr> <tr> <td data-bbox="396 722 1062 865"> <pre>""^AKP-;Prompt Text;;; ""</pre> <p>Text window blank            Top prompt text says Prompt Text            String will return on port 1 with a prefix of AKP-</p> </td> <td data-bbox="1062 722 1495 865">  </td> </tr> <tr> <td data-bbox="396 865 1062 1037"> <pre>""^AKP-;Hint Text;; ""</pre> <p>Text window blank            Top prompt text blank            Hint text says Hint Text (disappears once you start typing)            String will return on port 1 with a prefix of AKP-</p> </td> <td data-bbox="1062 865 1495 1037">  </td> </tr> <tr> <td data-bbox="396 1037 1062 1209"> <pre>""^AKP-;;;RF-; ""</pre> <p>Text window blank            Top prompt text blank            Hint text blank            String will return on port 1 with a prefix of RF-</p> </td> <td data-bbox="1062 1037 1495 1209"></td> </tr> <tr> <td data-bbox="396 1209 1062 1373"> <pre>""^AKP-;;;2 ""</pre> <p>Text window blank            Top prompt text blank            Hint text blank            String will return on port 2 with a prefix of AKP-</p> </td> <td data-bbox="1062 1209 1495 1373"></td> </tr> </table> <p>You can mix and match all parameters, but they must all be accounted for when you send the command. Use semicolons as placeholders.</p>	<pre>""^AKP-;;; ""</pre> <p>Keyboard string will return on port 1 with a prefix of AKP-</p>		<pre>""^AKP-Enter Text;;; ""</pre> <p>Text window shows Enter Text            (If you do not clear this text before typing in your string it will be returned with the string)            String will return on port 1 with a prefix of AKP-</p>		<pre>""^AKP-;Prompt Text;;; ""</pre> <p>Text window blank            Top prompt text says Prompt Text            String will return on port 1 with a prefix of AKP-</p>		<pre>""^AKP-;Hint Text;; ""</pre> <p>Text window blank            Top prompt text blank            Hint text says Hint Text (disappears once you start typing)            String will return on port 1 with a prefix of AKP-</p>		<pre>""^AKP-;;;RF-; ""</pre> <p>Text window blank            Top prompt text blank            Hint text blank            String will return on port 1 with a prefix of RF-</p>		<pre>""^AKP-;;;2 ""</pre> <p>Text window blank            Top prompt text blank            Hint text blank            String will return on port 2 with a prefix of AKP-</p>	
<pre>""^AKP-;;; ""</pre> <p>Keyboard string will return on port 1 with a prefix of AKP-</p>													
<pre>""^AKP-Enter Text;;; ""</pre> <p>Text window shows Enter Text            (If you do not clear this text before typing in your string it will be returned with the string)            String will return on port 1 with a prefix of AKP-</p>													
<pre>""^AKP-;Prompt Text;;; ""</pre> <p>Text window blank            Top prompt text says Prompt Text            String will return on port 1 with a prefix of AKP-</p>													
<pre>""^AKP-;Hint Text;; ""</pre> <p>Text window blank            Top prompt text blank            Hint text says Hint Text (disappears once you start typing)            String will return on port 1 with a prefix of AKP-</p>													
<pre>""^AKP-;;;RF-; ""</pre> <p>Text window blank            Top prompt text blank            Hint text blank            String will return on port 1 with a prefix of RF-</p>													
<pre>""^AKP-;;;2 ""</pre> <p>Text window blank            Top prompt text blank            Hint text blank            String will return on port 2 with a prefix of AKP-</p>													
<p><b>^AKR</b>  <b>@AKR</b>  <b>AKEYR</b></p>	<p>Remove Keyboard/Keypad Command - This command removes any keyboard or keypad that is currently displayed. If it is a non-virtual keyboard or keypad, it is essentially an Abort, because any user-entered text is lost. The '@AKR' and 'AKEYR' commands are implemented for G4 compatibility.</p> <p>• <b>Syntax:</b>          ""^AKR"" or          ""@AKR"" or          ""AKEYR""</p> <p>• <b>Variables:</b> None:</p> <p>• <b>Examples:</b>          SEND COMMAND Panel,""^AKR"          Remove the displayed keyboard/keypad.</p>												

## Panel Commands

<p><b>^APC</b></p>	<p>Automatic close application command - Setup alarm times to close all open applications.</p> <p><b>•Syntax:</b>  <code>""^APC-&lt;enable&gt;,[optional alarm time],[optional alarm time]""</code></p> <p><b>• Variables:</b>  enable: 1 to enable alarms, 0 to disable alarms. Default is 1.  Alarm time: Time of day to trigger alarm in HH:mm format. Format is 24 hour values. Up to six alarm times can be set each day. Valid HH formats are 00-23. Valid mm format is 00-59. Invalid formats and parameters will be disregarded. The default is one time set at 00:00 (midnight).</p> <p><b>• Examples:</b>  SEND_COMMAND Panel, <code>""^APC-1,00:00, 08:00, 18:00""</code>  Enable the application close alarms at midnight (00:00), 8:00 AM (08:00), and 6:00 PM (18:00).  SEND_COMMAND Panel, <code>""^APC-0""</code>  Disable application close alarms.  SEND_COMMAND Panel, <code>""^APC-1""</code>  Enable alarms to close applications at previous alarm times.</p>
<p><b>?APC</b></p>	<p>Query application close alarms - Query the values of the close applications alarms. The response is a NetLinx DATA/Command event to the controller from the port the command was sent to in the format used in the ^APC command.</p> <p><b>•Syntax:</b>  <code>""?APC""</code></p> <p><b>• Variables:</b> None</p> <p><b>• Example:</b>  SEND_COMMAND Panel, <code>""?APC""</code>  Response is a DATA/Command event to controller from the port the ?APC command was sent on in the format of:  ^APC-&lt;enable&gt;,[optional alarm time],[optional alarm time]  If alarms are enabled and times set to midnight and noon, the response would be:  ^APC-1,00:00,12:00</p>
<p><b>^APP Launch application chooser</b></p>	<p>Launch application chooser command - Launch a dialog showing all available apps.</p> <p><b>• Syntax:</b>  <code>""^APP""</code></p> <p><b>Variables:</b> None</p>
<p><b>^APP- show Launch app command</b></p>	<p>Launch application command - Launch the specified application</p> <p><b>• Syntax:</b>  <code>""^APP-show,&lt;AppPackageName&gt;""</code></p> <p><b>• Variables:</b>  AppPackageName: The package name of the application to launch.</p> <p><b>• Example:</b>  SEND_COMMAND Panel, <code>""^APP-show,us.zoom.zrc""</code>  Launch Zoom Rooms Controller app</p> <p>SEND_COMMAND Panel, <code>""^APP-http://www.amx.com""</code>  Launch Chrome browser to amx.com website</p>
<p><b>^APP-close Close app command</b></p>	<p>Close a specific application command - Close the specified application (if previously launched)</p> <p><b>•Syntax:</b>  <code>""^APP-close,&lt;app name&gt;""</code></p>

## Panel Commands

	<ul style="list-style-type: none"> <li>• <b>Variables:</b> app name - The name of the application to close.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,""^APP-close,com.android.chrome" Close the Chrome browser</li> </ul>
<p><b>^BRT</b> <b>@BRT</b> <b>BRIT</b></p>	<p>Panel Brightness Command - Set the panel brightness. The '@BRT' and 'BRIT' commands are implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BRT-&lt;brightness level&gt;"" or ""@BRT-&lt;brightness level&gt;"" or ""BRIT-&lt;brightness level&gt;""</li> <li>• <b>Variables:</b> brightness level = 0 - 100.</li> <li>• <b>Example:</b> SEND COMMAND Panel,""^BRT-70" Sets the brightness level to 70</li> </ul>
<p><b>?BRT</b></p>	<p>Query Brightness Command - Query panel brightness.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""?BRT""</li> <li>• <b>Variables:</b> None</li> <li>• <b>Example:</b> SEND_COMMAND Panel,""?BRT" Gets the current brightness value. The response returned is a custom event with the following properties: Custom Event Property Value Port port command was received on ID 0 Type 1303 Flag 0 Value 1 Brightness value 0-100 Value 2 0 Value 3 0 Text String that represents the brightness value</li> <li>• <b>Example response:</b> Custom Event Property Value Port port command was received on ID 0 Type 1303 Flag 0 Value 1 70 Value 2 0 Value 3 0 Text 70</li> </ul>
<p><b>^CPR</b></p>	<p>Cache Purge Command - Purge the image cache.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^CPR""</li> </ul>

Panel Commands	
	<ul style="list-style-type: none"> <li>• <b>Variables:</b>None</li> <li>• <b>Example:</b> SEND COMMAND Panel,""^CPR" Purge the image cache.</li> </ul>
<b>^DMM</b>	<p>Panel Streaming Audio Mute Command. Set the audio mute for a specified streaming URL.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^DMM-&lt;audio mute&gt;,&lt;video mute&gt;,&lt;url&gt;""</li> <li>• <b>Variables:</b> I audio mute - mute/unmute the audio for &lt;url&gt; (0 = unmute, 1 = mute) video mute - mute/unmute the video for &lt;url&gt; (0 = unmute, 1 = mute) (not implemented at this time) url - a valid ^SDM url that is already in the playing state.</li> <li>• <b>Examples:</b> SEND_COMMAND Panel, ""^DMM-1,0,udp://224.1.1.1:1234" Mute audio, unmute video for UDP stream server 224.1.1.1 port 1234. SEND_COMMAND Panel, ""^DMM-0,0,udp://224.1.1.1:1234" Unmute audio, unmute video for UDP stream server 224.1.1.1 port 1234.</li> </ul>
<b>^EKP</b> <b>@EKP</b>	<p>System Extended Keypad - Brings up system extended keypad. Currently, the 'system extended keypad' and the 'system telephone keypad' are the same, and have all the keys that the G4 extended keypad had except the ":" key. When the user presses the "Done" button, a string is returned to the controller with the user-entered value. The keypad can be removed either by the Back button or the "^AKR" command. Note: The '@EKP' command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^EKP-[optional initial text];[optional prompt text];[optional hint text]; [optional return prefix];[optional return port]"" or ""@EKP-[optional initial text];[optional prompt text];[optional hint text]; [optional return prefix];[optional return port]""</li> <li>• <b>Variables:</b> Initial text: Pre-populated text to appear on keypad (i.e. default) Prompt text: Descriptive header to appear above keypad text entry box Hint Text: Hint text to appear behind the keypad text entry box Return prefix: Prefix to the send string returned to the controller. If not specified, the entered text will be preceded by "EKP-". Return port: The port number to return the response on if different than the port to which the command is sent.</li> </ul>
<b>^ENC</b>	<p>Set Text Encoding Method - Sets the text encoding method which is used for commands and strings sent from panel to controller (the default is UTF-8).</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^ENC-&lt;Encoding&gt;""</li> <li>• <b>Variables:</b> Encoding: 0: UTF-8 (default), 1: Latin-1 (ISO 8859-1)</li> <li>• <b>Example:</b> SEND_COMMAND Panel,""^ENC-1" Sets the encoding method used for all strings to the Controller to Latin-1. Note: NetLinx Studio does not support UTF-8 at this time; therefore UTF-8-encoded characters cannot be copied from TPD5 and pasted in Studio. To use NetLinx Studio to send UTF-8 encoded text, byte values must be enumerated in the command. For example, the following command sends a UTF-8 string to the panel, consisting of ASCII, extended ASCII and Unicode (Chinese) characters: ""^UTF-3,0,'Hello',\$C3,\$A2,\$C3,\$A3,\$E5,\$9C,\$B0,\$E7,\$9B,\$A4,\$E3,\$83,\$87"</li> </ul>

## Panel Commands

	<p>Also note that in backwards compatibility mode (i.e. when the ^TXT command is sent or when the ^ENC-I command has been sent), ISO-8859-1 is used for character encoding/decoding, since that is what G4 panels used. ISO-8859-1 is different from the Windows-1252 character set in that characters in the range 128-159 (decimal) are non-printable control characters.</p> <p>So in response to a ?TXT query, any characters in that range (assuming the ^ENC-I was previously sent) will be returned as AMX Hex quad-encoded values with Custom Event Flag=1, whereas the remainder of the extended ASCII range (160-255) will be returned as Latin-1-encoded characters with Custom Event Flag=0 (see the ISO8859-1 Character Encoding/Decoding table).</p>																																				
?ENC	<p>Get Text Encoding Method - Gets the current text encoding method which is used for commands and strings sent from panel to controller (the default is UTF-8).</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “?ENC”</li> <li>• <b>Variables:</b>None</li> <li>• <b>Example:</b> SEND_COMMAND Panel,“?ENC”</li> </ul> <p>Get the panel's text encoding status. The response returned is a custom event with the following syntax:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>0</td> </tr> <tr> <td>Type</td> <td>1331</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>encoding (0 = UTF-8, 1 = ISO-8859-1)</td> </tr> <tr> <td>Value 2</td> <td>0</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>String that represents the encoding name</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>• <b>Example response for encoding status:</b></li> </ul> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>0</td> </tr> <tr> <td>Type</td> <td>1331</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>0</td> </tr> <tr> <td>Value 2</td> <td>0</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>UTF-8</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	0	Type	1331	Flag	0	Value 1	encoding (0 = UTF-8, 1 = ISO-8859-1)	Value 2	0	Value 3	0	Text	String that represents the encoding name	Custom Event Property	Value	Port	port command was received on	ID	0	Type	1331	Flag	0	Value 1	0	Value 2	0	Value 3	0	Text	UTF-8
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	0																																				
Type	1331																																				
Flag	0																																				
Value 1	encoding (0 = UTF-8, 1 = ISO-8859-1)																																				
Value 2	0																																				
Value 3	0																																				
Text	String that represents the encoding name																																				
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	0																																				
Type	1331																																				
Flag	0																																				
Value 1	0																																				
Value 2	0																																				
Value 3	0																																				
Text	UTF-8																																				
^GCE	<p>Set Gesture Custom Event - Sets whether or not the panel sends a custom event to the controller whenever a gesture is detected.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^GCE-&lt;state&gt;”</li> <li>• <b>Variables:</b>None   state: ON or OFF / 1 or 0 / on or off.</li> </ul> <p>Note: This setting is not retained and the default is to always NOT send the events. To enable sending the event, the value after the dash can be “on”, “ON”, or “1”. Anything else will disable sending custom events.</p> <ul style="list-style-type: none"> <li>• <b>Examples:</b> SEND_COMMAND Panel,“^GCE-on” Enables gesture custom event reporting to the controller. SEND_COMMAND Panel,“^GCE-0” Disables gesture custom event reporting to the controller.</li> </ul>																																				

## Panel Commands

<p><b>LEVON</b></p>	<p>Level on command (generated by NetLinX controller) - Enable device to send level changes to the controller. By default, devices will not report level changes unless a LEVON command is received. The LEVON command is automatically sent by the controller to the device if: There is a LEVEL event for the DPS of the device. There is a CREATE_LEVEL defined in the NetLinX program for the DPS of the device.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> "LEVON"</li> </ul> <p><b>Variables:</b> None</p>
<p><b>LEVOF</b></p>	<p>Level off command (generated by NetLinX controller) - Disable the device from sending level changes to the controller. By default, devices will not report level changes unless a LEVON command is received. The LEVON command is automatically sent by the controller to the device if: There is a LEVEL event for the DPS of the device. There is a CREATE_LEVEL defined in the NetLinX program for the DPS of the device.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> "LEVOF"</li> </ul> <p><b>Variables:</b>None</p>
<p><b>?MAC</b></p>	<p>Query Panel MAC Address - Query the MAC Address of the panel.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> "?MAC"</li> </ul> <ul style="list-style-type: none"> <li>• <b>Variables:</b>None</li> <li>•</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"?MAC" Get the panel's MAC Address. The response returned is a custom event with the following syntax: Custom Event Property Value Port port command was received on ID 0 Type 1315 Flag 0 Value 1 0 Value 2 0 Value 3 0 Text String that represents the the MAC Address</li> </ul> <ul style="list-style-type: none"> <li>• <b>Example response:</b> Custom Event Property Value Port port command was received on ID 0 Type 1315 Flag 0 Value 1 0 Value 2 0 Value 3 0 Text 00:60:9f:90:00:01</li> </ul>
<p><b>^MSG</b></p>	<p>Message Dialog Command - A generic message dialog that has displayed content defined from the ^MSG command.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> '^MSG-dialog_id[:dialog_theme],dialog_type[-input_option][:dialog_image_name], timeout,custom_event_type, custom_event_id, title_text, message_text, positive_button_text,negative_button_text, neutral_button_text, cancel_text, timeout_text'</li> </ul>

## Panel Commands

- **Variables:** None **dialog\_id:** Unique id to reference the dialog. Used to track IDs to displayed dialogs. **dialog\_theme:** Optional theme of the dialog is set by appending the theme to the dialog\_id number with ':' and the theme. Valid themes are light and dark (default) **dialog\_type:** The type of dialog to display: std - standard dialog. By default, no image is displayed in the title area. warn - warning dialog. The built-in warning image is used in the title area. error - error dialog. The built-in error image is used in the title area. quest - question dialog. The built-in question image is used in the title area. list - list of items to choose. By default, no image is displayed in the title area. List items are put in the message\_text field and are separated by colons (:). input - input entry. By default, no image is displayed in the title area. Optional input\_options follow a dash (-) and are: no option present - alphanumeric input num - numeric input (no alphabetic input) phone- phone pad presented uri - URI keyboard presented email - Email keyboard presented name - Keyboard presented and capital words are used. date - Date pad presented time - Time pad presented datetime - Date/Time pad presented  
The message\_text is 'System is busy'. The positive\_button\_text is 'OK'  
SEND\_COMMAND Panel,^MSG-1,list:question-flat-48x48.png,30000,32001,10, Select item,"item 1:item 2:item 3:item 4:item 5",,"Cancel"  
Display dialog ID 1 as a list dialog. The image 'question-flat-48x48.png' is used as the image in the title area. The timeout is 30s.  
The custom\_event\_type to use is 32001.  
The custom\_event\_id to use is 10.  
The title\_text is 'Select Item'.  
The message\_text is list of 5 items (item 1, item 2, item 3, item 4, item5).  
The positive\_button\_text is empty.  
The negative\_button\_text is empty.  
The neutral\_button\_text is 'Cancel'.  
pass - password entry. By default, no image is displayed in the title area. Optional input\_options follow a dash (-) and are: no option present - alphanumeric input num - numeric input (no alphabetic input)  
**dialog\_image\_name:** It is optional to override any type with a custom image or dynamic image from the TP5 file to be displayed in the title area. The image used is set by appending a ':' and image file/resource name to the **dialog\_type-input\_option** (e.g. std:number.png or warn:mywarningimage.jpg). **timeout:** Timeout is in milliseconds. If timeout is 0, message does not timeout and is considered modal. **custom\_event\_type:** The custom event type value to use for result custom events. **custom\_event\_id:** The custom event ID value to use for result custom events. **title\_text:** Text that is displayed in the dialog title. If this field is empty, no title is displayed on the dialog. **message\_text:** In most cases, the contents of this field is displayed in the message of the dialog. There are a few exceptions based on dialog\_type:  
list - In a list dialog type, the message\_text contains the list items. List items are separated by a colon (:). input - In an input dialog type, the message\_text contains the initial value of the text entry field of the dialog. pass In a pass dialog type, the message\_text contains the initial value of the text entry field of the dialog. **positive\_button\_text:** Text to display on the positive button (e.g. Yes, OK, Enter, etc.) In most cases, if the positive button is selected, this text is sent to controller in the custom.text field. Note: If this field is empty, the positive button is not displayed in the MessageDialog.  
Note: Text fields can be put into quotations (" ") so that commas can be used in text. Like the CSV parser, if a " is needed in the text, the " can be escaped by a prepended another " (e.g. "").  
Note: The use of text params in command instead of preset definitions for button text is so that the language of text can be set in code. Unicode quads for text are supported by using the command '^MSGU-' command. Legacy ISO-8859-1 (like ^TXT) text is supported by using the '^MSGT-' command.  
There is a LEVEL event for the DPS of the device.  
There is a CREATE\_LEVEL defined in the NetLinX program for the DPS of the device.

• **Response Data:**  
The response to the MessageDialog is sent to the controller via a Custom Event. Some of the custom event values are set in the ^MSG command, and others are generated as a result of the dialog action.  
Result Custom Events data: custom.type: The value set in the custom\_event\_type field custom.id: The value set in the custom\_event\_id field. custom.flag: value has the result. In most cases, it indicates which button was selected, or cancel, or timeout:  
-1 = timeout  
0 = cancel  
1 = positive button  
2 = negative button  
3 = neutral button  
In a list dialog type, when an item is selected, the custom.flag field will be set to 1 (positive button).


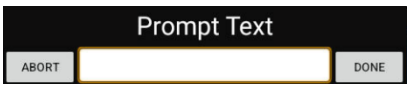



## Panel Commands

	<p>custom.value1 The dialog_id value set in the command</p> <p>custom.value2 In a list dialog type, this field has the index of the selected list item. If the first item was selected then value2==1, second item selected then value2==2, etc. If the dialog_type is not a list, then value2 is unused and is set to 0.</p> <p>custom.value3: Unused. Set to 0.</p> <p>custom.text: The text of the resulting button selected, or cancel_text if dialog was canceled, or timeout_text if timed out. In list mode, the selected list item text value is sent in this field. In input or pass, the entered value is sent in this field.</p> <p>Note: Custom events are returned on the port the command was sent to from the controller.</p> <p>• <b>Examples:</b>  SEND_COMMAND Panel,"^MSG-I,std,60000,32001,I,Please Wait,"System is busy",OK";  Display dialog ID I as a standard dialog.  The timeout is 60s.  The custom_event_type to use is 32001.  The custom_event_id to use is I.  The title_text is 'Please Wait'.</p> <p>SEND_COMMAND Panel,"^MSGT-I:light,error,30000,32001,32002,"Error Title","Lorem ipsum dolor sit amet, consectetur adipiscing elit,sed do eiusmod tempor incididunt ut labore et dolore magna aliqua. Ut enim ad minim veniam, quis nostrud exercitation ullamco laboris nisi ut aliquip ex ea commodo consequat. Duis aute irure dolor in reprehenderit in voluptate velit esse cillum dolore ND_COMMAND Panel,"^MSGT-I:light,error,30000,32001,32002,"Error Title","Lorem ipsum dolor sit amet, consectetur adipiscing elit,sed do eiusmod tempor incididunt ut labore et dolore magna aliqua. Ut enim ad minim veniam, quis nostrud exercitation ullamco laboris nisi ut aliquip ex ea commodo consequat. Duis aute irure dolor in reprehenderit in voluptate velit esse cillum dolore eu fugiat nulla pariatur. Excepteur sint occaecat cupidatat non proident, sunt in culpa qui officia deserunt mollit anim id est laborum. ""the end"","Positive","Negative", "Neutral","Cancel","Timeout""</p> <p>^MSGT -The dialog text is encoded in the ISO-8859-1 (Latin-1) format (like what is expected by ^TXT command). Display dialog ID I with a light theme as an error dialog. The default error image is used as the image in the title area.  The timeout is 30s.  The custom_event_type to use is 32001.  The custom_event_id to use is 32001.  The title_text is 'Error Title'.  The message_text is a variation of 'Lorem ipsum...'.  The positive_button_text is 'Positive'.  The negative_button_text is 'Negative'.  The neutral_button_text is 'Neutral'.  The cancel_text is 'Cancel'.  The timeout_text is 'Timeout'.</p>
<b>^MUT</b>	<p>Panel Volume Mute - Mute or unmute a panel volume.</p> <p>• <b>Syntax:</b>  ""^MUT-&lt;mute value&gt;""</p> <p>• <b>Variables:</b>  mute value: 0 for not muted, 1 for muted.</p> <p>• <b>Examples:</b>  SEND_COMMAND Panel,"^MUT-I"  Mute the controller volume.  SEND_COMMAND Panel,"^MUT-0"" Unmute the controller volume.</p>
<b>?MUT</b>	<p>Query Panel Mute Status - Query the mute status of the panel.</p> <p>• <b>Syntax:</b>  ""?MUT""</p> <p>• <b>Variables:</b> None</p> <p>• <b>Example:</b>  SEND_COMMAND Panel,""?MUT""</p>



## Panel Commands

	<p>Get the panel's mute status. The response returned is a custom event with the following syntax:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>0</td> </tr> <tr> <td>Type</td> <td>1305</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>mute status (0 unmuted or 1 for muted)</td> </tr> <tr> <td>Value 2</td> <td>0</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>String that represents the mute status (0 or 1)</td> </tr> </tbody> </table> <p>• <b>Example response for muted status:</b></p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>0</td> </tr> <tr> <td>Type</td> <td>1305</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>1</td> </tr> <tr> <td>Value 2</td> <td>0</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>1</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	0	Type	1305	Flag	0	Value 1	mute status (0 unmuted or 1 for muted)	Value 2	0	Value 3	0	Text	String that represents the mute status (0 or 1)	Custom Event Property	Value	Port	port command was received on	ID	0	Type	1305	Flag	0	Value 1	1	Value 2	0	Value 3	0	Text	1
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	0																																				
Type	1305																																				
Flag	0																																				
Value 1	mute status (0 unmuted or 1 for muted)																																				
Value 2	0																																				
Value 3	0																																				
Text	String that represents the mute status (0 or 1)																																				
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	0																																				
Type	1305																																				
Flag	0																																				
Value 1	1																																				
Value 2	0																																				
Value 3	0																																				
Text	1																																				
<p><b>^NOT</b></p>	<p>Popup Note Command - A generic popup note message that can be used to display information for a short duration on the display.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> '^NOT-note_text, duration, location, text_size'</li> <li>• <b>Variables:</b> None            note_text - The text to displayed in the popup note.            duration - The time in milliseconds to display the popup note            location - Where to display the popup note. Options are 'c' for CENTERED on display, 't' for TOP CENTER on display, and 'b' for BOTTOM CENTER on display. Any other value will be displayed as CENTER.            text_size - The size value to display the popup note text. Default is 18.            Note: The note text field can be put into quotations (" ") so that commas can be used in text. Like the CSV parser, if a " is needed in the text, the " can be escaped by a perpending another " (e.g. ""). Note text is assumed to be UTF-8 encoded.</li> </ul>																																				
<p><b>^PKB</b> <b>@PKB</b> <b>PKEYB</b></p>	<p>Show System Private Keyboard Command - Brings up system private keyboard (the same as the system keyboard, with typed text hidden with the "*" character). When user presses the "Done" button, a string is returned to the controller with the user-entered value. The keyboard can be removed either by the Back button or the "^AKR" command. The '@PKB' and 'PKEYB' commands are implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>            ""^PKB-&lt;initial text&gt;;&lt;prompt text&gt;;&lt;hint text&gt;;&lt;return prefix&gt;;&lt;return port&gt;"" or            ""@PKB-&lt;initial text&gt;;&lt;prompt text&gt;;&lt;hint text&gt;;&lt;return prefix&gt;;&lt;return port&gt;"" or            ""PKEYB-&lt;initial text&gt;;&lt;prompt text&gt;;&lt;hint text&gt;;&lt;return prefix&gt;;&lt;return port&gt;'</li> <li>• <b>Variables:</b>            Initial text - Pre-populated text to appear on keyboard (i.e. default). Note that for the private keyboard, this text will be hidden.            Prompt text - Descriptive header to appear above keyboard text entry box            Hint Text - Hint text to appear behind the keyboard text entry box            Return prefix - Prefix to the send string returned to the controller. If not specified, the entered text will be preceded by "PKB-".            Return port - The port number to return the response on if different than the port to which the command is sent.</li> <li>• <b>Examples:</b></li> </ul> <table border="1"> <tr> <td data-bbox="391 1856 1062 1883">""^PKB-;,,,; ""</td> <td data-bbox="1062 1856 1507 1883"></td> </tr> </table>	""^PKB-;,,,; ""																																			
""^PKB-;,,,; ""																																					

## Panel Commands

	<p>Keyboard string will return on port 1 with a prefix of PKB-  <code>""^PKB-Enter Text;;; ""</code>            Text window shows asterisks            (If you do not clear this text before typing in your string it will be returned with the string)            String will return on port 1 with a prefix of PKB-</p> <p><code>""^PKB-;Prompt Text;;; ""</code>            Text window blank            Top prompt text says Prompt Text            String will return on port 1 with a prefix of PKB-</p> <p><code>""^PKB-;;Hint Text;; ""</code>            Text window blank            Top prompt text blank            Hint text says Hint Text (disappears once you start typing)            String will return on port 1 with a prefix of PKB-</p> <p><code>""^PKB-;;;RF-; ""</code>            Text window blank            Top prompt text blank            Hint text blank            String will return on port 1 with a prefix of RF-</p> <p><code>""^PKB-;;;2 ""</code>            Text window blank            Top prompt text blank            Hint text blank            String will return on port 2 with a prefix of PKB-</p>	  
<p>You can mix and match all parameters, but they must all be accounted for when you send the command. Use semicolons as placeholders.</p>		
<p><b>^PKP</b>  <b>@PKP</b>  <b>PKEYP</b></p>	<p>Show System Private Keypad Command - Brings up system private keypad (the same as the system keypad, with typed text hidden with the '*' character). When user presses the "Done" button, a string is returned to the controller with the user entered value. The keypad can be removed either by the Back button or the "^AKR" command. The '@PKP' and 'PKEYP' commands are implemented for G4 compatibility.</p> <p>• <b>Syntax:</b>  <code>""PKEYP-[optional initial text];[optional prompt text];[optional hint text]; [optionalreturn prefix];[optional return port]""</code></p> <p>• <b>Variables:</b>            Initial text: Pre-populated text to appear on keypad (1 - 50 ASCII characters). Note that for the private keypad, this text will be hidden.            Prompt text: Descriptive header to appear above keypad text entry box            Hint Text: Hint text to appear behind the keypad text entry box            Return prefix: Prefix to the send string returned to the controller. If not specified, the entered text will be preceded by "PKP-".            Return port: The port number to return the response on if different than the port to which the command is sent.</p> <p>• <b>Examples:</b></p>	
<p><code>""^PKP-;;; ""</code>            Keyboard string will return on port 1 with a prefix of PKP-</p>	<p><code>""^PKP-Enter Text;;; ""</code>            Text window shows asterisks</p>	

## Panel Commands

	<p>(If you do not clear this text before typing in your string it will be returned with the string) String will return on port 1 with a prefix of PKP-</p>	
	<p>""^PKP-;;Prompt Text;;; "" Text window blank Top prompt text says Prompt Text String will return on port 1 with a prefix of PKP-</p>	
	<p>""^PKP-;;Hint Text;;; "" Text window blank Top prompt text blank Hint text says Hint Text (disappears once you start typing) String will return on port 1 with a prefix of PKP-</p>	
	<p>""^PKP-;;;RF-; "" Text window blank Top prompt text blank Hint text blank String will return on port 1 with a prefix of RF-</p>	
	<p>""^PKP-;;;2 "" Text window blank Top prompt text blank Hint text blank String will return on port 2 with a prefix of PKP-</p>	
	<p>You can mix and match all parameters, but they must all be accounted for when you send the command. Use semicolons as placeholders.</p>	
<b>^RPP</b>	<p>Reset protected password command - This command is used to reset the protected setup password to the factory default value.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^RPP""</li> <li>• <b>Variables:</b> None</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"""^RPP"" Reset the panel protected password to the factory default.</li> </ul>	
<b>^RSS</b>	<p>Reset System Settings Command - Reset Settings to factory default.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^RSS""</li> <li>• <b>Variables:</b> None</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"""^RSS"" Reset the panel to factory default settings.</li> </ul>	
<b>RXON</b>	<p>Send string on command (generated by NetLinx controller) - Enable device to send STRING changes to the controller. By default, devices will not report STRING changes unless a RXON command is received. The RXON command is automatically sent by the controller to the device if:</p>	

## Panel Commands

	<p>There is a DATA/STRING event for the DPS of the device. There is a CREATE_BUFFER defined in the NetLinx program for the DPS of the device.</p> <p>• <b>Syntax:</b> "RXON"</p> <p><b>Variables:</b> None</p>																		
<b>RXOF</b>	<p>Send string off command (generated by NetLinx controller) - Disable the device from sending STRING changes to the controller. By default, devices will not report STRING changes unless a RXON command is received. The RXON command is automatically sent by the controller to the device if: There is a DATA/STRING event for the DPS of the device. There is a CREATE_BUFFER defined in the NetLinx program for the DPS of the device.</p> <p>• <b>Syntax:</b> "RXOF"</p> <p><b>Variables:</b> None</p>																		
<b>SHUTDOWN</b>	<p>Power Off the Panel Command - Receipt of this command will cause the panel to power off.</p> <p>• <b>Syntax:</b> "SHUTDOWN"</p> <p><b>Variables:</b> None</p>																		
<b>^SCO</b>	<p>Session clear out command - Clears session data for some applications (Browser, Firefox, Gallery, Skype, Dropbox, VNC server, PlanMaker, TextMaker, and Presentations).</p> <p>• <b>Syntax:</b> '^SCO'</p> <p><b>Variables:</b> None</p>																		
<b>^SLP SLEEP</b>	<p>Panel Sleep Command - Place the panel in sleep state. Sleep state turns the display off. The 'SLEEP' command is implemented for G4 compatibility.</p> <p><b>Syntax:</b> "^SLP" or "SLEEP"</p> <p>• <b>Variables:</b>None</p> <p>• <b>Example:</b> SEND COMMAND Panel,"^SLP" Sends the panel to the sleep (display off)</p> <p>The response returned is a custom event with the following syntax:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>1</td> </tr> <tr> <td>Type</td> <td>1701</td> </tr> <tr> <td>Flag</td> <td>3</td> </tr> <tr> <td>Value 1</td> <td>0</td> </tr> <tr> <td>Value 2</td> <td>0</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>com.amx.touchpanel.Gx/com.amx.touchpanel.GxActivity</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	1	Type	1701	Flag	3	Value 1	0	Value 2	0	Value 3	0	Text	com.amx.touchpanel.Gx/com.amx.touchpanel.GxActivity
Custom Event Property	Value																		
Port	port command was received on																		
ID	1																		
Type	1701																		
Flag	3																		
Value 1	0																		
Value 2	0																		
Value 3	0																		
Text	com.amx.touchpanel.Gx/com.amx.touchpanel.GxActivity																		

## Panel Commands

<p><b>^SOU</b> <b>@SOU</b></p>	<p>Play Sound Command - Plays a specified sound file. The '@SOU' command is implemented for G4 compatibility.</p> <p><b>Syntax:</b> ""^SOU-&lt;sound name&gt;"" or ""SLEEP""</p> <p>• <b>Variables:</b> sound name: Name of the sound file. Supported sound file formats are: WAV &amp; MP3.</p> <p>• <b>Example:</b> SEND COMMAND Panel, ""^SOU-Music.wav"" Plays the 'Music.wav' file.</p>
<p><b>^SSL</b> <b>@SSL</b></p>	<p>Set the Sleep String Command - Set the content of the string that is sent to the controller when the panel goes to sleep (display off). The '@SSL' command is implemented for G4 compatibility.</p> <p><b>Syntax:</b> ""^SSL-&lt;sleep string&gt;"" or ""@SSL-&lt;sleep string&gt;""</p> <p>• <b>Variables:</b> Sleep string: The string sent to the controller when the panel goes to sleep.</p> <p>• <b>Example:</b> SEND COMMAND Panel, ""^SSL-Sleeping..."" Sets the sleep string to 'Sleeping...'.</p>
<p><b>^STP</b> <b>SETUP</b></p>	<p>Settings application command - Open the Settings Applications. The 'SETUP' command is implemented for G4 compatibility.</p> <p>• <b>Syntax:</b> ""^STP"" or ""SETUP""</p> <p>• <b>Variables:</b>None</p> <p>• <b>Example:</b> SEND COMMAND Panel, ""^STP"" Opens the Settings application.</p>
<p><b>^SWK</b> <b>@SWK</b></p>	<p>Set the Wake String Command - Set the content of the string that is sent to the controller when the panel wakes up from sleep (display on). The '@SWK' command is implemented for G4 compatibility.</p> <p><b>Syntax:</b> ""^SWK-&lt;wake string&gt;"" or ""@SWK-&lt;wake string&gt;""</p> <p>• <b>Variables:</b> Wake string: The string sent to the controller when the panel wakes up from sleep.</p> <p>• <b>Example:</b> SEND COMMAND Panel, ""^SWK-Wakeing Up..."" Sets the sleep string to 'Waking Up...'.</p>
<p><b>^TKP</b> <b>@TKP</b></p>	<p>Brings up system telephone keypad - Currently, these keypads are the same, and have all the keys that the G4 extended keypad had except the ":" key. When user presses the "Done" button, a string is returned to the controller with the user entered value. The keypad can be removed either by the Back button or the "^AKR" command. The '@TKP' command is implemented for G4 compatibility.</p>

## Panel Commands

	<p>• <b>Syntax:</b>  <code>^ATKP-[optional initial text];[optional prompt text];[optional hint text]; [optional return prefix];[optional return port]"</code></p> <p>• <b>Variables:</b>  Initial text: Pre-populated text to appear on keypad (i.e. default)  Prompt text: Descriptive header to appear above keypad text entry box  Hint Text: Hint text to appear behind the keypad text entry box  Return prefix: Prefix to the send string returned to the controller. If not specified, the entered text will be preceded by "TKP-".  Return port: The port number to return the response on if different than the port to which the command is sent. Note: See also - ^EKP (system telephone keypad).</p>
<p><b>^TOP</b></p>	<p>Enables/disables touch output to Master. If enabled, Press/Move/Release events are sent to the Master as string events.</p> <p>• <b>Syntax:</b>  <code>^TOP-&lt;state&gt;"</code></p> <p>• <b>Variables:</b>  &lt;state&gt; :  - 0 (disable)  - 1 (presses/releases)  - 2 (moves)  - 3 (press/move/release).</p> <p>Note: <b>Move</b> should be used with caution. This setting can generate a significant amount of traffic to the master depending on user interaction.</p> <p>• <b>Example:</b>  SEND COMMAND Panel,"^TOP-1"</p> <p>• <b>Example Response:</b>  "String Event: Text: Press,320,480"  "String Event: Text: Release,320,480"</p>
<p><b>^TPF TPAGEOF</b></p>	<p>Turn Off Page Tracking Command. The 'TPAGEOF' command is implemented for G4 compatibility.</p> <p>• <b>Syntax:</b>  <code>^TPF"</code> or  <code>^TPF"</code></p> <p>• <b>Variables:</b> None</p> <p>• <b>Example:</b>  SEND COMMAND Panel,"^TPF"</p>
<p><b>^TPN TPAGEON</b></p>	<p>Turn On Page Tracking Command - This command turns on page tracking, whereby when the page or popups change, a string is sent to the Controller. This string may be captured with a CREATE_BUFFER command for one panel and sent directly to another panel. The 'TPAGEON' command is implemented for G4 compatibility.</p> <p>• <b>Syntax:</b>  <code>^TPN"</code> or  <code>TPAGEON"</code></p> <p>• <b>Variables:</b> None</p> <p>• <b>Example:</b>  SEND COMMAND Panel,"^TPN"</p>

## Panel Commands

<p><b>^VKB</b> <b>@VKB</b></p>	<p>Show Virtual Keyboard Command - Brings up system virtual keyboard, which is the keyboard without a designated text entry area. A Text Input button must be in focus; if not, the keyboard will not appear. The type of keyboard is determined by the Text Area currently in focus. When user presses the “Done” button, a string is returned to the controller with the userentered value. The keyboard can be removed either by the Back button or the “^AKR” command. The ‘@VKB’ command is implemented for G4 compatibility.</p> <p><b>Syntax:</b> “^VKB”</p> <ul style="list-style-type: none"> <li>• <b>Variables:</b> None</li> </ul>
<p><b>^VKP</b> <b>@VKP</b></p>	<p>Show Virtual Keypad Command - Brings up system virtual keypad, which is the keypad without a designated text entry area. A Text Input button must be in focus; if not, the keypad will not appear. The type of keypad is determined by the Text Area currently in focus. When user presses the “Done” button, a string is returned to the controller with the user-entered value. The keypad can be removed either by the Back button or the “^AKR” command. The ‘@VKP’ command is implemented for G4 compatibility.</p> <p><b>Syntax:</b> “^VKP”</p> <ul style="list-style-type: none"> <li>• <b>Variables:</b> None</li> </ul>
<p><b>^VKS</b></p>	<p>Virtual Key Stroke Command - Sends a Virtual Key Stroke to the Varia touch panel. Note: this command does not function in the same way as with G4 touch panels.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^VKS-&lt;keycode&gt;” or “^TPF”</li> <li>• <b>Variables:</b> None keycode: Android key code decimal value. Note that these are not the same as in G4.</li> </ul> <p>Note: For the key code values, please refer to the Virtual Keystroke Commands table.</p>
<p><b>^VOL</b></p>	<p>Set Volume Command - Set the [specified] volume.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^VOL,&lt;level&gt;,[optional type]”</li> <li>• <b>Variables:</b> Level: the volume level from 0-100. The level will be scaled according to the platforms abilities. Type (option): Change the volume of the given type 0 = Controller volume (change all volumes simultaneously). Used by default if no type is specified. This is not a real volume, but instead is a virtual value that changes all other volume type concurrently. 10 = Alarm Volume 11 = Call Volume 12 = Media Volume 13 = Notification Volume 44 = Display the volume dialog (level is ignored) Note: the platform dialog sliders will NOT update if they are displayed when the command is received. They are accurate, however, if displayed after receiving the command.</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,“^VOL,50” Sets the controller volume to 50. SEND_COMMAND Panel,“^VOL,50,0” Sets the controller volume to 50.</li> </ul>
<p><b>?VOL</b></p>	<p>Query Volume Command - Query the volume.Note: Allow 10-15 minutes for update to complete before sending another ^UPD command.</p>

## Panel Commands

	<p>• <b>Syntax:</b>          ""?VOL,[optional type]""</p> <p>• <b>Variables:</b>          Type (option) Get the volume of the given type          0 = Controller volume. Used by default if no type is specified. Since Controller volume is not a real volume, the value returned will actually be the Media Volume Value.          10 = Alarm Volume          11 = Call Volume          12 = Media Volume          13 = Notification Volume</p> <p>The response returned is a custom event with the following syntax:          Custom Event Property Value          Port port command was received on          ID 0          Type 1306          Flag 0          Value 1 volume level          Value 2 volume type          Value 3 0          Text String containing 'type=level'</p> <p>• <b>Examples:</b>          SEND_COMMAND Panel,""?VOL""          Query the Controller volume. Response would be similar to:          Custom Event Property Value          Port port command was received on          ID 0          Type 1306          Flag 0          Value 1 80          Value 2 0          Value 3 0          Text Controller=80          SEND_COMMAND Panel,""?VOL,10""          Query the Alarm volume. Response would be similar to:          Custom Event Property Value          Port port command was received on          ID 0          Type 1306          Flag 0          Value 1 20          Value 2 10          Value 3 0          Text Media=72</p>
<p><b>^WCN</b></p>	<p>Web Control Name (Panel to Controller) - Report the Web Control (VNC) name to the controller. This is originated in the panel and sent to the controller if VNC is enabled.</p>
<p><b>WEBU</b></p>	<p>Update Firmware from URL - This command tells the panel to retrieve a firmware kit file from the included URL and update to the firmware included in that kit file.</p> <p>• <b>Syntax:</b>          ""WEBU-&lt;url&gt;""</p> <p>• <b>Variables:</b>          url: URL to the kit file. Support protocols are HTTP only at this time.</p> <p>• <b>Example:</b></p>

## Panel Commands

	<p>SEND_COMMAND PANEL,""WEBU,http://file.server/VARIA-firmware.kit"" Download and install the VARIA-firmware.kit file from the HTTP server file.server.</p>																		
<p><b>^WKE</b> <b>WAKE</b></p>	<p>Panel Wakeup Command - Place the panel in wake state. Wake state turns the display on. The 'WAKE' command is implemented for G4 compatibility.</p> <p>• <b>Syntax:</b> ""^WKE""</p> <p>• <b>Variables:</b> None</p> <p>• <b>Example:</b> SEND COMMAND Panel,""^WKE"" Wakes the panel from sleep (turn display on)</p> <p>The response returned is a custom event with the following syntax:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>1</td> </tr> <tr> <td>Type</td> <td>1701</td> </tr> <tr> <td>Flag</td> <td>4</td> </tr> <tr> <td>Value 1</td> <td>0</td> </tr> <tr> <td>Value 2</td> <td>0</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>com.amx.touchpanel.Gx/com.amx.touchpanel.GxActivity</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	1	Type	1701	Flag	4	Value 1	0	Value 2	0	Value 3	0	Text	com.amx.touchpanel.Gx/com.amx.touchpanel.GxActivity
Custom Event Property	Value																		
Port	port command was received on																		
ID	1																		
Type	1701																		
Flag	4																		
Value 1	0																		
Value 2	0																		
Value 3	0																		
Text	com.amx.touchpanel.Gx/com.amx.touchpanel.GxActivity																		
<p><b>^WLD</b></p> <p><b>Firmware</b> <b>1.11.xx</b></p>	<p>LEGACY Side LED Command - turn on/off the side LEDs. LEDs can be turned on any RGB color.</p> <p><b>Syntax:</b> ""^WLD-&lt;command&gt;,&lt;action&gt;""</p> <p><b>Variables:</b></p> <p>COMMAND</p> <p>Indicates the LED ID number or Brightness.</p> <ul style="list-style-type: none"> <li>• 0 - All LED status</li> <li>• 1 - Red</li> <li>• 2 - Green</li> <li>• 3 - Blue</li> <li>• 10 - All LED brightness</li> <li>• 11 - Red brightness</li> <li>• 12 - Green brightness</li> <li>• 13 - Blue brightness</li> </ul> <p>ACTION</p> <p>For LED on/off commands 0, 1, 2, 3:</p> <ul style="list-style-type: none"> <li>• 0 - Turns LED Off</li> <li>• 1 - Turns LED On</li> </ul> <p>For LED Brightness commands: 0 - 100 : Percentage of LED brightness when LED is on.</p> <p><b>Examples:</b> SEND_COMMAND Panel,""^WLD-1,1"" // Turn on the Red LED SEND_COMMAND Panel,""^WLD-10,50"" // Set the Red, Blue and Green LED brightness to 50%.</p>																		

## Panel Commands

<p><b>^WLD</b></p> <p><b>Firmware</b> <b>2.13.xx</b></p>	<p>Side LED Command - turn on/off the side LEDs. LEDs can be turned on any RGB color.</p> <p><b>Syntax:</b> "<b>^WLD</b>-&lt;command&gt;,&lt;action&gt;"</p> <p><b>Variables:</b></p> <p>COMMAND</p> <p>Indicates the LED color using hex format</p> <ul style="list-style-type: none"><li>• 20 – Red/Green/Blue hex value format, <i>RRGGBB</i></li></ul> <p>ACTION</p> <p>For LED color commands</p> <ul style="list-style-type: none"><li>• <b>00 thru ff</b> sets the LED color to that value</li></ul> <p><b>Examples:</b></p> <p>SEND_COMMAND Panel,"<b>^WLD</b>-20,ff0000" // Side LEDs show red SEND_COMMAND Panel,"<b>^WLD</b>-20,00ff00" // Side LEDs show green SEND_COMMAND Panel,"<b>^WLD</b>-20,0000ff" // Side LEDs show blue</p> <p>SEND_COMMAND Panel,"<b>^WLD</b>-20,ff3300" // Side LEDs show orange SEND_COMMAND Panel,"<b>^WLD</b>-20,ff00ff" // Side LEDs show pink</p> <p>SEND_COMMAND Panel,"<b>^WLD</b>-20,ffffff" // Side LEDs show white SEND_COMMAND Panel,"<b>^WLD</b>-20,000000" // Side LEDs show black (off)</p>
--	--

## Page Commands

Page Commands are case in-sensitive

Page Commands				
^AFP	Flip to specified page using the named animation. <ul style="list-style-type: none"> <li><b>Syntax:</b>                ""^AFP-&lt;page name&gt;,&lt;animation&gt;,&lt;origin&gt;,&lt;duration&gt;""</li> <li><b>Variables:</b>  <i>Page Name:</i> If the page name is blank, flip the to the previous page <i>Animation:</i> If blank/invalid, the default animation is <i>Fade</i>.</li> </ul>			
	Animation Name	Command Snytax* (see note below)	Origin(s)	Default Origin
	Center Door Fade	cntrdrfade, centerdoorfade, or center door fade	top(2), bottom(3), left(4), right(5)	right(5)
	Door Fade	doorfade, door fade, or door	top(2), bottom(3), left(4), right(5)	right(5)
	Fade	fade	center(1)	center(1)
	Slide	slide	top(2), bottom(3), left(4), right(5)	right(5)
	Slide Bounce	sldbouce, slidebounce, or slide bounce	top(2), bottom(3), left(4), right(5)	right(5)
	Spin In	spinin or spin in	center(1)	center(1)
	Spin Out	spinout or spin out	center(1)	center(1)
	Zoom In	zoomin or zoom in	center(1)	center(1)
	Zoom Out	zoomout or zoom out	center(1)	center(1)
<i>Note: Multiple aliases for the transition name command syntax are allowed to maintain backwards compatibility with G4.</i>				
<i>Duration:</i> Transition time in 10ths of a second. Range is 3-30 with 15 (1.5 seconds) as the default <ul style="list-style-type: none"> <li><b>Examples:</b>                SEND_COMMAND Panel,""^AFP-NextPage,slide,4,5"                Flip to NextPage sliding from the left for half a second.                SEND_COMMAND Panel,""^AFP-,centerdoorfade,2,10"                Flip to NextPage center door fade from the top for a second.</li> </ul>				
^APCL	Collapse Collapsible Popup Command - Moves the named closeable popup to the collapsed position. <ul style="list-style-type: none"> <li><b>Syntax:</b>                ""^APCL-&lt;popup name&gt;[optional target page]""</li> <li><b>Variables:</b>  <i>Popup name:</i> the name of the popup to collapse  <i>Target page:</i> name of the page hosting the popup to affect the change upon. If target page is not specified, the command is applied to the current page.</li> <li><b>Examples:</b>                SEND_COMMAND Panel,""^APCL-Contacts"                Collapse the Contacts popup on the current page.                SEND_COMMAND Panel,""^APCL-Contacts;Teleconference Control"                Collapse the <i>Contacts</i> popup on the Teleconference Control pages</li> </ul>			
^APCT	Collapsible Popup Custom Toggle Command - This is an advanced "toggle" command for collapsible popups, working with a comma-separated list of commands. This list is parsed and a command table is created. Based on the current state of the collapsible popup, the correct command is executed. <p><i>Note: The previously parsed list is saved and is only parsed again if the command string differs for this popup.</i></p>			

## Page Commands

	<ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^PCT-&lt;popup&gt;,&lt;custom toggle commands&gt;;[optional target page]""</code></li> <li>• <b>Variables:</b>  <i>Popup:</i> popup name  <i>Custom toggle commands:</i> a comma separated list of commands. This list is parsed and a command table is created. The state letters are as follows: o - open c - collapsed d - dynamic, followed by an integer indicating the offset.  * - wildcard, always last in the list  Before and after states are separated by -&gt; characters.  <i>Target page:</i> name of the page hosting the popup to affect the change upon. If target page is not specified, the command is applied to the current page.</li> <li>• <b>Example:</b>  SEND_COMMAND Panel,"""^PCT-RightSlider,c-&gt;o,o-&gt;d100,*-&gt;c""  The popup named <i>RightSlider</i> opens if collapsed, move to d100 if open, and collapse otherwise.</li> </ul>
^PDO	<p>Collapsed Popup Dynamic Offset Command - Moves the collapsible popup to a specific offset position relative to the collapsed direction configured for the popup. This allows other positions besides open and collapsed.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^PDO-&lt;popup name&gt;,&lt;offset&gt;;[optional target page]""</code></li> <li>• <b>Variables:</b>  <i>Popup name:</i> name of the popup to affect  <i>offset:</i> number of pixels to offset (hide). &lt;offset&gt; is constrained as follows: 0 &lt;= offset &lt;= collapsed offset  <i>Target page:</i> name of the page hosting the popup to affect the change upon. If target page is not specified, the command is applied to the current page.</li> <li>• <b>Examples:</b>  <code>""^PDO-RightSlider,66""</code>  Move popup named <i>RightSlider</i> to an offset position of 66 on the current page.  <code>""^PDO-RightSlider,66;Media Controls""</code>  Move popup named <i>RightSlider</i> to an offset position of 66 on the Media Controls page.</li> </ul>
^PGE PAGE	<p>Page Flip Command - Flips to a page with a specified page name. If the page is currently active, it will not redraw the page. The 'PAGE' command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^PGE-&lt;page name&gt;""</code> or  <code>""PAGE-&lt;page name&gt;""</code></li> <li>• <b>Variables:</b> <i>page name:</i> Name of the page to be displayed. If left blank, the page flips back to the previous page.</li> <li>• <b>Examples:</b>  SEND_COMMAND Panel,"""^PGE-Page1""  Flips to page1.  SEND_COMMAND Panel,"""^PGE-""  Flips to the previous page.</li> </ul>
^POP	<p>Open Collapsible Popup Command - Moves the named collapsible popup to the open position.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^POP-&lt;popup&gt;;[optional target page]""</code></li> <li>• <b>Variables:</b>  <i>Popup:</i> the name of the popup to collapse  <i>Target page:</i> name of the page hosting the popup to affect the change upon. If target page is not specified, the command is applied to the current page.</li> <li>• <b>Example:</b>  SEND_COMMAND Panel, ""^POP-Contacts""  Open the <i>Contacts</i> popup on the current page.  SEND_COMMAND Panel, ""^POP-Contacts;Teleconference Control""</li> </ul>

## Page Commands

	<p>Open the <i>Contacts</i> popup on the Teleconference Control page.</p>
<p><b>^PPA</b> <b>@PPA</b></p>	<p>Close All Popups Command - Close all popups on a specified page. The '@PPA' command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^PPA-&lt;page name&gt;"" or ""@PPA-&lt;page name&gt;""</li> <li>• <b>Variables:</b> <i>Page name:</i> Name of the page to close all popups on. If no name is specified, then the current page will have all popups closed.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^PPA-Page1" Close all pop-ups on Page1.</li> </ul>
<p><b>^PPF</b> <b>@PPF</b> <b>PPOF</b></p>	<p>Popup Page Off Command - Detach a popup from a page. If the page name is empty, the current page is used. If the popup page is part of a group, the whole group is deactivated. This command works in the same way as the 'Hide Popup' command in TPDesign 5. The '@PPF' and 'PPOF' commands are implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^PPF-&lt;popup page name&gt;:[optional page name]"" or ""@PPF-&lt;popup page name&gt;:[optional page name]"" or ""PPOF-&lt;popup page name&gt;:[optional page name]""</li> <li>• <b>Variables:</b> <i>Popup page name:</i> name of the popup page. <i>page name:</i> name of the page the popup is displayed On. If not specified the popup is detached from the current page.</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,"^PPF-Popup1;Main" Detach the popup 'Popup1' from page 'Main'. SEND_COMMAND Panel,"@PPF-Popup1" Detach the popup page 'Popup1' from the current page.</li> </ul>
<p><b>^PPG</b> <b>@PPG</b> <b>PPOG</b></p>	<p>Toggle a Popup Page - Toggle a specific popup page. If the page name is empty, the current page is used. Toggling refers to the activating/deactivating (On/Off) of a popup page. This command works in the same way as the 'Toggle Popup' command in TPDesign. The '@PPG' and 'PPOG' commands are implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^PPG-&lt;popup page name&gt;:[optional page name]"" or ""@PPG-&lt;popup page name&gt;:[optional page name]"" or ""PPOG-&lt;popup page name&gt;:[optional page name]""</li> <li>• <b>Variables:</b> <i>Popup page name:</i> the name of the popup page. <i>Page name:</i> name of the page the popup is toggled on. If not specified the popup is toggled on the current page.</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,"^PPG-Popup1;Main" Toggles the popup page 'Popup1' on the 'Main' page from one state to another (On/Off). SEND_COMMAND Panel,"@PPG-Popup1" Toggles the popup page 'Popup1' on the current page from one state to another (On/Off).</li> </ul>
<p><b>^PPK</b> <b>@PPK</b></p>	<p>Kill Popup Page Command - Kill a specific popup page from all pages. Kill refers to the deactivating (Off) of a popup window from all pages. If the pop-up page is part of a group, the whole group is deactivated. This command works in the same way as the 'Clear Group' command in TPDesign. The '@PPK' command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^PPK-&lt;popup page name&gt;"" or ""@PPK-&lt;popup page name&gt;""</li> <li>• <b>Variables:</b> <i>Popup page name:</i> name of the popup page.</li> </ul>

Page Commands	
	<ul style="list-style-type: none"> <li><b>Example:</b> SEND_COMMAND Panel,"^APPK-Popup1" Kills the popup page 'Popup1' on all pages.</li> </ul>
<b>^PPM</b> <b>@PPM</b>	<p>Popup modal command - Set whether a popup is modal or not modal. The '@PPM' command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^PPM-&lt;popup page name&gt;;&lt;modal 1 0&gt;"" or ""@PPM-&lt;popup page name&gt;;&lt;modal mode 1 0&gt;""</li> <li><b>Variables:</b> <i>Popup page name:</i> Name of the popup page. <i>Modal mode:</i> 1 if modal, 0 if non-modal.</li> <li><b>Example:</b> SEND_COMMAND Panel,"^PPM-Popup1;1" Set the popup page named Popup1 to modal mode.</li> </ul>
<b>^PPN</b> <b>@PPN</b> <b>PPON</b>	<p>Attach a popup on a page - Attach a specific popup page to launch on either a specified page or the current page. If the page name is empty, the current page is used. If the popup page is already on, do not re-draw it. This command works in the same way as the 'Show Popup' command in TPDesign5. The '@PPN' and 'PPON' commands are implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^PPN-&lt;popup page name&gt;;[optional page name]"" or ""@PPN-&lt;popup page name&gt;;[optional page name]"" or ""PPON-&lt;popup page name&gt;;[optional page name]""</li> <li><b>Variables:</b> <i>Popup page name:</i> name of the popup page. <i>page name:</i> name of the page the popup is displayed On. If the page name is not specified the current page is used.</li> <li><b>Examples:</b> SEND_COMMAND Panel,"^PPN-Popup1;Main" Activates 'Popup1' on the 'Main' page. SEND_COMMAND Panel,"^PPN-Popup1" Activates the popup page 'Popup1' on the current page.</li> </ul>
<b>^PPT</b> <b>@PPT</b>	<p>Popup Timeout Command - Set the popup to close after timeout. The '@PPT' command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^PPT-&lt;popup page name&gt;;&lt;timeout&gt;"" or ""@PPT-&lt;popup page name&gt;;&lt;timeout&gt;""</li> <li><b>Variables:</b> <i>Popup page name:</i> the name of the popup to apply the timeout to. Popup must be visible on screen in order to apply timeout. <i>Timeout:</i> the time in tenths of seconds (10 = 1 second) or 0 to cancel timeout. <i>Note:</i> Successive calls to timeout will reset the timeout. A timeout of 0 cancels the timeout and the popup stays open.</li> <li><b>Examples:</b> SEND_COMMAND Panel,"^PPT-MyPopup;150" Close MyPopup after 15 seconds.</li> </ul>
<b>^PPX</b> <b>@PPX</b>	<p>Close All Popup Pages Command - Close all popups on all pages. This command works in the same way as the 'Clear All' command in TPDesign5. The '@PPX' command is implemented for G4 compatibility.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^PPX"" or ""@PPX""</li> <li><b>Variables:</b> None</li> <li><b>Example:</b> SEND_COMMAND Panel,"^PPX"</li> </ul>

## Page Commands

	Close all popups on all pages.
<b>^PTC</b>	<p>Toggle Collapsible Popup Collapsed Command - Toggles the named collapsible popup between the open and collapsed positions. More specifically, if the popup is not fully collapsed, it is collapsed.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^PTC-&lt;popup&gt;;[optional target page]""</code></li> <li>• <b>Variables:</b>  <i>Popup</i>: the name of the popup to toggle  <i>Target page</i>: name of the page hosting the popup to affect the change upon. If target page is not specified, the command is applied to the current page.</li> <li>• <b>Examples:</b>  <code>SEND_COMMAND Panel,"^PTC-Contacts"</code>  Toggle the Contacts popup collapsed on the current page.  <code>SEND_COMMAND Panel,"^PTC-Contacts;Teleconference Control"</code>  Toggle the Contacts popup collapsed on the Teleconference Control page.</li> </ul> <p><i>Note: Collapsible popup send commands do not automatically show the popup on the target page. The popup must be first shown with a standard show command. This applies even when the collapsible popup is a member of a popup group. For all of these commands, if the target page is blank, the current page is used. If the named popup is not collapsible, the commands are ignored.</i></p>
<b>^PTO</b>	<p>Toggle Collapsed Popup Open Command - Toggles the named collapsible popup between the open and collapsed positions. More specifically, if the popup is not fully open, it is opened.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^PTO-&lt;popup&gt;;[optional target page]""</code></li> <li>• <b>Variables:</b>  <i>Popup</i>: the name of the popup to toggle  <i>Target page</i>: name of the page hosting the popup to affect the change upon. If target page is not specified, the command is applied to the current page.</li> <li>• <b>Examples:</b>  <code>SEND_COMMAND Panel,^PTO-Contacts'</code>  Toggle the Contacts popup open on the current page.  <code>SEND_COMMAND Panel,^PTO-Contacts;Teleconference Control'</code>  Toggle the Contacts popup open on the Teleconference Control page.</li> </ul> <p><i>Note: Collapsible popup send commands do not automatically show the popup on the target page. The popup must be first shown with a standard show command. This applies even when the collapsible popup is a member of a popup group. For all of these commands, if the target page is blank, the current page is used. If the named popup is not collapsible, the commands are ignored.</i></p>

## Button Commands

Button Commands																																										
<b>^ANI</b>	<p>Multistate Button Animation Command - Commands a multistate button to animate from a starting state to an ending state.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ^ANI-&lt;addr range&gt;,&lt;start state&gt;,&lt;end state&gt;,&lt;time&gt;</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ' ' between addresses includes the range, and &amp; between addresses includes each address. <i>start state:</i> Beginning of button state (0= current state). <i>end state:</i> End of button state. <i>time:</i> In 1/10 second intervals.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^ANI-1,1,10,50" Command button with Address 1 to animate from state 1 to state 10 over 5 seconds.</li> </ul>																																									
	<p>Add page flip action - Add page flip action to a button. This command installs a page flip command to the Button Release event action.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^APF-&lt;addr range&gt;,&lt;page flip action&gt;,&lt;page name&gt; [,&lt;animation&gt;,&lt;origin&gt;,&lt;duration&gt;]""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ' ' between addresses includes the range, and &amp; between addresses includes each address. <i>page flip action:</i> (see the following): Stan[andardPage] - flip to standard page StanAni - flip to standard page with animation PrevAni - flip to previous page with animation Prev[iousPage] - flip to previous page Show[Popup] - Show popup page Hide[Popup] - Hide popup page Togg[lePopup] - toggle popup state ClearG[roup] - clear popup page group from all pages ClearP[age] - clear all popup pages from a page with the specified page name ClearA[ll] - Clear all popup pages from all pages <i>Page Name:</i> the name of the page to flip to, or name of popup to show/hide/toggle <i>Animation:</i> If animated flip, the animation to perform. <i>Origin:</i> If animated flip, the origin of the animation. <i>Duration:</i> Transition time in 10ths of a second. Range is 3-30 with 15 (1.5 seconds) as the default</li> </ul> <table border="1"> <thead> <tr> <th>Animation Name</th> <th>Command Snytax* (see note below)</th> <th>Origin(s)</th> <th>Default Origin</th> </tr> </thead> <tbody> <tr> <td>Center Door Fade</td> <td>cntrdrfade, centerdoorfade, or center door fade</td> <td>top(2), bottom(3), left(4), right(5)</td> <td>right(5)</td> </tr> <tr> <td>Door Fade</td> <td>doorfade, door fade, or door</td> <td>top(2), bottom(3), left(4), right(5)</td> <td>right(5)</td> </tr> <tr> <td>Fade</td> <td>fade</td> <td>center(1)</td> <td>center(1)</td> </tr> <tr> <td>Slide</td> <td>slide</td> <td>top(2), bottom(3), left(4), right(5)</td> <td>right(5)</td> </tr> <tr> <td>Slide Bounce</td> <td>sldbouce, slidebounce, or slide bounce</td> <td>top(2), bottom(3), left(4), right(5)</td> <td>right(5)</td> </tr> <tr> <td>Spin In</td> <td>spinin or spin in</td> <td>center(1)</td> <td>center(1)</td> </tr> <tr> <td>Spin Out</td> <td>spinout or spin out</td> <td>center(1)</td> <td>center(1)</td> </tr> <tr> <td>Zoom In</td> <td>zoomin or zoom in</td> <td>center(1)</td> <td>center(1)</td> </tr> <tr> <td>Zoom Out</td> <td>zoomout or zoom out</td> <td>center(1)</td> <td>center(1)</td> </tr> </tbody> </table> <p><i>Note: Multiple aliases for the transition name command syntax are allowed to maintain backwards compatibility with G4.</i></p> <ul style="list-style-type: none"> <li>• <b>Example:</b> SEND_COMMAND Panel,"^APF-400,StanAni,Main Page,ZoomIn,30" Add animated page flip action to button 400 to flip to Main Page using zoom in for 3 seconds.</li> </ul>			Animation Name	Command Snytax* (see note below)	Origin(s)	Default Origin	Center Door Fade	cntrdrfade, centerdoorfade, or center door fade	top(2), bottom(3), left(4), right(5)	right(5)	Door Fade	doorfade, door fade, or door	top(2), bottom(3), left(4), right(5)	right(5)	Fade	fade	center(1)	center(1)	Slide	slide	top(2), bottom(3), left(4), right(5)	right(5)	Slide Bounce	sldbouce, slidebounce, or slide bounce	top(2), bottom(3), left(4), right(5)	right(5)	Spin In	spinin or spin in	center(1)	center(1)	Spin Out	spinout or spin out	center(1)	center(1)	Zoom In	zoomin or zoom in	center(1)	center(1)	Zoom Out	zoomout or zoom out	center(1)
Animation Name	Command Snytax* (see note below)	Origin(s)	Default Origin																																							
Center Door Fade	cntrdrfade, centerdoorfade, or center door fade	top(2), bottom(3), left(4), right(5)	right(5)																																							
Door Fade	doorfade, door fade, or door	top(2), bottom(3), left(4), right(5)	right(5)																																							
Fade	fade	center(1)	center(1)																																							
Slide	slide	top(2), bottom(3), left(4), right(5)	right(5)																																							
Slide Bounce	sldbouce, slidebounce, or slide bounce	top(2), bottom(3), left(4), right(5)	right(5)																																							
Spin In	spinin or spin in	center(1)	center(1)																																							
Spin Out	spinout or spin out	center(1)	center(1)																																							
Zoom In	zoomin or zoom in	center(1)	center(1)																																							
Zoom Out	zoomout or zoom out	center(1)	center(1)																																							
<b>^BAF</b>	<p>Append UTF-8 Text to State Command - append non-unicode text.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b></li> </ul>																																									

Button Commands	
	<p>""^BAF-&lt;addr range&gt;,&lt;button states range&gt;,&lt;new text&gt;""</p> <ul style="list-style-type: none"> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for general buttons 1 = Off state and 2 = On state). <i>new text:</i> UTF-8 encoded characters.</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,"""^BAF-520,1,ξεσκεπάζω τήν ψυχοφθόρα βδελυγμία"" Appends the UTF-8 text 'ξεσκεπάζω τήν ψυχοφθόρα βδελυγμία' to the button's OFF state</li> </ul>
^BAT	<p>Append Text to State Command - Append non-unicode text.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BAT-&lt;addr range&gt;,&lt;button states range&gt;,&lt;new text&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for general buttons 1 = Off state and 2 = On state). <i>new text:</i> ISO-8859-1 encoded characters</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,"""^BAT-520,1,Enter City"" Appends the text 'Enter City' to the button's OFF state.</li> </ul>
^BAU	<p>Append Unicode Text to State Command - Append unicode text. Same format as ^UNI.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BAU-&lt;addr range&gt;,&lt;button states range&gt;,&lt;unicode text&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>unicode text:</i> Unicode characters must be entered in Hex format.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"""^BAU-520,1,00770062"" Appends Unicode text "00770062" ('wb') to the button's OFF state.</li> </ul>
^BCB	<p>Set Border Color Command - Set the border color to the specified color. Only if the specified border color is not the same as the current color.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BCB-&lt;addr range&gt;,&lt;button states range&gt;,&lt;color value&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>color value:</i> See color table for more information.</li> </ul> <p><i>Note: Colors can be set by Color Numbers, Color name, RGB alpha colors (RRGGBBAA) or RGB colors values (RRGGBB). RGBA and RGB color are given in HEX ASCII prepended by a '#.'</i></p> <ul style="list-style-type: none"> <li>• <b>Examples:</b> SEND_COMMAND Panel,"""^BCB-500.504&amp;510,1,12"" Sets the Off state border color to 12 (Yellow). SEND_COMMAND Panel,"""^BCB-520,2,##FF000080"" Set the ON state border color to RED with opacity at 128 (\$80 / 0x80).</li> </ul>
?BCB	<p>Get Border Color Command - Get the current border color.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b></li> </ul>

## Button Commands

	<p>""?BCB-&lt;addr range&gt;,&lt;button states range&gt;""</p> <ul style="list-style-type: none"> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between address range: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). Value is returned in a custom event with the following properties:</li> </ul> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>Address code of the button responding</td> </tr> <tr> <td>Type</td> <td>1011</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>Button state number</td> </tr> <tr> <td>Value 2</td> <td>Actual length of string (should be 9)</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>Hex encoded color value (ex: #000000FF)</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>• <b>Examples:</b> SEND_COMMAND Panel,""?BCB-529,1" Gets the button 'OFF state' border color. information. The result sent to the Controller would be:</li> </ul> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>529</td> </tr> <tr> <td>Type</td> <td>1011</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>1</td> </tr> <tr> <td>Value 2</td> <td>9</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>#222222FF</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	Address code of the button responding	Type	1011	Flag	0	Value 1	Button state number	Value 2	Actual length of string (should be 9)	Value 3	0	Text	Hex encoded color value (ex: #000000FF)	Custom Event Property	Value	Port	port command was received on	ID	529	Type	1011	Flag	0	Value 1	1	Value 2	9	Value 3	0	Text	#222222FF
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	Address code of the button responding																																				
Type	1011																																				
Flag	0																																				
Value 1	Button state number																																				
Value 2	Actual length of string (should be 9)																																				
Value 3	0																																				
Text	Hex encoded color value (ex: #000000FF)																																				
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	529																																				
Type	1011																																				
Flag	0																																				
Value 1	1																																				
Value 2	9																																				
Value 3	0																																				
Text	#222222FF																																				
^BCF	<p>Background Color Fill Command - Set the background color fill to specified color in state(s).</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BCF-&lt;addr range&gt;,&lt;button state range&gt;,&lt;color value&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>color value:</i> See the color table for details.</li> </ul> <p>Note: Colors can be set by Color Numbers, Color name, RGB alpha colors (RRGGBBAA) or RGB colors values (RRGGBB). RGBA and RGB color are given in HEX ASCII prepended by a '#'</p> <ul style="list-style-type: none"> <li>• <b>Examples:</b> SEND_COMMAND Panel,""^BCF-500.504&amp;510.515,1,Blue" Sets the OFF state background color fill for the buttons with variable text ranges of 500-504 &amp; 510-515 to Blue.</li> </ul>																																				
?BCF	<p>Get Fill Color Command - Get the current fill color.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""?BCF-&lt;addr range&gt;,&lt;button states range&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). Value is returned in a custom event with the following properties:</li> </ul> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>Address code of the button responding</td> </tr> <tr> <td>Type</td> <td>1012</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>Button state number</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	Address code of the button responding	Type	1012	Flag	0	Value 1	Button state number																								
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	Address code of the button responding																																				
Type	1012																																				
Flag	0																																				
Value 1	Button state number																																				

## Button Commands

	<p>Value 2            Actual length of string (should be 9)  Value 3            0  Text                Hex encoded color value (ex: #000000FF)</p> <p>• <b>Examples:</b>  SEND COMMAND Panel,""?BCF-529,1"  Gets the button 'OFF state' fill color. information. The result sent to the Controller would be:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>529</td> </tr> <tr> <td>Type</td> <td>1012</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>1</td> </tr> <tr> <td>Value 2</td> <td>9</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>#FF8000FF</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	529	Type	1012	Flag	0	Value 1	1	Value 2	9	Value 3	0	Text	#FF8000FF												
Custom Event Property	Value																														
Port	port command was received on																														
ID	529																														
Type	1012																														
Flag	0																														
Value 1	1																														
Value 2	9																														
Value 3	0																														
Text	#FF8000FF																														
<b>^BCT</b>	<p>Set Text Color Command - Set the text color to the specified color.</p> <p>• <b>Syntax:</b>  ""^BCT-&lt;addr range&gt;,&lt;button states range&gt;,&lt;color value&gt;""</p> <p>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state).  <i>color value:</i> See the color table for details.</p> <p><i>Note: Color can be assigned by color name (without spaces), number or R,G,B value (RRGGBB or RRGGBBAA).</i></p> <p>• <b>Examples:</b>  SEND_COMMAND Panel,""^BCT-500.504&amp;510,1,12"  Sets the OFF state text color to 12 (Very Light Yellow).</p>																														
<b>?BCT</b>	<p>Get Text Color Command - Get the current text color.</p> <p>• <b>Syntax:</b>  ""?BCT-&lt;addr range&gt;,&lt;button states range&gt;""</p> <p>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.  <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state).  Value is returned in a custom event with the following properties:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>Address code of the button responding</td> </tr> <tr> <td>Type</td> <td>1013</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>Button state number</td> </tr> <tr> <td>Value 2</td> <td>Actual length of string (should be 9)</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td>Hex encoded color value (ex: #000000FF)</td> </tr> </tbody> </table> <p>• <b>Examples:</b>  SEND COMMAND Panel,""?BCT-529,1"  Gets the button 'OFF state' text color. information. The result sent to the Controller would be:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>529</td> </tr> <tr> <td>ID</td> <td>Address code of the button responding</td> </tr> <tr> <td>Type</td> <td>1013</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>1</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	Address code of the button responding	Type	1013	Flag	0	Value 1	Button state number	Value 2	Actual length of string (should be 9)	Value 3	0	Text	Hex encoded color value (ex: #000000FF)	Custom Event Property	Value	Port	529	ID	Address code of the button responding	Type	1013	Flag	0	Value 1	1
Custom Event Property	Value																														
Port	port command was received on																														
ID	Address code of the button responding																														
Type	1013																														
Flag	0																														
Value 1	Button state number																														
Value 2	Actual length of string (should be 9)																														
Value 3	0																														
Text	Hex encoded color value (ex: #000000FF)																														
Custom Event Property	Value																														
Port	529																														
ID	Address code of the button responding																														
Type	1013																														
Flag	0																														
Value 1	1																														

Button Commands	
	Value 2            9 Value 3            0 Text                #FFFFFFF
<b>^BDC</b>	<p>Button Drag and Drop Custom Event Command - This command configures Drag and Drop custom events. This command can be used to enable or disable the transmission of custom events to the controller whenever certain operations occur. For example, the system programmer may want to be notified whenever a drag button enters an acceptable target. The notification mechanism is a custom event. The ^BDC command takes the form of a comma separated list of custom event numbers. If the number is 0 or blank for a given event type then no custom event will be transmitted when that event occurs. If a number is specified, then it is used as the EVENT TYPE value for the custom event. The range of 32001 to 65535 has been reserved in the panel for user custom event numbers. A different value could be used but might collide with other AMX event numbers. Event configuration is not permanent and all event numbers revert to the default of 0 when the panel restarts.</p> <p><b>Syntax:</b>        ""^BDC-&lt;drag start event number&gt;,&lt;enter valid drop target event number&gt;,&lt;exit valid drop target event number&gt;,&lt;drop event number&gt;,&lt;drag cancel event number&gt;, &lt;enter invalid drop target event number&gt;,&lt;exit invalid drop target event number&gt;</p> <p><b>Variables:</b></p> <ul style="list-style-type: none"> <li>• <i>drag start event number: Value of a drag start event.</i></li> <li>• <i>enter valid drop target event number: Value of an enter valid drop target event.</i></li> <li>• <i>enter valid drop target event number: Value of an enter valid drop target event.</i></li> <li>• <i>exit valid drop target event number: Value of an exit valid drop target event.</i></li> <li>• <i>drop event number: Value of a drop event</i></li> <li>• <i>drag cancel event number: Value of a drag cancel event</i></li> <li>• <i>enter invalid drop target event number: Value of an enter invalid drop target event.</i></li> <li>• <i>exit invalid drop target event number: Value of an exit invalid drop target event. By default the ^BDC command is enabled, the default values are:</i></li> <li>• <i>DragStartedEvent = 1410</i></li> <li>• <i>ValidDropEnterEvent = 1411</i></li> <li>• <i>ValidDropExitEvent = 1412</i></li> <li>• <i>DropEvent = 1413</i></li> <li>• <i>DragCancelEvent = 1414</i></li> <li>• <i>InvalidDropEnterEvent = 1415;</i></li> <li>• <i>InvalidDropExitEvent = 1416</i></li> </ul> <p>To disable the ^BDC command send: <b>^BDC-0,0,0,0,0,0</b> The events are:</p> <ul style="list-style-type: none"> <li>• <i>DragStarted - a draggable button has initiated a drag</i></li> <li>• <i>ValidDropEntered - a draggable button has entered a valid target</i></li> <li>• <i>ValidDropExited - a draggable button has exited a valid target</i></li> <li>• <i>Drop - a draggable button has been dropped on a valid target</i></li> <li>• <i>DragCancel - a draggable button has been dropped outside of a valid target</i></li> <li>• <i>InvalidDropEntered - a draggable button has entered an invalid target</i></li> <li>• <i>InvalidDropExited - a draggable button has exited an invalid target</i></li> </ul> <p>In response to any or all of the above events, the panel will create a custom event which is then sent to the controller. The format of <b>START</b> custom events transmitted to the controller are as follows:        CUSTOM.TYPE = the specified drag event custom event type (started)        CUSTOM.ID = the address of the viewer button which generated the event        CUSTOM.FLAG = 0        CUSTOM.VALUE1 = the button address of the draggable        CUSTOM.VALUE2 = 0        CUSTOM.VALUE3 = 0        CUSTOM.TEXT =        'dr{ch=&lt;channelPort&gt;,&lt;channel&gt;;ad=&lt;addressPort&gt;,&lt;address&gt;;gp=&lt;groupName&gt;;nm=&lt;buttonName&gt;}'        dt{vl=&lt;dropTargetValid I=valid,0=invalid&gt;;ch=&lt;channelPort&gt;,&lt;channel&gt;;ad=&lt;addressPort&gt;,&lt;address&gt;;nm=&lt;buttonName&gt;}...        dt{vl=&lt;dropTargetValid I=valid,0=invalid&gt;;ch=&lt;channelPort&gt;,&lt;channel&gt;;ad=&lt;addressPort&gt;,&lt;address&gt;;nm=&lt;buttonName&gt;}'</p> <p>The CUSTOM.TEXT provides data sets that represent the draggable's info (dr). The draggable's info included is the drag channel port, the drag channel code, the drag address port, the drag address code, the drag group name, and the drag button name. Drag target info is also presented, with a data set for each drag target visible at that time. The drag targets info (dt) includes the target validity to accept the drop, the drop target channel port, the drop target channel code, the drop target address port, the drop target address code, and the drop target button name.</p>

## Button Commands

- Buttons are identified as dr (draggable) or dt (drop target)
- Button properties are contained between open brace ( { ) and close brace ( } )
- Button properties are represented by key=value pairs (KVP).
- Keys are two letters followed by equal ( = ) by convention but the two letter keys are not a requirement.
- Property KVPs are separated by colon ( : ).

Each Button's data sets are on a separate line (i.e. the close brace is followed by a \n).

Key values.

- dr = draggable
  - ch = channel (port,channel)
  - ad = address (port,address)
  - gp = group name
  - nm = button name
  - dt = drop target
  - vl = validity of drop target (valid=1, invalid=0)
  - ch = channel (port,channel)
  - ad = address (port,address)
  - nm = button name
- By default the ^BDC command is enabled, the default values are:

Example texts:

```
dr{ch=1,31:ad=1,31:gp=nm=Drag1} dt{vl=1:ch=1,101:ad=1,101:nm=Tgt1}
dt{vl=1:ch=3,103:ad=3,103:nm=Tgt3} dt{vl=1:ch=3,103:ad=3,103:nm=Tgt3}
dt{vl=0:ch=1,11:ad=1,11:nm=Grp1 Tgt1} dt{vl=0:ch=1,12:ad=1,12:nm=Grp1 Tgt2}
dt{vl=0:ch=2,11:ad=2,11:nm=Grp2 Tgt1} dt{vl=0:ch=1,15:ad=1,15:nm=Grp1 Tgt5}
dt{vl=0:ch=1,16:ad=1,16:nm=Grp1 Tgt6} dt{vl=0:ch=2,13:ad=2,13:nm=Grp2 Tgt3}
dt{vl=0:ch=1,15:ad=1,15:nm=Grp1 Tgt5} dt{vl=0:ch=1,16:ad=1,16:nm=Grp1 Tgt6}
dt{vl=0:ch=2,13:ad=2,13:nm=Grp2 Tgt3}
```

```
dr{ch=2,4:ad=2,4:gp=Group1+2:nm=Drag2_4} dt{vl=1:ch=1,11:ad=1,11:nm=Grp1 Tgt1}
dt{vl=1:ch=1,12:ad=1,12:nm=Grp1 Tgt2} dt{vl=1:ch=2,11:ad=2,11:nm=Grp2 Tgt1}
dt{vl=1:ch=1,15:ad=1,15:nm=Grp1 Tgt5} dt{vl=1:ch=1,16:ad=1,16:nm=Grp1 Tgt6}
dt{vl=1:ch=2,13:ad=2,13:nm=Grp2 Tgt3} dt{vl=1:ch=1,15:ad=1,15:nm=Grp1 Tgt5}
dt{vl=1:ch=1,16:ad=1,16:nm=Grp1 Tgt6} dt{vl=1:ch=2,13:ad=2,13:nm=Grp2 Tgt3}
dt{vl=0:ch=1,101:ad=1,101:nm=Tgt1} dt{vl=0:ch=3,103:ad=3,103:nm=Tgt3}
dt{vl=0:ch=3,103:ad=3,103:nm=Tgt3}
```

The format of **VALIDENTER/VALIDEXIT/CANCEL** custom events transmitted to the controller are as follows:

CUSTOM.TYPE = the specified drag event (validEntered/validExited/drop/cancel)  
 CUSTOM.ID = the address of the drag/drop button which generated the event  
 CUSTOM.FLAG = 0 // 0 specifies valid  
 CUSTOM.VALUE1 = the button address of the draggable  
 CUSTOM.VALUE2 = 0  
 CUSTOM.VALUE3 = 0  
 CUSTOM.TEXT = ""

The format of **INVALIDENTER/INVALIDEXIT** custom events transmitted to the controller are as follows:

CUSTOM.TYPE = the specified drag event (invalidEntered/invalidExited)  
 CUSTOM.ID = the address of the drag/drop button which generated the event  
 CUSTOM.FLAG = 65535 (-1) // -1 specifies invalid target  
 CUSTOM.VALUE1 = the button address of the draggable  
 CUSTOM.VALUE2 = 0  
 CUSTOM.VALUE3 = 0  
 CUSTOM.TEXT = ""

If the **VALIDENTER** and **INVALIDENTER** events are set to the same event number, the flag value indicates whether the targets are valid or not. 0 == valid, 65535 (-1) == invalid.

If the **VALIDEXIT** and **INVALIDEXIT** events are set to the same event number, the flag value indicates whether the targets are valid or not. 0 == valid, 65535 (-1) == invalid.

The format of the **DROP** custom event transmitted to the controller is as follows:

CUSTOM.TYPE = the specified drag event (started/entered/exited/drop/cancel) the address of the viewer button which generated the event  
 CUSTOM.ID = the address of the viewer button which generated the event  
 CUSTOM.FLAG = 0  
 CUSTOM.VALUE1 = the button address of the draggable  
 CUSTOM.VALUE2 = the button address of the dropTarget  
 CUSTOM.VALUE3 = 0  
 CUSTOM.TEXT = group name to which the dropTarget belongs

Button Commands	
	<p><b>Example:</b>  SEND_COMMAND panel,"^BDC-32001,32002,32003,32004,32005"  After the users sends this command to the panel, if the user then drags a button addressed 9 and then proceeds to drop that draggable button on a dropTarget button addressed 10, the following event would be transmitted to the controller.  CUSTOM.ID = 10 (the dropTarget receives the drop event)  CUSTOM.TYPE = 32004 (this our drop event)  CUSTOM.FLAG = 0  CUSTOM.VALUE1 = 9 (the button we dragged over the target &amp; dropped)  CUSTOM.VALUE2 = 10 (the dropTarget that the draggable was dropped on)  CUSTOM.VALUE3 = 0  CUSTOM.TEXT = "" (a name we had given to the group the target was assigned,since the target was not assigned to a group we'll receive an empty string)</p>
<b>?BDC</b>	<p>Query Button Drag and Drop Custom Event Command - Get the drag and drop custom event values.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  "?"BDC"</li> <li>• <b>Variables:</b> None</li> </ul> <p>The response returned is a custom event with the following syntax:  CUSTOM.TYPE = 0  CUSTOM.ID = 1332  CUSTOM.FLAG = 0  CUSTOM.VALUE1 = 0  CUSTOM.VALUE2 = 0  CUSTOM.VALUE3 = 0  CUSTOM.TEXT = String containing a comma separated list of Button Drag &amp; Drop Custom Event values  '[StartEventNum],[ValidEnterEventNum],[ValidExitEventNum],[DropEventNum],[CancelEventNum],[InvalidEnterEventNum],[InvalidExitEventNum]'</p> <ul style="list-style-type: none"> <li>• <b>Example:</b>  SEND_COMMAND Panel,"?"BDC"  Query the Controller Button Drag and Drop Custom Event values. Response would be similar to:  Custom.ID = 0  Custom.Type = 1332  Custom.Flag = 0  Custom.Value1 = 0  Custom.Value2 = 0  Custom.Value3 = 0  Custom.Text = '1410,1411,1412,1413,1414,1415,1416'</li> </ul>
<b>^BFB</b>	<p>Button set feedback command - Set the feedback type of the button.  ONLY works on General-type buttons.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  "^BFB-&lt;addr range&gt;,&lt;feedback type&gt;"</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.  <i>feedback type:</i> None, Channel, Invert, On (Always on), Momentary.</li> <li>• <b>Example:</b>  SEND_COMMAND Panel,"^BFB-500,Momentary"  Sets the Feedback type of the button to 'Momentary'.</li> </ul>
<b>^BIM</b>	<p>Button set input mask command - Set the input mask for the specified address.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  "^BIM-&lt;addr range&gt;,&lt;input mask&gt;"</li> </ul>

Button Commands	
	<ul style="list-style-type: none"> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>input mask:</i> Refer to Appendix C: Text Formatting for character types.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^BIM-500,AAAAAAAAA" Sets the input mask to ten 'A' characters, that are required, to either a letter or digit (entry is required).</li> </ul>
<b>^BIT</b>	<p>Button Input Type Command - Modifies the keyboard type of the text input button(s) with given address(es). If this is sent to a button that is not a Text Input button, it has no effect.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BIT-&lt;address range&gt;,&lt;Input Type&gt;,&lt;return port&gt;""</li> <li>• <b>Variables:</b> <i>Address Range:</i> range of addresses that this command applies to <i>Input Type:</i> Input Type to Change to, as specified here: <a href="http://developer.android.com/reference/android/text/InputType.html">http://developer.android.com/reference/android/text/InputType.html</a> 1: Text 2: Number (standard keypad) 3: Telephone 4: Date/Time</li> </ul> <p><i>Return port:</i> The port number to return the response on if different than the port to which the command is sent.</p>
<b>^BMC</b>	<p>Button copy command - Copy attributes of the source button to all the destination buttons. Note that the source is a single button state. Each state must be copied as a separate command. The &lt;codes&gt; section represents what attributes will be copied. All codes are 2 char pairs that can be separated by comma, space, percent or just ran together.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BMC-&lt;addr range&gt;,&lt;button states range&gt;,&lt;source port&gt;,&lt;source address&gt; ,&lt;sourcestate&gt;,&lt;codes&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>source port:</i> port number of button to copy from. <i>source address:</i> address number of button to copy from. <i>source state:</i> state number of button to copy from. <i>codes:</i> BM - Picture/Bitmap BR - Border CB - Border Color CF - Fill Color CT - Text Color EC - Text effect color EF - Text effect FT - Font JB - Bitmap alignment JT - Text alignment OP - Opacity SO - Button Sound TX - Text WW - Word wrap on/off</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,"^BMC-425,1,1,500,1,BR"" or SEND_COMMAND Panel,"^BMC-425,1,1,500,1,%BR" Copies the OFF state border of button with a variable text address of 500 onto the OFF state border of button with a variable text address of 425. SEND_COMMAND Panel,"^BMC-150,1,1,315,1,%BR%FT%TX%BM%CF%CT" Copies the OFF state border, font, Text, bitmap, fill color and text color of the button with a variable text address of 315 onto the OFF state border, font, Text, bitmap, fill color and text color of the button with a variable text address of 150.</li> </ul> <p><i>Note: Use this command if you are using the panel's default color palette. For custom color palettes, use ^BMF instead.</i></p>

## Button Commands

<b>^BMF</b>	<p>Button Modify Command - Set any/all button parameters by sending embedded codes and data.</p> <p>• <b>Syntax:</b>            ""^BMF-&lt;addr range&gt;,&lt;button states range&gt;,&lt;data&gt;""</p> <p><i>Note: Many subcommands do not use button state information. Refer to the subcommand for details</i> • <b>Variables:</b> address range: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. button states range: 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state).            data:</p>	
	%B<border style>'	Set the border style name. (No support for states.) <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i>
	%CB<on border color>'	Set Border Color.
	%CF<on fill color>'	Set Fill Color.
	%CT<on text color>'	Set Text Color.
	%EC<text effect color>'	Set the text effect color.
	%EF<text effect name>'	Set the text effect. <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i>
	%EN<1 or 0>'	Enable/disable a button.
	%F<primary_font_filename: primary_font_size>, <alternate_font_filename: alternate_font_size>'	Set the font filename and optional font size for the primary font and/or the alternate font.
	%GC<bargraph slider color>'	Set the bargraph slider color
	%GD<bargraph ramp down>'	Set the bargraph ramp down time in 1/10 second.
	%GG<bargraph drag increment>'	Set the bargraph drag increment. Refer to the ^GDI command for more information.
	%GH<bargraph hi>'	Set the bargraph upper limit.
	%GI<bargraph invert>'	Set the bargraph invert/non-invert.
	%GL<bargraph low>'	Set the bargraph lower limit.
	%GN<bargraph slider name>'	Set the bargraph slider name/Joystick cursor name. <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i>
	%GR<repeat interval>'	Set bargraph repeat interval.
	%GU<bargraph ramp up>'	Set the bargraph ramp up time in intervals of 1/10 second.
	%GV<bargraph value>'	Set the bargraph value.
	%J',<set text alignment 0-10>'	As shown in the Justification Values table, BUT the 0 (zero) is absolute and followed by ',<left>,<top>'
	%JB<alignment of bitmap 0-10>'	As shown in the Justification Values table BUT the 0 (zero) is absolute and followed by ',<left>,<top>'
	%JT<alignment of text 0-9>'	As shown in the Justification Values table BUT the 0 (zero) is absolute and followed by ',<left>,<top>'
	%MI<mask image>'	Set the mask image. Refer to the ^BMI command for more information. <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i>
	%MK<input mask>'	Set the input mask of a text area. See the text input mask area for more information. <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i>
	%ML<max length>'	Set the maximum length of a text area.
	%MI<mask image>'	Set the mask image. Refer to the ^BMI command for more information. <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i>
	%OP<0-255>'	Set the button opacity to either Invisible (value=0) or Opaque (value=255).
	%OP#<00-FF>'	Set the button opacity to either Invisible (value=00) or Opaque (value=FF).
%OT<feedback type>'	Set the Feedback (Output) Type to one of the following: None, Channel, Invert, ON (Always ON), or Momentary. <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i>	
%P<bitmap_index, justification>'	Set the picture/bitmap filename (empty is clear).	

Button Commands	
	<p><i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i></p>
	<p><b>%R&lt;l,t,r,b'</b></p> <p>Sets button location and also resizes the button. For more information, please refer to the <b>^BSP</b> command.</p>
	<p><b>%OP&lt;0-255&gt;'</b></p> <p>Set the button opacity to either Invisible (value=0) or Opaque (value=255).</p>
	<p><b>%SC&lt;l or 0&gt;'</b></p> <p>Set the bitmap scale to fit.</p>
	<p><b>%SF&lt;l or 0&gt;'</b></p> <p>Set the focus for text area button. (No support for states.)</p>
	<p><b>%SM'</b></p> <p>Submit a text for text area button. (No support for states.)</p>
	<p><b>%SP&lt;spacing&gt;'</b></p> <p>Set subpage viewer subpage spacing. (No support for states.)</p>
	<p><b>%SO&lt;sound&gt;'</b></p> <p>Set the button sound. <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i></p>
	<p><b>%SW&lt;l or 0&gt;'</b></p> <p>Show/hide a button. (No support for states.)</p>
	<p><b>%T&lt;text &gt;'</b></p> <p>Set the text using ASCII characters (empty is clear). <i>Note: This parameter should be always used in its own BMF command, and should not be combined with other BMF subcommands.</i></p>
	<p><b>%UN&lt;Unicode text&gt;'</b></p> <p>Set the Unicode text. See <b>^UNI</b> for the text format.</p>
	<p><b>%UT&lt;UTF-8 text&gt;'</b></p> <p>Set the Unicode text. See <b>^UTF</b> for the text format.</p>
	<p><b>%WW&lt;l or 0&gt;'</b></p> <p>Word wrap ON/OFF.</p>
	<p>For some of these commands and values, refer to the RGB Values for all 88 Basic Colors table.</p> <ul style="list-style-type: none"> <li><b>Example:</b> SEND_COMMAND Panel,"^BMF-500,l,%B10%CFRed%CB Blue %CTBlack%Ptest.png" Sets the button OFF state as well as the Border, Fill Color, Border Color, Text Color, and Bitmap.</li> </ul> <p><i>Note: Use this command if you are using custom color palette for your panel. If you intend to use the default color palette, use ^BMC instead.</i></p> <p><i>Note: To accept unspecified parameters, use either ,, or ,-l. If left or top is unspecified, then the current values for the button will be used. If right or bottom is unspecified, the current width and height is used to maintain the button size. This effectively creates a button "move" command (also works with ^BSP).</i></p>
<b>^BMI</b>	<p>Set state mask image command - Assign a Chameleon mask image to those buttons with a defined address and state range.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^BMI-&lt;addr range&gt;,&lt;button states range&gt;,&lt;name of mask image&gt;""</li> <li><b>Variables:</b> address range: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. button states range: 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). name of mask image: The filename of the mask image in the TPD5 file to use.</li> <li><b>Example:</b> SEND_COMMAND Panel,"^BMI-500.504&amp;510.515,l,mask.png" Sets the OFF state mask image for the buttons with address ranges of 500-504 &amp; 510-515 to mask.png.</li> </ul>
<b>^BML</b>	<p>Set text input max length command - Set the maximum length of the text area button. If this value is set to zero (0), the text area has no max length. This is only for a Text area input button and not for a Text area input masking button.</p> <ul style="list-style-type: none"> <li><b>Syntax</b> ""^BML-&lt;addr range&gt;,&lt;max length&gt;""</li> <li><b>Variables:</b> address range: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. max length: The maximum length in characters of a text input area. (0=no max length)</li> <li><b>Example:</b> SEND_COMMAND Panel,"^BML-500,20" Sets the maximum length of the text area input button to 20 characters.</li> </ul>
<b>^BMP</b>	<p>Set State Bitmap Command - Assign a picture to those buttons with a defined address range.</p>

## Button Commands

	<ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^BMP-&lt;addr range&gt;,&lt;button states range&gt;,&lt;name of bitmap/picture&gt;,[bitmap index],[optional justification]""</code></li> <li>• <b>Variables:</b>  <i>variable text address range:</i> 1 - 4000. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>name of bitmap/picture :</i> ASCII characters.  <i>Optional bitmap index:</i> 0 - 5, the state bitmap index to assign the bitmap. If not present, will place the referenced bitmap in index 1. The indexes are defined as:  0 - Chameleon Image (if present)  1 - Bitmap 1  2 - Bitmap 2  3 - Bitmap 3  4 - Bitmap 4  5 - Bitmap 5  <i>Optional justification:</i> 0-10 where:  0 - Absolute position: If absolute justification is set, the next two parameters are the X and Y offset of the bitmap for the referenced index.  1 - top left  2 - top center  3 - top right  4 - middle left  5 - middle center  6 - middle right  7 - bottom left  8 - bottom center  9 - bottom right  10 - scale to fit  11 - scale-maintain-aspect-ratio  If no justification is specified, the current justification is used.</li> </ul> <ul style="list-style-type: none"> <li>• <b>Example:</b>  SEND_COMMAND Panel,""^BMP-500.504&amp;510.515,1,bitmap.png"  Sets the OFF state picture for the buttons with variable text ranges of 500-504 &amp; 510-515.</li> </ul>																		
<p><b>?BMP</b></p>	<p>Query State Bitmap Command - Get the current bitmap name.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""?BMP-&lt;addr range&gt;,&lt;button states range&gt;,[index]""</code></li> <li>• <b>Variables:</b>  <i>variable text address range:</i> 1 - 4000. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).  <i>Optional index:</i> 0-5, the state bitmap index to assign the bitmap. If not present, will place the referenced bitmap in index 1. The indexes are defined as:  0 - Chameleon Image (if present)  1 - Bitmap 1  2 - Bitmap 2  3 - Bitmap 3  4 - Bitmap 4 5 - Bitmap 5  The response returned is a custom event with the following properties:  <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>address code of button</td> </tr> <tr> <td>Type</td> <td>1002</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>state number</td> </tr> <tr> <td>Value 2</td> <td>length of text</td> </tr> <tr> <td>Value 3</td> <td>bitmap index</td> </tr> <tr> <td>Text</td> <td>bitmap name</td> </tr> </tbody> </table> </li> </ul> <ul style="list-style-type: none"> <li>• <b>Example:</b>  SEND_COMMAND Panel,""?BMP-529,1""</li> </ul>	Custom Event Property	Value	Port	port command was received on	ID	address code of button	Type	1002	Flag	0	Value 1	state number	Value 2	length of text	Value 3	bitmap index	Text	bitmap name
Custom Event Property	Value																		
Port	port command was received on																		
ID	address code of button																		
Type	1002																		
Flag	0																		
Value 1	state number																		
Value 2	length of text																		
Value 3	bitmap index																		
Text	bitmap name																		

## Button Commands

	<p>Gets the button "OFF state" bitmap information (index 1 since index is unspecified). Example response:</p> <pre> Custom Event Property      Value Port                       port command was received on ID                          529 Type                       1002 Flag                       0 Value 1                    1 Value 2                    9 Value 3                    1 Text                       Buggs.png                     </pre>
<b>^BMX</b>	<p>Set State Bitmap Extended Command - Assign a picture with justifications to those buttons with a defined address range.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>  <code>""^BMX-&lt;addr range&gt;,&lt;button states range&gt;,&lt;name of bitmap/picture/resource,index,justification&gt;;&lt;name of bitmap/picture/resource,index,justification&gt;;&lt;name of bitmap/picture/resource,index,justification&gt;""</code> </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>name of bitmap:</i> The filename of the bitmap in the TPD5 file to use. <i>Optional bitmap index:</i> 0 - 5, the state bitmap index to assign the bitmap. If not present, will place the referenced bitmap in index 1. The indexes are defined as:  0 - Chameleon Image (if present)  1 - Bitmap 1  2 - Bitmap 2  3 - Bitmap 3  4 - Bitmap 4  5 - Bitmap 5  <i>Optional justification:</i> 0-11 where:  0 - Absolute position: If absolute justification is set, the next two parameters are the X and Y offset of the bitmap for the referenced index.  1 - top left  2 - top center  3 - top right  4 - middle left  5 - middle center  6 - middle right  7 - bottom left  8 - bottom center  9 - bottom right  10 - scale to fit  11 - scale-maintain-aspect-ratio  If no justification is specified, the current justification is retained. </li> <li> <b>Example:</b>  SEND_COMMAND Panel,"""^BMX-500.504&amp;510.515,1,bitmap.png,1,5;bitmap2.png,2,0,100,50;bitmap3.png,3,1"" Sets the OFF state pictures for the buttons with address ranges of 500-504 &amp; 510-515 as follows: bitmap.png is assigned to index 1 and is middle center justified. bitmap2.png is assigned to index 2 and is absolute justified with an X offset of 100 and a Y offset of 50. bitmap3.png is assigned to index 3 and is top left justified. </li> </ul>
<b>?BMX</b>	<p>Query State Bitmap Extended Command - Get the current bitmap name and justification for one or all indexes.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>  <code>""?BMX-&lt;addr range&gt;,&lt;button states range&gt;,[index]""</code> </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>bitmap index:</i> 0 - 5, the state bitmap index to assign the bitmap. If not present, will place the referenced bitmap in index 1. The indexes are defined as:  0 - Chameleon Image (if present)  1 - Bitmap 1  2 - Bitmap 2 </li> </ul>

## Button Commands

	<p>3 - Bitmap 3 4 - Bitmap 4 5 - Bitmap 5</p> <p>The response returned is a series of custom events (one for each valid index) with the following syntax:</p> <pre>Custom Event Property Value Port Button Address code ID address code of button Type 1018 Flag 0 Value 1 Button state number Value 2 Length of Custom.Text Value 3 Index of bitmap (0-5) Text String that describes the bitmap name/justification. The text looks like: "bitmapname,justification" If absolute justification is set, then the X and Y offset are appended to the description.</pre> <ul style="list-style-type: none"> <li><b>Example:</b> SEND_COMMAND Panel,""?BMX-529,I" Gets the button 'OFF state' bitmap information (all index with a bitmap since index is unspecified). Example response: Custom Event 1: Custom.ID = 529 Custom.Type = 1018 Custom.Flag = 0 Custom.Value1 = 1 Custom.Value2 = 34 Custom.Value3 = 1 Custom.Text = button-background.png,scale-to-fit Custom Event 2: Custom.ID = 529 Custom.Type = 1018 Custom.Flag = 0 Custom.Value1 = 1 Custom.Value2 = 26 Custom.Value3 = 2 Custom.Text = arrow.png absolute,200,100 Custom Event 3: Custom.ID = 529 Custom.Type = 1018 Custom.Flag = 0 Custom.Value1 = 1 Custom.Value2 = 22 Custom.Value3 = 3 Custom.Text = img_Varia,middle-center</li> </ul> <p>For this case, 3 bitmaps are defined and 3 custom event s are sent as a response.</p>
<b>^BOP</b>	<p>Button Opacity Command - Set the button opacity in the selected state(s).</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^BOP-&lt;addr range&gt;,&lt;button state range&gt;,&lt;opacity&gt;""</li> <li><b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ':' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>opacity:</i> An integer value from 0-255 where 0 is fully transparent and 255 is fully opaque, or #XX where the value after the # is a HEX number between 0 and FF.</li> <li><b>Example:</b> SEND_COMMAND Panel,""^BOP-500.504&amp;510.515,1,200" Sets the OFF state opacity for the buttons with address ranges of 500-504 &amp; 510-515 to 200. SEND_COMMAND Panel,""^BOP-500.504&amp;510.515,1,#C8" Sets the OFF state opacity for the buttons with address ranges of 500-504 &amp; 510-515 to 200 (0xC8).</li> </ul>
<b>?BOP</b>	<p>Get button opacity command - Get the overall button opacity.</p>

## Button Commands

	<ul style="list-style-type: none"> <li>• <b>Syntax</b>  <code>""?BOP-&lt;addr range&gt;,&lt;button states range&gt;""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). The response returned is a series of custom events (one for each valid index) with the following syntax:  <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>address code of button</td></tr> <tr><td>Type</td><td>1015</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>state number</td></tr> <tr><td>Value 2</td><td>opacity</td></tr> <tr><td>Value 3</td><td>0 Text</td></tr> </table> </li> <li>• <b>Examples:</b>  SEND_COMMAND Panel,""?BOP-529,1"  Gets the button 'OFF state' opacity information. The result sent to the Controller would be:  <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>529</td></tr> <tr><td>Type</td><td>1015</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>1</td></tr> <tr><td>Value 2</td><td>200</td></tr> <tr><td>Value 3</td><td>0</td></tr> <tr><td>Text</td><td></td></tr> </table> </li> </ul>	Custom Event Property	Value	Port	port command was received on	ID	address code of button	Type	1015	Flag	0	Value 1	state number	Value 2	opacity	Value 3	0 Text	Custom Event Property	Value	Port	port command was received on	ID	529	Type	1015	Flag	0	Value 1	1	Value 2	200	Value 3	0	Text	
Custom Event Property	Value																																		
Port	port command was received on																																		
ID	address code of button																																		
Type	1015																																		
Flag	0																																		
Value 1	state number																																		
Value 2	opacity																																		
Value 3	0 Text																																		
Custom Event Property	Value																																		
Port	port command was received on																																		
ID	529																																		
Type	1015																																		
Flag	0																																		
Value 1	1																																		
Value 2	200																																		
Value 3	0																																		
Text																																			
<b>^BOS</b>	<p>Button State Video Fill Command - Sets the button state to display either a Video or Non-Video window.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b>  <code>""^BOS-&lt;addr range&gt;,&lt;button states range&gt;,&lt;video state&gt;""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>video state:</i> Video Off = 0, URL Video On = 1, MPL Video On = 101.</li> <li>• <b>Example:</b>  SEND_COMMAND Panel,""^BOS-500,1,1"  Sets the button to display video.</li> </ul>																																		
<b>?BOS</b>	<p>Query Button State Video Fill Command - get the current button state video fill.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""?BOS-&lt;addr range&gt;,&lt;button states range&gt;""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).  The response returned is a custom event with the following syntax:  <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>address code of button</td></tr> <tr><td>Type</td><td>1017</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>state number</td></tr> <tr><td>Value 2</td><td>video state</td></tr> <tr><td>Value 3</td><td>0</td></tr> <tr><td>Text</td><td>video URL (or empty if no video)</td></tr> </table> </li> </ul> <p>video state values:  100 = video fill  101 = MPL video fill</p>	Custom Event Property	Value	Port	port command was received on	ID	address code of button	Type	1017	Flag	0	Value 1	state number	Value 2	video state	Value 3	0	Text	video URL (or empty if no video)																
Custom Event Property	Value																																		
Port	port command was received on																																		
ID	address code of button																																		
Type	1017																																		
Flag	0																																		
Value 1	state number																																		
Value 2	video state																																		
Value 3	0																																		
Text	video URL (or empty if no video)																																		

Button Commands	
	<ul style="list-style-type: none"> <li><b>Example:</b> SEND_COMMAND Panel,""?BOS-560,1" Gets the button "OFF state" video fill. Example response: Custom Event Property Value Port port command was received on ID 560 Type 1017 Flag 0 Value 1 1 Value 2 1 Value 3 0 Text 1</li> </ul>
<b>^BRD</b>	<p>Button state border command - Set the border of a button state/states.</p> <ul style="list-style-type: none"> <li><b>Syntax</b> ""^BRD-&lt;addr range&gt;,&lt;button states range&gt;,&lt;border name&gt;""</li> <li><b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>border name:</i> Refer to the Border Styles</li> <li><b>Examples:</b> SEND_COMMAND Panel,""?^BRD-500.504&amp;510.515,1&amp;2,Double Line" Sets the border by name (Double Line) to those buttons with the variable text range of 500-504 &amp; 510-515.</li> </ul>
<b>?BRD</b>	<p>Get border name command - Get the current border name.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""?BRD-&lt;addr range&gt;,&lt;button states range&gt;""</li> <li><b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). The response returned is a custom event with the following syntax: Custom Event Property Value Port port command was received on ID address code of button Type 1014 Flag 0 Value 1 state number Value 2 text length Value 3 0 Text border name</li> <li><b>Example:</b> SEND COMMAND Panel,""?BRD-529,1" Gets the button "OFF state" border information. The result sent to the Controller would be: Custom Event Property Value Port port command was received on ID 529 Type 1014 Flag 0 Value 1 1 Value 2 22 Value 3 11 Text Double Line</li> </ul>
<b>^BSF</b>	<p>Button Focus Command - Set the focus to the text area. <i>Note: Select one button at a time (single variable text address). Do not assign a variable text address range to set focus to multiple buttons. Only one variable text address can be in focus at a time.</i></p>

Button Commands	
	<ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BSF-&lt;addr range&gt;,&lt;selection value&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>selection value:</i> Unselect = 0 and select = 1.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,""^BSF-500,1"" Sets the focus to the text area of the button.</li> </ul>
^BSM	<p>Button Submit Text Command - This command causes the text areas to send their text as strings to the NetLinx Controller.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b> ""^BSM-&lt;addr range&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,""^BSM-500"" Returns a String of format ""&lt;button name&gt;-&lt;text&gt;"". The string is returned on the port a ^BIT command was received on, or if that has not occurred, is sent on the address port.</li> </ul>
^BSO	<p>Button state sound - Set the sound played when a button is pressed. If the sound name is blank, the sound is then cleared. If the sound name is not matched, the button sound is not changed.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BSO-&lt;addr range&gt;,&lt;button states range&gt;,&lt;sound name&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>sound name:</i> Sound file name. If blank or file not found the sound is cleared.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,""^BSO-500,1&amp;2,music.wav"" Assigns the sound 'music.wav' to the button Off/On states.</li> </ul>
^BSP	<p>Set Button Size and Position Command - Set the button size and its position on the page.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^BSP-&lt;addr range&gt;,&lt;left&gt;,&lt;top&gt;,&lt;right&gt;,&lt;bottom&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>left:</i> position of left edge of the button on the panel <i>top:</i> position of the top edge of the button on the panel <i>right:</i> position of right edge of the button on the panel <i>bottom:</i> position of the bottom edge of the button on the panel</li> <li>• <b>Example:</b> SEND_COMMAND Panel,""^BSP-530,20,100,50,130"" Makes the button with variable text address 530 appear at (20,100) and be 30px by 30px</li> </ul> <p>This command supports default parameters to simplify operations such as button moves, where you don't want to calculate a right and bottom. To specify a default parameter it is recommended to simply use -1.</p> <p>The meaning of a given default parameter is as follows:  <i>left:</i> use the current left position  <i>top:</i> use the current top position  <i>right:</i> calculate a new right position which is the left position plus the width</p>

Button Commands																																			
	<p><i>bottom</i>: calculate a new bottom position which is the top position plus the height</p> <p><i>Note</i>: If left or top is unspecified, then the current values for the button will be used. If right or bottom is unspecified, the current width and height is used to maintain the button size. This effectively creates a button “move” command (also works with %R in ^BMF).</p> <ul style="list-style-type: none"> <li>• <b>Example</b> (An easy button move of button 530 to position LEFT 20, TOP 100 while maintaining the button size): SEND_COMMAND Panel,“^BSP-530,20,100,-1,-1”</li> </ul>																																		
<b>^BWW</b>	<p>Button State Word Wrap Enable/Disable - Set the button word wrap feature to those buttons with a defined address range. By default, word-wrap is Off.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b>: “^BWW-&lt;addr range&gt;,&lt;button states range&gt;,&lt;word wrap&gt;”</li> <li>• <b>Variables</b>: <i>address range</i>: Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>button states range</i>: 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>word wrap</i>: 0=Off and 1=On. Default is Off.</li> <li>• <b>Example</b>: SEND_COMMAND Panel,“^BWW-500,1,1” Sets the word wrap on for the button’s Off state.</li> </ul>																																		
<b>?BWW</b>	<p>Get Button State Word Wrap - Get the current word wrap flag status.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b>: “?BWW-&lt;addr range&gt;,&lt;button states range&gt;”</li> <li>• <b>Variables</b>: <i>address range</i>: Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>button states range</i>: 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). Response is a custom event with the following properties:  <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>address of the button</td> </tr> <tr> <td>Type</td> <td>1010</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>state number</td> </tr> <tr> <td>Value 2</td> <td>0 = no word wrap, 1 = word wrap</td> </tr> <tr> <td>Value 3</td> <td>0 Text</td> </tr> </tbody> </table> </li> <li>• <b>Example</b>: SEND COMMAND Panel,“?BWW-529,1” Gets the button ‘OFF state’ word wrap information. The result sent to the Controller would be:  <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>529</td> </tr> <tr> <td>Type</td> <td>1010</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>1</td> </tr> <tr> <td>Value 2</td> <td>1</td> </tr> <tr> <td>Value 3</td> <td>0</td> </tr> <tr> <td>Text</td> <td></td> </tr> </tbody> </table> </li> </ul>	Custom Event Property	Value	Port	port command was received on	ID	address of the button	Type	1010	Flag	0	Value 1	state number	Value 2	0 = no word wrap, 1 = word wrap	Value 3	0 Text	Custom Event Property	Value	Port	port command was received on	ID	529	Type	1010	Flag	0	Value 1	1	Value 2	1	Value 3	0	Text	
Custom Event Property	Value																																		
Port	port command was received on																																		
ID	address of the button																																		
Type	1010																																		
Flag	0																																		
Value 1	state number																																		
Value 2	0 = no word wrap, 1 = word wrap																																		
Value 3	0 Text																																		
Custom Event Property	Value																																		
Port	port command was received on																																		
ID	529																																		
Type	1010																																		
Flag	0																																		
Value 1	1																																		
Value 2	1																																		
Value 3	0																																		
Text																																			
<b>^CPF</b>	<p>Clear Page Flip Command - Clear all page flips from a button. This only clears PageFlip actions from the Button Release event action.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b>: “^CPF-&lt;address range&gt;”</li> <li>• <b>Variables</b>: <i>address range</i>: Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address.</li> <li>• <b>Example</b>:</li> </ul>																																		

Button Commands	
	<p>SEND_COMMAND Panel,"" ^CPF-500" Clear all page flip actions from button address 500 RELEASE event action list.</p>
<b>^DPF</b>	<p>Delete Page Flips Command - Delete page flips from a button release event if it already exists.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b> "" ^DPF-&lt;addr range&gt;,&lt;actions&gt;,&lt;page name&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>actions:</i>            Stan[andardPage] - Flip to standard page            Prev[viousPage] - Flip to previous page            Show[Popup] - Show Popup page            Hide[Popup] - Hide Popup page            Togg[lePopup] - Toggle popup state            ClearG[roup] - Clear popup page group from all pages            ClearP[age] - Clear all popup pages from a page with the specified page name    ClearA[ll] - Clear all popup pages from all pages  <i>page name:</i> name of page or popup to affect.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"" ^DPF-409,Prev" Deletes the assignment of a button from flipping to a previous page.</li> </ul>
<b>^ENA</b>	<p>Button Enable Command - Enable or disable buttons with a set variable text range.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> "" ^ENA-&lt;addr range&gt;,&lt;command value&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>command value:</i> 0 = disable, 1 = enable</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"" ^ENA-500.504&amp;510.515,0" Disables buttons with variable text range 500-504 &amp; 510-515.</li> </ul>
<b>^FON</b>	<p>Button state set font command - Set a font to a specific font filename and size for those buttons with a defined address range.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b> "" ^FON-&lt;addr range&gt;,&lt;button states range&gt;,&lt;font filename&gt;[:font size],[alternate font filename] [:alternate font size]""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state).  <i>font filename:</i> The filename of the font to display in the state. This is used as the primary font file for all button states  <i>font size (optional):</i> The size of the font to use. <i>alternate font filename:</i> The filename of the alternate font to display in the state. This is used as the alternate font file for a Listview button  <i>font size (optional):</i> The size of the alternate font to use in a Listview button.</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,"" ^FON-500.504&amp;510.515,1&amp;2,arialb.ttf:48" Sets the font file to arial bold (arialb.ttf) for the On and Off states of buttons with the address range of 500-504 &amp; 510-515. Set the font size to 48. SEND_COMMAND Panel,"" ^FON-505,1&amp;2,arialb.ttf:48,arial.ttf:24" Sets the primary font file to arial bold (arialb.ttf) for the selected (2) and unselected (1) states of Listview buttons with the address range of 505. Set the primary font size to 48. Sets the alternate font file to arial (arial.ttf) and the alternate font size to 24.</li> </ul>
<b>?FON</b>	<p>Get button state font command - Get the current font filename and size.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> "" ?FON-&lt;addr range&gt;,&lt;button states range&gt;""</li> </ul>

## Button Commands

	<ul style="list-style-type: none"> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). Response is a custom event with the following properties:           <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>address of the button</td></tr> <tr><td>Type</td><td>1007</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>state number</td></tr> <tr><td>Value 2</td><td>font index</td></tr> <tr><td>Value 3</td><td>font size</td></tr> <tr><td>Text</td><td>font filename</td></tr> </table>           If the button is a Listview, an additional custom event with the following properties are sent as well.           <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>address of the button</td></tr> <tr><td>Type</td><td>1019</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>state number</td></tr> <tr><td>Value 2</td><td>0</td></tr> <tr><td>Value 3</td><td>alternate font size</td></tr> <tr><td>Text</td><td>alternate font filename</td></tr> </table> </li> <li> <b>Example:</b>            SEND_COMMAND Panel,""?FON-529,1"            Gets the button 'OFF state' font information. The result sent to the Controller would be:           <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>529</td></tr> <tr><td>Type</td><td>1007</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>1</td></tr> <tr><td>Value 2</td><td>1</td></tr> <tr><td>Value 3</td><td>48</td></tr> <tr><td>Text</td><td>arialb.ttf</td></tr> </table> </li> </ul>	Custom Event Property	Value	Port	port command was received on	ID	address of the button	Type	1007	Flag	0	Value 1	state number	Value 2	font index	Value 3	font size	Text	font filename	Custom Event Property	Value	Port	port command was received on	ID	address of the button	Type	1019	Flag	0	Value 1	state number	Value 2	0	Value 3	alternate font size	Text	alternate font filename	Custom Event Property	Value	Port	port command was received on	ID	529	Type	1007	Flag	0	Value 1	1	Value 2	1	Value 3	48	Text	arialb.ttf
Custom Event Property	Value																																																						
Port	port command was received on																																																						
ID	address of the button																																																						
Type	1007																																																						
Flag	0																																																						
Value 1	state number																																																						
Value 2	font index																																																						
Value 3	font size																																																						
Text	font filename																																																						
Custom Event Property	Value																																																						
Port	port command was received on																																																						
ID	address of the button																																																						
Type	1019																																																						
Flag	0																																																						
Value 1	state number																																																						
Value 2	0																																																						
Value 3	alternate font size																																																						
Text	alternate font filename																																																						
Custom Event Property	Value																																																						
Port	port command was received on																																																						
ID	529																																																						
Type	1007																																																						
Flag	0																																																						
Value 1	1																																																						
Value 2	1																																																						
Value 3	48																																																						
Text	arialb.ttf																																																						
^GDI	<p>Bargraph drag increment command - Change the bargraph drag increment.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>            ""^GDI-&lt;addr range&gt;,&lt;bargraph drag increment&gt;""         </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.  <i>bargraph drag increment:</i> The amount to change the level on a drag. The default drag increment is 256.         </li> <li> <b>Example:</b>            SEND_COMMAND Panel,""^GDI-7,128"            Sets the bargraph with address code 7 to a drag increment of 128.         </li> </ul>																																																						
^GIV	<p>Bargraph invert command - Invert the bargraph to move in the opposite direction.</p> <ul style="list-style-type: none"> <li> <b>Syntax</b>            ""^GIV-&lt;addr range&gt;,&lt;invert=1, non-inverted=0&gt;""         </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>invert flag:</i> For a bargraph 1 = Invert, 0 = Non Invert         </li> <li> <b>Example:</b>            SEND_COMMAND Panel,""^GIV-500,1"            Invert the bargraph.         </li> </ul>																																																						
^GLH	<p>Set Bargraph High Range Command - Sets the bargraph max range to &lt;bargraph hi&gt;. This does NOT affect the LEVEL value (if any) associated with this bargraph.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>            ""^GLH-&lt;addr range&gt;,&lt;bargraph hi&gt;""         </li> </ul>																																																						

Button Commands	
	<ul style="list-style-type: none"> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>bargraph hi:</i> The new high value. It must be larger than the current low value.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^GLH-100,128" Set the max bargraph value to 128.</li> </ul>
<b>^GLL</b>	<p>Set Bargraph Low Range Command - Sets the bargraph min range to &lt;bargraph low&gt;. This does NOT affect the LEVEL value (if any) associated with this bargraph.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^GLL-&lt;addr range&gt;,&lt;bargraph low&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>bargraph low:</i> The new low value. It must be smaller than the current high value.</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^GLL-100,64" Set the min bargraph value to 64.</li> </ul>
<b>^GRD</b>	<p>Bargraph set ramp down time command - Change the bargraph ramp-down time in 1/10th of a second increments.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b> ""^GRD-&lt;addr range&gt;,&lt;bargraph ramp down time&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>bargraph ramp down time:</i> Time to ramp down the entire range in 1/10th of a second intervals</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^GRD-500,200" Changes the bargraph ramp down time to 20 seconds.</li> </ul>
<b>^GRU</b>	<p>Bargraph set ran up time command - Change the bargraph ramp-up time in 1/10th of a second increments.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^GRU-&lt;addr range&gt;,&lt;bargraph ramp up time&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>bargraph ramp up time:</i> Time to ramp down the entire range in 1/10th of a second intervals</li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^GRU-500,100" Changes the bargraph ramp up time to 10 seconds.</li> </ul>
<b>^GSC</b>	<p>Bargraph set slider color command - Change the bargraph slider color. A user can also assign the color by name or R,G,B value (RRGGBB or RRGGBBAA).</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> ""^GSC-&lt;addr range&gt;,&lt;color value&gt;""</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>color value:</i> See the color table for more information. <i>Note: Colors can be set by Color Numbers, Color name, RGB alpha colors (RRGGBBAA) or RGB colors values (RRGGBB). RGBA and RGB color are given in HEX ASCII prepended by a '#.'</i></li> <li>• <b>Example:</b> SEND_COMMAND Panel,"^GSC-500,12" Changes the bargraph slider color to Very Light Yellow.</li> </ul>

Button Commands	
<b>^GSD</b>	<p>Bargraph slider display type command - Sets the display type for a slider. In G5, the default bargraph display type is to allow the center of the slider to move to the end of the bargraph and will be clipped visually. In G4 (legacy), the bargraph display type is to allow only the end of the slider to move to the end of the bargraph and the slider is not clipped visually. This command allows the bargraph slider display type to be changed from the G5 (default) type to the G4 type.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^GSD-&lt;addr range&gt;,&lt;display type (g4 or g5)&gt;""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>display type:</i> Set the slider display type. A value of g4 will set the display to the G4 type, anything else will set to the G5 (default) type.</li> <li>• <b>Example:</b>  <code>SEND_COMMAND Panel,""^GSD-10,g4""</code>            Set the display type of the bargraph with address code 10 to the g4 (legacy) type.  <code>SEND_COMMAND Panel,""^GSD-10,g5""</code>            Set the display type of the bargraph with address code 10 to the g5 (default) type.</li> </ul>
<b>^GSN</b>	<p>Bargraph set slider name command - Change the bargraph slider name. Slider names can be found in the TPDesign5 slider name drop-down list.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^GSN-&lt;addr range&gt;,&lt;bargraph slider name&gt;""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>bargraph slider name:</i> Name of valid sliders. At this point, the valid names are none, Circle -L, Circle -M, Circle -S, Precision, Rectangle -L, Rectangle -M, and Rectangle -S.</li> <li>• <b>Example:</b>  <code>SEND_COMMAND Panel,""^GSN-500,Rectangle -S""</code>            Changes the bargraph slider name to 'Rectangle -S'.</li> </ul>
<b>^JSB</b>	<p>Set button state bitmap alignment command - Set bitmap/picture alignment using a numeric keypad layout for those buttons with a defined address range. The alignment of 0 is followed by '&lt;left&gt;,&lt;top&gt;'. The left and top coordinates are relative to the upper left corner of the button.</p> <ul style="list-style-type: none"> <li>• <b>Syntax</b>  <code>""^JSB-&lt;addr range&gt;,&lt;button states range&gt;,&lt;new alignment&gt;""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>new alignment:</i> Value of 0- 11 (see Justification Values).</li> <li>• <b>Example:</b>  <code>SEND_COMMAND Panel,""^JSB-500.504&amp;510.515,1&amp;2,1""</code>            Sets the off/on state bitmap alignment to upper left corner for those buttons with address ranges of 500-504 &amp; 510-515.</li> </ul>
<b>?JSB</b>	<p>Get button state bitmap alignment value - Get the current bitmap alignment.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""?JSB-&lt;addr range&gt;,&lt;button states range&gt;""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). <i>index:</i> The bitmap index to get the value of.            Response is a custom event with the following properties:            Custom Event Property    Value            Port                    port command was received on            ID                        address of the button            Type                     1005            Flag                      0            Value 1                  state number            Value 2                  alignment value 0-10            Value 3                  bitmap index</li> </ul>

Button Commands																																					
	<p>Text alignment description The alignments description will be one of the following: <i>absolute, top-left, top-center, top-right, middle-left, middle-center, middle-right, bottom-left, bottom-center, bottom-right, scale-to-fit, scale-maintain-aspect-ratio</i>. If the alignment is <i>absolute</i>, the X and Y offsets will be specified in the text as well: <i>absolute,xoffset,yoffset</i></p> <p>• <b>Example:</b> SEND COMMAND Panel,""?JSB-529,1,2" Gets the button 'OFF state' bitmap justification information for bitmap at index 2. The result sent to the Controller would be:</p> <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>address of the button</td></tr> <tr><td>Type</td><td>1005</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>state number</td></tr> <tr><td>Value 2</td><td>5</td></tr> <tr><td>Value 3</td><td>2</td></tr> <tr><td>Text</td><td>middle-center</td></tr> </table>	Custom Event Property	Value	Port	port command was received on	ID	address of the button	Type	1005	Flag	0	Value 1	state number	Value 2	5	Value 3	2	Text	middle-center																		
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	address of the button																																				
Type	1005																																				
Flag	0																																				
Value 1	state number																																				
Value 2	5																																				
Value 3	2																																				
Text	middle-center																																				
^JST	<p>Set button state text alignment command - Set text alignment for those buttons with a defined address range. The alignment of 0 is followed by '&lt;left&gt;,&lt;top&gt;'. The left and top coordinates are relative to the upper left corner of the button.</p> <p>• <b>Syntax:</b> ""^JST-&lt;addr range&gt;,&lt;button states range&gt;,&lt;new alignment&gt;""</p> <p>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>new alignment:</i> Value of 0- 11 (see Justification Values).</p> <p>• <b>Example:</b> SEND_COMMAND Panel,""^JST-500.504&amp;510.515,1&amp;2,5" Sets the off/on state text alignment to middle-center for those buttons with address ranges of 500-504 &amp; 510-515.</p>																																				
?JST	<p>Get button state bitmap alignment value.</p> <p>• <b>Syntax:</b> ""?JST-&lt;addr range&gt;,&lt;button states range&gt;""</p> <p>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state). Response is a custom event with the following properties:</p> <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>address of the button</td></tr> <tr><td>Type</td><td>1004</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>state number</td></tr> <tr><td>Value 2</td><td>alignment value 0-10</td></tr> <tr><td>Value 3</td><td>0</td></tr> <tr><td>Text</td><td>alignment description</td></tr> </table> <p>The alignments description will be one of the following: <i>absolute, top-left, top-center, top-right, middle-left, middle-center, middle-right, bottom-left, bottom-center, bottom-right, scale-to-fit</i>. If the alignment is <i>absolute</i>, the X and Y offsets will be specified in the description as well: <i>absolute,xoffset,yoffset</i></p> <p>• <b>Example:</b> SEND COMMAND Panel,""?JST-529,1,2" Gets the button 'OFF state' text justification information. The result sent to the Controller would be:</p> <table border="0"> <tr><td>Custom Event Property</td><td>Value</td></tr> <tr><td>Port</td><td>port command was received on</td></tr> <tr><td>ID</td><td>address of the button</td></tr> <tr><td>Type</td><td>1004</td></tr> <tr><td>Flag</td><td>0</td></tr> <tr><td>Value 1</td><td>state number</td></tr> <tr><td>Value 2</td><td>0</td></tr> <tr><td>Value 3</td><td>0</td></tr> <tr><td>Text</td><td>absolute,10,10</td></tr> </table>	Custom Event Property	Value	Port	port command was received on	ID	address of the button	Type	1004	Flag	0	Value 1	state number	Value 2	alignment value 0-10	Value 3	0	Text	alignment description	Custom Event Property	Value	Port	port command was received on	ID	address of the button	Type	1004	Flag	0	Value 1	state number	Value 2	0	Value 3	0	Text	absolute,10,10
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	address of the button																																				
Type	1004																																				
Flag	0																																				
Value 1	state number																																				
Value 2	alignment value 0-10																																				
Value 3	0																																				
Text	alignment description																																				
Custom Event Property	Value																																				
Port	port command was received on																																				
ID	address of the button																																				
Type	1004																																				
Flag	0																																				
Value 1	state number																																				
Value 2	0																																				
Value 3	0																																				
Text	absolute,10,10																																				

## Button Commands

<p><b>^SAD</b></p>	<p>Subpage add command - Adds a subpage to a viewer button without changing the anchor subpage. If the named subpage is not present in the set it will be added in the specified position. If no position parameter is supplied the subpage is added to the end of the set. The anchor subpage will not be changed.</p> <p>If the named subpage is already present, it will be hidden from the set and re-added in the specified position. The anchor subpage will not be changed, unless the named subpage is currently the anchor. In that case, the next appropriate subpage will become the anchor and the named subpage will be added at the appropriate position.</p> <p>If no subpages are in the set, this command is effectively a Subpage Show command (^SSH).</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^SAD-&lt;addr range&gt;,&lt;name&gt;,&lt;optional position&gt;,&lt;optional time&gt;""</code></li> <li>• <b>Variables:</b> <i>address range</i>: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>name</i>: Specifies the name of the subpage to be shown or added. <i>position</i>: Specifies where to add the named subpage in the set with 0 representing the beginning of the set. If this value is left out (or set to 65535) then the new subpage is placed at the end of the list. <i>time</i>: Can range from 0 to 30 and represents tenths of a second. This is the amount of time used to move the subpages around when subpages are added or removed from a button.</li> <li>• <b>Example:</b>  <code>SEND_COMMAND Panel,"^SAD-400,media1"</code>            Add the media1 subpage at the end of the set.</li> </ul>																																
<p><b>^SCE</b></p>	<p>Subpage custom event command - Configure subpage custom events. This command can be used to enable or disable the transmission of custom events to the controller whenever certain operations occur. For example, the system programmer may want to be notified whenever a subpage enters the anchor position. The notification mechanism is a custom event. The ^SCE command takes the form of a <i>addr range</i> specifying one or more subpage viewer buttons followed by a comma separated list of custom event numbers. If the number is 0 or blank for a given event type then no custom event will be transmitted when that event occurs. If a number is specified, then it is used as the EVENTID value for the custom event. The range of 32001 to 65535 has been reserved in the panel for user custom event numbers. A different value could be used but might collide with other AMX event numbers. Event configuration is not permanent and all event numbers revert to the default of 0 when the panel restarts.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^SCE-&lt;addr range&gt;,&lt;optional anchor event num&gt;,&lt;optional onscreen event num&gt;,&lt;optional offscreen event num&gt;,&lt;optional reorder event num&gt;""</code></li> <li>• <b>Variables:</b> <i>address range</i>: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>anchor event number</i>: 0 for no event or a value from 32001 to 65535. <i>onscreen event number</i>: 0 for no event or a value from 32001 to 65535. <i>offscreen event number</i>: 0 for no event or a value from 32001 to 65535. <i>reorder event number</i>: 0 for no event or a value from 32001 to 65535.</li> </ul> <p>The events are:</p> <ul style="list-style-type: none"> <li>• <i>anchor</i> - a new subpage has docked in the anchor position.</li> <li>• <i>onscreen</i> - a docking operation has been completed and the subpages in the list are now onscreen. This list will include the anchor along with any subpages that may be partially onscreen.</li> <li>• <i>offscreen</i> - a docking operation has been completed and the subpages in the list are now offscreen.</li> <li>• <i>reorder</i> - the user has reordered the subpages in the set and the list contains all subpages in the new order without regard to onscreen or offscreen state.</li> </ul> <p>In response to any or all of the above events, the panel will create a string which is a list of subpage names separated by a pipe ( ) character. The string for the anchor event is a single subpage name. If this string is too long to be transmitted in a single custom event, then multiple custom events will be created and transmitted. If defined, the events are sent in this order when a docking operation completes on a given viewer button: anchor, onscreen, offscreen. If reorder is defined and occurs, it is sent first: reorder, anchor, onscreen, offscreen.</p> <p>The format of the custom event transmitted to the controller is as follows:</p> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>address of the button generating the event</td> </tr> <tr> <td>Type</td> <td>the non-zero event number in the ^SCE command</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>which one of possible multiple events this is (1 based)</td> </tr> <tr> <td>Value 2</td> <td>total number of events needed to send the entire string</td> </tr> <tr> <td>Value 3</td> <td>the total size of the original string in bytes      Text      pipe character separated list of subpage names</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>• <b>Example:</b>  <code>SEND_COMMAND Panel,"^SCE-200,32001,0,0,0"</code>            If the subpage named TV_Favorite_SyFy enters the anchor position on a subpage viewer button with an address of 200, the following event would be transmitted to the controller when the user had sent this command to the panel:</li> </ul> <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>200</td> </tr> <tr> <td>Type</td> <td>32001</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>1</td> </tr> <tr> <td>Value 2</td> <td>1</td> </tr> <tr> <td>Value 3</td> <td>16</td> </tr> </tbody> </table>	Custom Event Property	Value	Port	port command was received on	ID	address of the button generating the event	Type	the non-zero event number in the ^SCE command	Flag	0	Value 1	which one of possible multiple events this is (1 based)	Value 2	total number of events needed to send the entire string	Value 3	the total size of the original string in bytes      Text      pipe character separated list of subpage names	Custom Event Property	Value	Port	port command was received on	ID	200	Type	32001	Flag	0	Value 1	1	Value 2	1	Value 3	16
Custom Event Property	Value																																
Port	port command was received on																																
ID	address of the button generating the event																																
Type	the non-zero event number in the ^SCE command																																
Flag	0																																
Value 1	which one of possible multiple events this is (1 based)																																
Value 2	total number of events needed to send the entire string																																
Value 3	the total size of the original string in bytes      Text      pipe character separated list of subpage names																																
Custom Event Property	Value																																
Port	port command was received on																																
ID	200																																
Type	32001																																
Flag	0																																
Value 1	1																																
Value 2	1																																
Value 3	16																																

## Button Commands

	Text	TV_Favorite_SyFy																																		
<b>?SCE</b>	<p>Query Subpage Custom Event Numbers Command - Query the assigned subpage custom event numbers for a subpage viewer button. A series of custom events for the subpage viewer button may be sent as a response.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> “”?SCE-&lt;addr range&gt;”</li> <li><b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. The format of the custom event transmitted to the controller is as follows:  <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>address of the button generating the event</td> </tr> <tr> <td>Type</td> <td>the non-zero event number in the ^SCE command</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>which one of possible multiple events this is (1 based)</td> </tr> <tr> <td>Value 2</td> <td>total number of events needed to send the entire string</td> </tr> <tr> <td>Value 3</td> <td>the total size of the original string in bytes</td> </tr> </tbody> </table> Text pipe character separated list of subpage names</li> <li><b>Example</b> (Assuming the previous command, ^SCE-200,32001,0,0,0, has been sent...): SEND_COMMAND Panel, “”?SCE-200” If the subpage named TV_Favorite_SyFy enters is in the anchor position on a subpage viewer button with an address of 200, the following event would be transmitted to the controller when the user had sent this command to the panel:  <table border="1"> <thead> <tr> <th>Custom Event Property</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>Port</td> <td>port command was received on</td> </tr> <tr> <td>ID</td> <td>200</td> </tr> <tr> <td>Type</td> <td>32001</td> </tr> <tr> <td>Flag</td> <td>0</td> </tr> <tr> <td>Value 1</td> <td>1</td> </tr> <tr> <td>Value 2</td> <td>1</td> </tr> <tr> <td>Value 3</td> <td>16</td> </tr> <tr> <td>Text</td> <td>TV_Favorite_SyFy</td> </tr> </tbody> </table> </li> </ul>	Custom Event Property	Value	Port	port command was received on	ID	address of the button generating the event	Type	the non-zero event number in the ^SCE command	Flag	0	Value 1	which one of possible multiple events this is (1 based)	Value 2	total number of events needed to send the entire string	Value 3	the total size of the original string in bytes	Custom Event Property	Value	Port	port command was received on	ID	200	Type	32001	Flag	0	Value 1	1	Value 2	1	Value 3	16	Text	TV_Favorite_SyFy	
Custom Event Property	Value																																			
Port	port command was received on																																			
ID	address of the button generating the event																																			
Type	the non-zero event number in the ^SCE command																																			
Flag	0																																			
Value 1	which one of possible multiple events this is (1 based)																																			
Value 2	total number of events needed to send the entire string																																			
Value 3	the total size of the original string in bytes																																			
Custom Event Property	Value																																			
Port	port command was received on																																			
ID	200																																			
Type	32001																																			
Flag	0																																			
Value 1	1																																			
Value 2	1																																			
Value 3	16																																			
Text	TV_Favorite_SyFy																																			
<b>^SDL</b>	<p>Streaming digital video loop count - This command allows a button state that has video fill to a streaming URL to set a number of times to play a video. This applies to local file video streams primarily.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> “^SDL-&lt;Address range&gt;,&lt;State range&gt;,&lt;loop count&gt;”</li> <li><b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>loop count:</i> number of times to loop a completed video. 0 = loop indefinitely (default), &gt;0 = number of times to loop.</li> <li><b>Example:</b> SEND_COMMAND Panel, “^SDL-10,1&amp;2,1” Set the loop count to 1 for address 10 on and off states.</li> </ul>																																			
<b>^SDM</b>	<p>Button State Streaming Digital Media Command - Starts or stops a streaming session. Stream starts if a valid URL is specified and stops if server URL string is empty or invalid. To use this command, the current page should have one visible streaming button.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> “^SDM-&lt;address range&gt;,&lt;button states range&gt;,&lt;URL&gt;”</li> <li><b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>URL:</i> &lt;protocol://&gt;&lt;host name or host ip&gt;&lt;:video port&gt;&lt;:optional audio port&gt; <i>Protocol</i> could have the following values: udp = MPEG2 transport stream over UDP http = Motion JPEG (JFIF format over MIME Multipart) [Varia Panels Only] rtpmpeg2 = MPEG2 elementary stream over RTP/RTCP [Varia Panels do not support] rtpmpeg4 = MPEG4 elementary stream over RTP/RTCP [Varia Panels do not support] If the optional audio port is not specified, video port + 2 is used for audio.</li> </ul> <p><b>Playing a video file stored on a USB drive attached to the panel</b> Enter the path of the video file on the attached USB drive with “file:///udisk/” as the prefix: “^SDM-&lt;Address range&gt;,&lt;State range&gt;,file:///udisk/path_to_video_file_on_usb_drive” <i>Note: There are three slashes after “file:”, not two as in a standard URL. If there aren’t three slashes, the video file won’t be found to be played.</i> For example, for a video file named “test-video.mp4” in a directory named “videos” on the USB drive, enter: “file:///udisk/videos/test-video.mp4” <b>Playing a video file stored on the panel</b> Enter the filename of the video file with “amxdir:///” as the prefix. “^SDM-&lt;Address range&gt;,&lt;State range&gt;,amxdir:///video_file” <i>Note: There are three slashes after “amxdir:”, not two as in a standard URL. If there aren’t three slashes, the video file won’t be found.</i> For example, for a video file named “test-video.mp4”, enter:</p>																																			

## Button Commands

	<p>“amxdir:///test-video.mp4”</p> <p>To change the video using the ^SDM command to a different video (that has been transferred to the panel), use the same URL scheme as the prefix (amxdir:///).</p> <p><i>Note that any files that are transferred to the amxdir:/// directory are not cleared by a panel file transfer or via “Remove User Pages”. The only way to clear the file is to do a Factory Data Reset, or to upload an empty file with the same filename.</i></p> <p><i>To get around this, you can specify the file to be in “amxdir:///AMXPanel/images/filename” instead.</i></p> <p><i>To do this using NetLinx Studio File Transfer, set the “Controller Directory” to \AMXPanel\images\ in the device mapping. This will put the file in the panel file images directory. A TP5 file transfer will not remove the file, but a “Remove User Pages” will. The Streaming Source value in the TP5 file will have to correspond to the same path.</i></p> <p><i>Refer to the Streaming a Video File Saved on the Panel via Custom URL Scheme section for an example workflow for playing a video file in the G5 panel’s internal storage.</i></p> <ul style="list-style-type: none"> <li> <b>Examples:</b>            SEND_COMMAND Panel,”^SDM-400,1,file:///udisk/Video-Clip.mp4”            Set the OFF state to play the video file Video-Clip.mp4 located on an attached USB disk.            SEND_COMMAND 10001:2:0,”^SDM-10,2,udp://234.4.0.4:5500”            Sets ON state to play video on multicast address.            SEND_COMMAND 10001:2:0,”^SDM-10,1,stop”            Stop playing the current video.            SEND_COMMAND 10001:2:0,”^SDM-10,1,”            Stop playing the current video.            SEND_COMMAND 10001:1:0,”^SDM-10,1,udp://169.254.1.1:5700”            Start playing the current video.  <i>Note: When using the variable “udp,” this must be in lower case.</i> </li> </ul>
^SDR	<p>Enabling subpage dynamic reordering command - This command can be used to enable or disable dynamic reordering for a given viewer button or set of viewer buttons. It can also be used to set the amount of time to wait before initiating the single finger reorder time.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>            “^SDR-&lt;addr range&gt;,&lt;enable state&gt;,&lt;optional hold time&gt;”         </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>enable state:</i> This value can be either “on” or “ON” or “1” to enable dynamic reordering for the specified viewer button(s). Any other value will disable dynamic reordering for the specified viewer button(s). <i>hold time:</i> This value is in tenths of a second. The value will be rounded up to the next highest quarter of a second. This is the amount of time that the user must press and hold a subpage with a single finger to trigger a dynamic reordering operation.         </li> </ul>
^SHA	<p>Subpage Hide All Command - Hide all subpages in a subpage viewer button.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>            “^SHA-&lt;addr range&gt;”         </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address.         </li> <li> <b>Example:</b>            SEND_COMMAND Panel,”^SHA-200”            Remove all subpages from subpage viewer button with address 200.         </li> </ul>
^SHD	<p>Subpage Hide Command - This command will hide the named subpage and relocate the surrounding subpages as necessary to close the gap. If the subpage to be hidden is currently offscreen then it is removed without any other motion on the subpage viewer button.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>            “^SHD-&lt;addr range&gt;,&lt;name&gt;,&lt;optional time&gt;”         </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>name:</i> name of subpage to hide. If name is __all, then all subpages are hidden. <i>time:</i> Can range from 0 to 30 and represents tenths of a second. This is the amount of time used to move the subpages around when subpages are hidden from a button.         </li> <li> <b>Example:</b>            SEND_COMMAND Panel,”^SHD-200,menu1,10”            Remove the menu1 subpage from subpage viewer button with address 200 over one second.         </li> </ul>
^SHO	<p>Button Show/Hide Command. Show or hide a button.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>            “^SHO-&lt;addr range&gt;,&lt;command value&gt;”         </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>command value:</i> 0 = hide, 1 = show         </li> <li> <b>Example:</b>            SEND_COMMAND Panel,”^SHO-500.504&amp;510.515,0”         </li> </ul>

Button Commands	
	Hides buttons with variable text address range 500-504 & 510-515.
<b>^SPD</b>	<p>Subpage Padding Command - Set the padding between subpages on a subpage viewer button.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^SPD-&lt;addr range&gt;,&lt;padding&gt;”</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>padding:</i> percentage from 0 to 100 of the first subpage in a set to set as a padding between subpages. For a horizontal subpage viewer button it is a percentage of the width and for a vertical subpage viewer button it is a percentage of the height.</li> <li>• <b>Example:</b> SEND_COMMAND Panel, “^SPD-400,10” Set the padding between subpages in the set to 10% of the dimension of the first subpage in the set.</li> </ul>
<b>^SSH</b>	<p>Subpage Show Command - This command will perform one of three different operations based on the following conditions:</p> <ol style="list-style-type: none"> <li>If the named subpage is hidden in the set associated with the viewer button it will be shown in the anchor position.</li> <li>If the named subpage is not present in the set it will be added to the set and shown in the anchor position.</li> <li>If the named subpage is already present in the set and is not hidden, then the viewer button will move it to the anchor position. The anchor position is the location on the subpage viewer button specified by its weighting. This will either be left, center or right for horizontal subpage viewer buttons or top, center or bottom for vertical subpage viewer buttons. Surrounding subpages are relocated on the viewer button as needed to accommodate the described operations.</li> </ol> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^SSH-&lt;addr range&gt;,&lt;name&gt;,&lt;optional position&gt;,&lt;optional time&gt;”</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>name:</i> Specifies the name of the subpage to be shown or added. <i>position:</i> Specifies where to add (or show) the named subpage in the set with 0 representing the beginning of the set. If this value is left out (or set to 65535) then the weighting value for the viewer button is used to place the new subpage, i.e. left/top, center or right/bottom. When using the weighting locations, set insertion positions can vary based on the current onscreen locations of existing subpages. <i>time:</i> Can range from 0 to 30 and represents tenths of a second. This is the amount of time used to move the subpages around when subpages are added or removed from a button.</li> <li>• <b>Example:</b> SEND_COMMAND Panel, “^SSH-400,media1,0,10” Add or show the media1 subpage in the anchor position over one second.</li> </ul>
<b>^STG</b>	<p>Subpage Toggle Command - If the named subpage is hidden, then this command activates a subpage show command. If the named subpage is present, then a subpage hide command is activated.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^STG-&lt;addr range&gt;,&lt;name&gt;,[optional position],[optional time]”</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>name:</i> Specifies the name of the subpage to be shown or added. <i>position:</i> Specifies where to show the named subpage in the set with 0 representing the beginning of the set. If this value is left out (or set to 65535) then the weighting value for the viewer button is used to place the new subpage, i.e. left/ top, center or right/bottom. When using the weighting locations, set insertion positions can vary based on the current onscreen locations of existing subpages. If the subpage is being hidden this parameter is ignored. <i>time:</i> Can range from 0 to 30 and represents tenths of a second. This is the amount of time used to move the subpages around when subpages are added or removed from a button.</li> <li>• <b>Example:</b> SEND_COMMAND Panel, “^STG-400,media1,0,10” Show or hide the media1 subpage over one second.</li> </ul>
<b>^TEC</b>	<p>Set text effect color command - Set the text effect color for the specified addresses/states to the specified color. The Text Effect is specified by name and can be found in TPD5. You can also assign the color by name or RGB value (RRGGBB or RRGGBBAA).</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> “^TEC-&lt;addr range&gt;,&lt;button states range&gt;,&lt;color value&gt;”</li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A ‘.’ between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>color value:</i> See color table for more information.</li> </ul> <p><i>Note: Colors can be set by Color Numbers, Color name, RGB alpha colors (RRGGBBAA) or RGB colors values (RRGGBB). RGBA and RGB color are given in HEX ASCII prepended by a ‘#’.</i></p> <ul style="list-style-type: none"> <li>• <b>Example:</b> SEND_COMMAND Panel, “^TEC-500.504&amp;510.515,1&amp;2,12” Sets the text effect color to Very Light Yellow on buttons with variable text 500-504 and 510-515.</li> </ul>
<b>?TEC</b>	<p>Get text effect color command - Get the current text effect color.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b></li> </ul>

## Button Commands

	<p>""?TEC-&lt;addr range&gt;,&lt;button states range&gt;""</p> <ul style="list-style-type: none"> <li> <b>Variables:</b>  <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). The format of the custom event transmitted to the controller is as follows:  Custom Event Property Value  Port port command was received on  ID address of the button generating the event  Type 1009  Flag 0  Value 1 button state number  Value 2 actual length of string  Value 3 0  Text Hex encoded color value (ex: #000000FF) </li> <li> <b>Example:</b>  SEND_COMMAND Panel,""?TEC-529,1""  Gets the button 'OFF state' text effect color information. The result sent to the Controller would be:  Custom Event Property Value  Port port command was received on  ID address of the button generating the event  Type 1009  Flag 0 Value 1 1  Value 2 9  Value 3 0  Text #5088F2AE </li> </ul>
^TEF	<p>Set the current text effect command - Set the current text effect.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>  ""^TEF-&lt;addr range&gt;,&lt;button states range&gt;,&lt;text effect name/number&gt;"" </li> <li> <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>text effect name/number:</i> See the Text Effect Name/Numbers table for text effect names and numbers. </li> <li> <b>Example:</b>  SEND_COMMAND Panel,""^TEF-500.504&amp;510.515,1&amp;2,Soft Drop Shadow 3""  Sets the text effect to Soft Drop Shadow 3 for the button with variable text range 500-504 and 510-515. </li> </ul>
?TEF	<p>Get the current text effect command - Get the current text effect.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b>  ""?TEF-&lt;addr range&gt;,&lt;button states range&gt;"" </li> <li> <b>Variables:</b>  <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.  <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state).  The format of the custom event transmitted to the controller is as follows:  Custom Event Property Value  Port port command was received on  ID address of the button generating the event  Type 1008  Flag 0  Value 1 button state number  Value 2 actual length of string  Value 3 text effect number Text text effect name </li> <li> <b>Example:</b>  SEND_COMMAND Panel,""?TEF-529,1""  Gets the button 'OFF state' text effect name information. The result sent to the Controller would be:  Custom Event Property Value  Port port command was received on  ID 529  Type 1008  Flag 0 Value 1 1  Value 2 18  Value 3 27  Text Hard Drop Shadow 3 </li> </ul>

Button Commands	
<b>^TXT</b>	<p>Set button state text command - Assign a Non-Unicode, non-UTF-8 text string to those buttons with a defined address range. Note that this command has been replaced by ^UTF, but is being kept for backwards compatibility. It supports ASCII characters, but extended ASCII (i.e. characters from 128-255) are interpreted according to the Latin-1 character set (ISO 8859-1). Unicode (i.e. characters &gt; 255) are not supported</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^TXT-&lt;addr range&gt;,&lt;button states range&gt;,&lt;new text&gt;""</code></li> <li>• <b>Variables:</b>  <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>new text:</i> new text as ASCII characters.</li> <li>• <b>Example:</b>            SEND_COMMAND Panel,""^TXT-500.504&amp;510.515,1&amp;2,Test Only"            Sets the On and Off state text for buttons with the variable text ranges of 500-504 &amp; 510-515.</li> </ul>
<b>?TXT</b>	<p>Query button state text command - Get the text of a button state.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""?TXT-&lt;addr range&gt;,&lt;button states range&gt;[,&lt;optional index&gt;]""</code></li> <li>• <b>Variables:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state). <i>optional index:</i> This is used if a string was too long to get back in one command. The reply will start at this index. The response returned is a custom event with the following syntax:            Custom Event Property Value            Port port command was received on            ID address of the button generating the event            Type 1001            Flag 0: Legacy Latin-1 (ISO-8859-1) encoded characters                      (^ENC must have previously been sent to change default encoding method)                      1: Legacy AMX Hex Quad encoded Unicode characters                      2: UTF-8 encoded Characters (default encoding; ASCII-compatible)            Value 1 button state number            Value 2 actual length of string            Value 3 optional index            Text text from the button, encoded with the method specified by Flag</li> <li>• <b>Example:</b>            SEND_COMMAND Panel,""?TXT-529,1"            Gets the button 'OFF state' text information. Example Response:            Custom Event Property Value            Port port command was received on            ID 529            Type 1001            Flag 2 Value 1 1            Value 2 14 Value 3 0            Text This is a test</li> </ul>
<b>^UNI</b>	<p>Set button state legacy unicode text command - Set Unicode text in the legacy G4 format. For the ^UNI command, the Unicode text is sent as ASCII-HEX nibbles.  <i>Note: In the legacy format, Unicode text is always represented in a HEX value. TPD generates (through the Text Enter Box dialog) Unicode HEX values. Refer to the TPDesign Instruction Manual for more information. This command has been replaced by ^UTF, but is being kept for backwards compatibility.</i></p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b>  <code>""^UNI-&lt;addr range&gt;,&lt;button states range&gt;,&lt;unicode text&gt;""</code></li> <li>• <b>Variables:</b>  <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state).  <i>unicode text:</i> Unicode HEX value.</li> <li>• <b>Example:</b>            SEND_COMMAND Panel,""^UNI-500,1,0041"            Sets the button's unicode character to 'A'.            SEND_COMMAND TP,""^UNI-1,0,0041"            Send the variable text 'A' in unicode to all states of the variable text button 1, (for which the character code is 0041 Hex).</li> </ul>
<b>^UTF</b>	<p>Set button state text using UTF-8 text command - Set State Text Command using UTF-8 (replaces the ^TXT and ^UNI commands). Assign a text string encoded with UTF-8 (which is ASCII-compatible) to those buttons with a defined address range.  <i>Note: This command replaces the legacy ^TXT command and the legacy ^UNI command, but text must be encoded with UTF-8. While UTF-8 is ASCII compatible, extended ASCII characters in the range 128-255 will be encoded differently based on UTF-8. his command also supports</i></p>

## Button Commands

Unicode characters using UTF-8 (which is the encoding method used in >80% of web servers), making the old AMX Hex quad Unicode encoding obsolete (though the ^UNI command is still supported for backwards compatibility).

- **Syntax:**

“^UTF-<vt addr range>,<button states range>,<new text>”

- **Variables:**

variable text address range: 1 - 4000.

Button states range: 1 - 256 for multi-state buttons (0 = All states, for General buttons 1 = Off state and 2 = On state).

unicode text: Unicode UTF-8 text.

- **Example:**

SEND\_COMMAND Panel,”^UTF-500.504&510.515,1&2, ASCII ExtendedASCIIÇüéääååç Unicode 動き始めました”

Sets the On and Off state text for buttons with the variable text ranges of 500-504 & 510-515.

## Text Effect Name/Numbers

Text Effect Name/Numbers			
Number	Name	Number	Name
0	None	30	Hard Drop Shadow 6
1	Outline -S	31	Hard Drop Shadow 7
2	Outline -M	32	Hard Drop Shadow 8
3	Outline -L	33	Soft Drop Shadow 1 with Outline
4	Outline -X	34	Soft Drop Shadow 2 with Outline
5	Glow -S	35	Soft Drop Shadow 3 with Outline
6	Glow -M	36	Soft Drop Shadow 4 with Outline
7	Glow -L	37	Soft Drop Shadow 5 with Outline
8	Glow -X	38	Soft Drop Shadow 6 with Outline
9	Soft Drop Shadow 1	39	Soft Drop Shadow 7 with Outline
10	Soft Drop Shadow 2	40	Soft Drop Shadow 8 with Outline
11	Soft Drop Shadow 3	41	Medium Drop Shadow 1 with Outline
12	Soft Drop Shadow 4	42	Medium Drop Shadow 2 with Outline
13	Soft Drop Shadow 5	43	Medium Drop Shadow 3 with Outline
14	Soft Drop Shadow 6	44	Medium Drop Shadow 4 with Outline
15	Soft Drop Shadow 7	45	Medium Drop Shadow 5 with Outline
16	Soft Drop Shadow 8	46	Medium Drop Shadow 6 with Outline
17	Med Drop Shadow 1	47	Medium Drop Shadow 7 with Outline
18	Med Drop Shadow 2	48	Medium Drop Shadow 8 with Outline
19	Med Drop Shadow 3	49	Hard Drop Shadow 1 with Outline
20	Med Drop Shadow 4	50	Hard Drop Shadow 2 with Outline
21	Med Drop Shadow 5	51	Hard Drop Shadow 3 with Outline
22	Med Drop Shadow 6	52	Hard Drop Shadow 4 with Outline
23	Med Drop Shadow 7	53	Hard Drop Shadow 5 with Outline
24	Med Drop Shadow 8	54	Hard Drop Shadow 6 with Outline
25	Hard Drop Shadow 1	55	Hard Drop Shadow 7 with Outline
26	Hard Drop Shadow 2	56	Hard Drop Shadow 8 with Outline
27	Hard Drop Shadow 3		
28	Hard Drop Shadow 4		
29	Hard Drop Shadow 5		



## Dynamic Image Commands

Dynamic Image Commands	
<b>^BBR</b>	<p>Button State Bitmap Resource Command - Assign a resource to those buttons with a defined address range.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b>  <code>""^BBR-&lt;vt addr range&gt;,&lt;button states range&gt;,&lt;resource name&gt;,[optional bitmap index], [optional justification]""</code></li> <li><b>Variables:</b>  <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>button states range:</i> 1 - 256 for multi-state buttons (0 = All states, for General buttons, 1 = Off state and 2 = On state).  <i>resource name:</i> name of resource  <i>Optional bitmap index:</i> 1 - 5, the state bitmap index to assign the resource. If not present, will place the referenced resource in index 1. The indexes are defined as:            0 - Chameleon Image (if present)            1 - Bitmap 1            2 - Bitmap 2            3 - Bitmap 3            4 - Bitmap 4            5 - Bitmap 5  <i>Optional justification:</i> 0-11 (see Justification Values). If absolute justification (0) is set, the next two parameters are the X and Y offset of the bitmap for the referenced index. If no justification is specified, the current justification is used.</li> <li><b>Example:</b>  <code>SEND_COMMAND Panel,""^BBR-500.504&amp;510.515,1,image_xray""</code>            Sets the OFF state picture for the buttons with variable text ranges of 500-504 &amp; 510-515 to the resource named <i>image_xray</i>.</li> </ul>
<b>^RAF</b>	<p>Resource Add Command - Add new resources. Adds any and all resource parameters by sending embedded codes and data. Since the embedded codes are preceded by a '%' character, any '%' character contained in the URL must be escaped with a second '%' character (see example). The file name field (indicated by a %F embedded code) may contain special escape sequences as shown in the ^RAF, ^RMF - Embedded Codes table. Note: For server authentication to occur, the %U (username) and %S (password) Embedded Codes must be included, and they must match the credentials required by the server.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b>  <code>""^RAF-&lt;resource name&gt;,&lt;data&gt;""</code></li> <li><b>Variables:</b>  <i>resource name:</i> name of the resource to add. <i>data:</i> Refers to the embedded codes, see the ^RAF, ^RMF - Embedded Codes.  <i>Note:</i> The %P, %U, %S, %H, %A, and %F values can be entered in a single string.</li> <li><b>Example:</b>  <code>SEND_COMMAND Panel,""^RAF-New Image, %P0%HAMX.COM%ALab/Test%5file%Ftest.jpg""</code>            Adds a new resource.            The resource name is 'New Image'            %P (protocol) is 0 for an HTTP connection            %H (host name) is AMX.COM            %A (file path) is Lab/Test_file %F (file name) is test.jpg.  <i>Note: the %5F in the file path is actually encoded as %5F.</i></li> </ul>
<b>^RFR</b>	<p>Refresh Resource Command - Force a refresh of the given resource. The command will refresh when the resource is visible onscreen. If it is not onscreen, it will be deferred until it is visible to do the refresh. An optional notification option can be set to receive a custom event from the panel when the resource refresh is complete. Optional width and height parameters can be specified to refresh the image at a specific resolution. If width and height parameters are not specified, the resource will be refreshed at the resolution(s) of any active buttons to which it is assigned. If there are no active buttons currently assigned that resource, it will be refreshed at its native resolution adjusted by any project scale factor.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b>  <code>""^RFR-&lt;resource name&gt;,[notification option],[width],[height]""</code></li> <li><b>Variables:</b>  <i>Resource name:</i> name of the resource to refresh  <i>Notification option:</i> An optional notification option at the end of the command with the following possible values: On - notifications are sent whenever the named dynamic image resource is loaded/refreshed.            Off - notifications are not sent (default).            Once - notifications are sent one time whenever the named dynamic image resource is loaded/refreshed.            Notifications are not sent on subsequent loads/refreshes.  <i>width:</i> Specifies the width at which the resource should be refreshed (the image will be scaled as needed).  <i>height:</i> Specifies the height at which the resource should be refreshed (the image will be scaled as needed).</li> </ul>

	<ul style="list-style-type: none"> <li><b>Example:</b> SEND_COMMAND Panel,"^RFR-Sports_Image,on" Force a refresh on 'Sport_Image' when the resource is visible onscreen and enable completion notifications. SEND_COMMAND Panel,"^RFR-Sports_Image,off" Force a refresh on 'Sport_Image' when the resource is visible onscreen and disable completion notifications. SEND_COMMAND Panel,"^RFR-Sports_Image,once" Force a refresh on 'Sport_Image' when the resource is visible onscreen and enable a onetime completion notification. SEND_COMMAND Panel,"^RFR-Sports_Image,once,800,600" Force a refresh on 'Sport_Image' at the resolution 800x600 when the resource is visible onscreen and enable a onetime completion notification.</li> </ul>
<b>^RFRP</b>	<p>Resource Refresh Prefetch Command - Force a refresh of the given resource. The command will "prefetch" the resource even if it is not currently visible.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^RFRP-&lt;resource name&gt;,[notification option],[width],[height]""</li> <li><b>Variables:</b> <i>Resource name:</i> name of the resource to refresh <i>Notification option:</i> An optional notification option at the end of the command with the following possible values: On - notifications are sent whenever the named dynamic image resource is loaded/refreshed. Off - notifications are not sent (default). Once - notifications are sent one time whenever the named dynamic image resource is loaded/refreshed. Notifications are not sent on subsequent loads/refreshes. <i>width:</i> Specifies the width at which the resource should be refreshed (the image will be scaled as needed). <i>height:</i> Specifies the height at which the resource should be refreshed (the image will be scaled as needed).</li> <li><b>Example:</b> SEND_COMMAND Panel,"^RFRP-Sports_Image,on" Force a refresh on 'Sport_Image' immediately and enable completion notifications. SEND_COMMAND Panel,"^RFRP-Sports_Image,off" Force a refresh on 'Sport_Image' immediately and disable completion notifications. SEND_COMMAND Panel,"^RFRP-Sports_Image,once" Force a refresh on 'Sport_Image' immediately and enable a one-time completion notification. SEND_COMMAND Panel,"^RFRP-Sports_Image,once,800,600" Force a refresh on 'Sport_Image' immediately at the resolution 800x600 and enable a onetime completion notification.</li> </ul>
<b>^RMF</b>	<p>Resource Modify Command - Modifies any and all resource parameters by sending embedded codes and data. Since the embedded codes are preceded by a '%' character, any '%' character contained in the URL must be escaped with a second '%' character (see example). The file name field (indicated by a %F embedded code) may contain special escape sequences as shown in the ^RAF, ^RMF - Embedded Codes table.</p> <p><i>Note: For server authentication to occur, the %U (username) and %S (password) Embedded Codes must be included, and they must match the credentials required by the server.</i></p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^RMF-&lt;resource name&gt;,&lt;data&gt;""</li> <li><b>Variables:</b> <i>resource name:</i> name of the resource to modify <i>data:</i> Refers to the embedded codes, see the ^RAF, ^RMF - Embedded Codes. <i>Note: The %P, %U, %S, %H, %A, and %F values can be entered in a single string.</i></li> <li><b>Example:</b> SEND_COMMAND Panel,"^RMF-Sports_Image,%ALab%5FTest/Images%Ftest.jpg" Changes the resource 'Sports_Image' file name to 'test.jpg' and the path to 'Lab_Test/Images'. <i>Note: the %5F in the file path is actually encoded as %5F.</i></li> </ul>
<b>^RSR</b>	<p>Resource Rate Command - Change the refresh rate for a given resource.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^RSR-&lt;resource name&gt;,&lt;refresh rate&gt;""</li> <li><b>Variables:</b> <i>Resource name:</i> name of the resource to set the refresh rate <i>refresh rate:</i> Measured in seconds.</li> <li><b>Example:</b> SEND_COMMAND Panel,"^RSR-Sports_Image,5" Sets the refresh rate to 5 seconds for the given resource ('Sports_Image').</li> </ul>
<b>^RAF, ^RMF - Embedded Codes</b>	<p>The ^RAF and ^RMF commands add and modify any and all resource parameters by sending embedded codes and data: ""^RAF-&lt;resource name&gt;,&lt;data&gt;"" ""^RMF-&lt;resource name&gt;,&lt;data&gt;"" The &lt;data&gt; variable uses the embedded codes described in the ^RAF and ^RMF Embedded Codes table.</p>
<b>^RAF, ^RMF - Escape Sequences</b>	<p>The ^RAF and ^RMF commands support the replacement of any special escape sequences in the filename (specified by the %F embedded code) with the corresponding data obtained from the system as outlined in the ^RAF and ^RMF Escape Sequences table.</p>



## ^RAF and ^RMF Embedded Codes / Escape Sequences

**NOTE:** The %P, %U, %S, %H, %A, and %F values can be entered In a single string.

^RAF and ^RMF Embedded Codes		
Parameter	Embedded Code	Code Description
protocol	%P<0  2>	Set protocol: Either HTTP (0) or FTP (1), or HTTPS(2) Notes: <ul style="list-style-type: none"> <li>• FTP is not supported at this time.</li> <li>• HTTPS (%P2) is supported in G5 panel firmware v1.4.9 and higher.</li> </ul>
user	%U <user>	Set Username for authentication.
password	%S <password>	Set Password for authentication.
host	%H <host>	Set Host Name (fully qualified DNS or IP address).
path	%A <path>	Set directory path. The path must be a valid HTTP URL minus the protocol, host, and filename. The only exception to this is the inclusion of special escape sequences and in the case of the FTP protocol, regular expressions.
file	%F <file>	The file or program that will return the resource. The file must be a valid HTTP URL minus the protocol, host, and path. The only exception to this is the inclusion of special escape sequences and in the case of the FTP protocol, regular expressions.
refresh	%R <refresh 1-65535>	The number of seconds between refreshes in which the resource is downloaded again. Refreshing a resource causes the button displaying that resource to refresh also. The default value is 0, which means to only download the resource once for each time it comes into view (or if preserve is set, only once period). <i>Note: For Motion JPEGs, the Refresh interval should always be 0.</i>
preserve	%V <0-1>	Set the value of the preserve flag. A value of 0 (the default) means the resource should be reloaded each time it comes into view. A value of 1 means the resource should be preserved in cache after the first time it is loaded, and not reloaded each time it comes into view. This value is ignored if the Refresh interval is greater than 0.
dynamo	%D	Enable/disable Fast Dynamo. Panel will attempt to accelerate this resource in hardware. <i>Note: Fast Dynamo is not yet supported.</i>
notification	%C<on,off,once>	Indicates whether a notification is required when a Dynamic Image is loaded/ refreshed. The string following the %C can be: <ol style="list-style-type: none"> <li>1. on - notifications are sent whenever the named dynamic image resource is loaded/refreshed.</li> <li>2. off - notifications are not sent (default).</li> <li>3. once - notifications are sent one time whenever the named dynamic image resource is loaded/refreshed.</li> </ol> Notifications are not sent on subsequent loads/refreshes. If the %C code is not sent as part of a ^RAF command, the notifications are set to off. If the %C code is not sent as part of a ^RMF command, the notifications are not changed from the current setting.
URL	%L <URL>	Set the complete URL as a single value. URL is in the format set in RFC 2396. Code Block <code>http://username:password@host:port/directory/file?query#fragment</code> <i>Note: The %P, %U, %S, %H, %A, and %F values can be entered In a single string. Note: If the URL is the first part of the resource data, then the %L is assumed and need not be included. See example below.</i> Example: The following send commands are equivalent. All examples set the resource Image1 to a URL of <code>http://server/folder1/image.jpg</code> with a username of username, password of password, notifications on, and refresh time of 30 seconds: SEND_COMMAND Panel,'^RMF-Image1,%Lhttp://username:password@server/folder1/image.jpg%Con%R30' SEND_COMMAND Panel,'^RMF-Image1,%P0%Username%Spassword%Hserver%Afolder1%Fimage.jpg%Con%R30' SEND_COMMAND Panel,'^RMF-Image1,http://username:password@server/folder1/image.jpg%Con%R30' SEND_COMMAND Panel,'^RMF-Image1,http://server/folder1/image.jpg%Con%R30%Username%Spassword'

## ^RAF and ^RMF Escape Sequences

Sequence	Panel Information	Sequence	Panel Information
\$DV	Device Number	\$AP	Address port
\$SY	System Number	\$CC	Channel code
\$IP	IP Address	\$CP	Channel port
\$HN	Host Name	\$LC	Level code
\$MC	Mac Address	\$LP	Level port
\$PX	X resolution of current panel mode/file	\$BX	X Resolution of Current button
\$PY	Y resolution of current panel mode/file	\$BY	Y Resolution of Current button
\$ST	Current state	\$BN	Name of Button
\$AC	Address code		

## Listview (Data Access) Commands

The Data Access commands described in the following table represent a set of Button (^) Send Commands that support the use of dynamic data for Listview buttons in NetLinx code. Note that the address range indicated in the syntax examples represents the address of the Listview button, and works the same as it does for all other (^) Button Send Commands.

Many Listview Send Commands take a boolean parameter. Any of the following values can be used:

Will resolve to true	Will resolve to false
true	false
TRUE	FALSE
on	off
ON	OFF
1	0
	(empty)

## Terminology

The NetLinx Data Access Send Commands use the following terminology:

Netlinx Data Access Send Commands - Terminology	
Name	Description
<b>DataFeed</b>	A DataFeed is a descriptor with a unique name used to publish data records. A DataFeed can be created by a NetLinx program and then published to the NetLinx web server for external consumption by devices like the G5 touch panel for use with Listview buttons. DataFeeds can also be sourced from a server running the AMX XPort software.
<b>DataRecord</b>	A DataRecord represents a container of data fields and the index/ordinal position of the row in the recordset. A DataRecord may contain metadata and/or content fields.
<b>DataField</b>	SA DataField represents the value that stores the actual data elements. All raw data in the NetLinx data access APIs are stored and managed as values and (one or more) attributes.

Listview Commands	
<b>^LVC</b>	<p>Listview Cache Configure - This command configures the image cache used by the Listview.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b>  <code>""^LVC-&lt;configuration_option=configuration_value&gt;""</code></li> <li><b>Variables:</b> a comma separated list of one or more configuration parameters followed by an equal sign and the configuration setting.</li> <li><b>Configuration Options:</b>  <i>clear:</i> Clear the current memory and disk cache used for Listview image loading. <i>mem_size:</i> The size of the memory cache, either as a percentage of the available application memory or as total size. Percentages are specified as floating point. Percentage values are 2% (0.02) to 20% (0.20) and totals are 16 to 256 MB. The default is 10%.(0.10) <i>disk_size:</i> The size of the disk cache. Valid values are 16 to 500 MB The default is 200.</li> <li><b>Example:</b>  <code>SEND_COMMAND Panel,""^LVC-clear""</code>            Clear the Listview cache.</li> </ul>
<b>^LVD</b>	<p>Set Listview Data Source - This command sets the data source to drive the Listview entries. Note that this command only configures the data source it does not actually cause the data to be fetched. The ^LVR refresh command must be issued to load the data.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b>  <code>""^LVD-&lt;addr range&gt;,&lt;URL to data source or Dynamic Data Resource name&gt;, &lt;configuration_option=configuration_value&gt;""</code></li> <li><b>Variable:</b> <i>address range:</i> Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.            Data source URL/Dynamic Data Resource name (required): If the suffix of the URL is .csv or .CSV then the URL will be assumed to point to a csv file. Otherwise the type is assumed to be the XPort amxstandard.xml format.</li> </ul>

## Listview Commands

	<p>Supported URL schemes are HTTP, HTTPS, and FILE.</p> <p>Data Source URL Notes:</p> <p>HTTPS is supported in G5 panel firmware version v1.4.9 and higher.          HTTPS is not supported by TPDesign5 dynamic image resources at this time.          A file on the panel's local filesystem can be specified using the file:/// option. <i>There must be three forward slashes after 'file:'.</i>          An FTP URL scheme is not supported.</p> <p>Refer to <i>Notes on Using Image URLs With Listview Buttons</i> for additional details. <i>option list</i>: a optional comma separated list of one or more configuration parameters followed by an equal sign and the configuration setting.</p> <ul style="list-style-type: none"> <li> <b>Configuration Options:</b> <ul style="list-style-type: none"> <li><i>user</i> - The user name to use for authenticating to the web server when retrieving the feed data source file. If specified when URL is a Dynamic Data Resource, this value will override the username inside the Dynamic Data Resource.  <i>Note: For server authentication to occur, the Username (user) and Password (pass) must be included in the ^LVD command, and they must match the credentials required by the server.</i></li> <li><i>pass</i> - The password to use for authenticating to the web server when retrieving the feed data source file. If specified when URL is a Dynamic Data Resource, this value will override the password inside the Dynamic Data Resource.  <i>Note: For server authentication to occur, the Username (user) and Password (pass) must be included in the ^LVD command, and they must match the credentials required by the server.</i></li> <li><i>csv</i> - a boolean indicating whether or not to parse the data source as a CSV file.                      If not present, defaults to false.</li> <li><i>has_headers</i> - a boolean indicating that the first line of the CSV file has column headers which will be used to name the content fields for each data record.                      If true it automatically implies that <i>csv</i> is also true.                      If this option is not present then the default for a CSV file is false.                      In the absence of headers, the content fields will be named using the following convention: column1, column2, column3... (CSV files only, since XML always has field names specified within the file).</li> </ul> </li> <li> <b>Example:</b> <pre>SEND_COMMAND Panel,"^LVD-42,http://192.168.220.231/public/lv42data.csv, has_headers=1"</pre>                     Configures the Listview button to use the CSV file at the URL as its data source. The first line of the CSV file should be parsed as field names and not as Listview entry record data.                 </li> </ul>
<p><b>^LVE</b></p>	<p>Set ListView custom event number - This command sets the custom event number reported by Listview refresh operations.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b> <pre>"^LVE-&lt;addr range&gt;,&lt;Listview custom event number&gt;"</pre> </li> <li> <b>Variable:</b> <i>address range</i>: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>event number</i>: The custom event number to report Listview events. At this time, only refresh events are reported. A value of 0 turns off custom event reporting, A value &gt; 0 assigns the value to the Listview custom event number for that address. The default value is 1401 (custom events reported).                      When enabled, the custom event format reported is:                      Custom Event Property Value                      Port port command was received on                      ID address of the button                      Type button event number set by ^LVE                      Flag StartRefresh = 1; FinishRefresh = 2; Error = 0xffff (\$FFFF); Value 1 If flag is StartRefresh (1) or                      FinishRefresh (2):                          InitRefresh = 0; (refresh by dynamic resource)                          ManualRefresh = 1; (refresh by send command)                          TimedRefresh = 2; (refresh by timer) If flag is Error:                          Error = -1; (some form of error, see custom.text for description) InvalidUrl = -2; (URL is null, should never happen)                          LoginFailed = -3; (could not authenticate to web server). Value 2 data load id. Every data load is assigned a unique id that counts up from 0. This is used to correlate StartRefresh/                      FinishRefresh/Error events on particular addresses.                      Value 3 When Custom.flag == FinishRefresh, this is the number of records in list. Otherwise is 0.                      Text feed URL string, or error message if flag is Error                 </li> <li> <b>Example:</b> <pre>SEND_COMMAND Panel,"^LVE-42,1401"</pre>                     Configures the Listview widget to send Listview custom events on event 1401.                 </li> </ul>
<p><b>^LVF</b></p>	<p>Listview Filter - This command can be used to programmatically change the filter contents of the Listview widget. When the filter contents is changed, the filter will be applied to the current Listview data which can change the number of items displayed based on those that meet the filter sequence. The filter changes immediately, and the filter can be set or cleared with this command.</p> <ul style="list-style-type: none"> <li> <b>Syntax:</b> <pre>"^LVF-&lt;addr range&gt;,&lt;filter character sequence&gt;"</pre> </li> <li> <b>Variable:</b> <i>address range</i>: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.  <i>filter character sequence</i>: All characters including white space characters will be applied to the filter.                 </li> <li> <b>Example:</b> <pre>SEND_COMMAND Panel,"^LVF-42,amx"</pre> </li> </ul>

## Listview Commands

	<p>Sets the filter sequence to amx. Only items in the data set that contain the sequence amx will be displayed. SEND_COMMAND Panel,"^LVF-42,"</p> <p>Clears the filter sequence. All items in the data set can be viewed in the Listview.</p>																																								
^LVL	<p>Listview Layout - This command sets the layout configuration to configure the visual representation of the Listview entries.</p> <ul style="list-style-type: none"> <li><b>Syntax:</b> ""^LVL-&lt;vt addr range&gt;,&lt;layout_option=layout_value&gt;""</li> <li><b>Variables:</b> Variable text address range = 1 - 4000. A comma separated list of one or more layout configuration parameters followed by an equal sign and the configuration setting.</li> <li><b>Layout Options:</b> <i>columns</i> - Number of columns parameter. An integer that represents the number of columns to display. The number must be at least 1 and a value that exceeds the minimum cell width will truncate to the maximum. <i>Note: Valid tags for the columns parameter are columns=, nc=, and numcol=.</i> <i>comp</i> - Component parameter. An integer that is a value which determines which graphical components are present in the cell. When the component values are bitwise or'd together, it creates the encoding for the cell components that are populated. If a configuration parameter is not in the current command, the last value for the configuration parameter is used. <i>Note: Valid tags for the comp parameter are c= and comp=.</i></li> </ul>																																								
	<table border="1"> <thead> <tr> <th>Component Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>The image (i) is used in the cell.</td> </tr> <tr> <td>2</td> <td>The primary text field (t1) is used in the cell.</td> </tr> <tr> <td>4</td> <td>The secondary text field (t2) is used in the cell</td> </tr> </tbody> </table> <p><i>Not all variations of component values are valid. To have the secondary text field present, the primary text field must be preset as well.</i></p> <table border="1"> <thead> <tr> <th>Component Combinations</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Invalid. No component displayed.</td> </tr> <tr> <td>1</td> <td>The image (i) is the only component displayed.</td> </tr> <tr> <td>2</td> <td>The primary text field (t1) is the only component displayed.</td> </tr> <tr> <td>3</td> <td>The image (i) and the primary text field (t1) are displayed.</td> </tr> <tr> <td>4</td> <td>Secondary text (t2) only. Invalid. Secondary text (t2) cannot be displayed without the primary text (t1).</td> </tr> <tr> <td>5</td> <td>Secondary text (t2) and image (i). Invalid. Secondary text (t2) cannot be displayed without the primary text (t1).</td> </tr> <tr> <td>6</td> <td>The primary text (t1) and secondary text (t2) are displayed.</td> </tr> <tr> <td>7</td> <td>The image (i), primary text (t1), and secondary text (t2) are displayed</td> </tr> </tbody> </table> <p><b>cellheight</b> - An integer or percentage that sets the height of a cell. The value can be an integer &gt;= the minimum cell height (48), or a percentage of the list height (5% up to 95%). To specify a percentage, append a '%' to the end of the value. <i>Note: Valid tags for the cellheight param are ch= and cellheight=.</i></p> <p><b>layout</b> - An integer that sets the layout configuration of each cell. <i>Note: valid tags for the layout parameter are l= and layout=.</i></p> <table border="1"> <thead> <tr> <th>Layout Value</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Horizontal layout with image on the left and text(s) on the right. If multiple texts are selected then the texts are stacked vertically.</td> </tr> <tr> <td>2</td> <td>Horizontal layout with image on the right and text(s) on the left. If multiple texts are selected then the texts are stacked vertically.</td> </tr> <tr> <td>3</td> <td>Horizontal layout with text1 on the left, image in the center, and text2 on the right. If multiple texts are selected then the texts are stacked vertically.</td> </tr> <tr> <td>4</td> <td>Vertical layout with the image on the top and text(s) below the image. If multiple texts are selected then text1 is below the image and text2 is below text1.</td> </tr> <tr> <td>5</td> <td>Vertical layout with the image on the bottom and text(s) above the image. If multiple texts are selected then text1 is on top, text2 is below text1, and the image is below text2.</td> </tr> <tr> <td>6</td> <td>Vertical layout with text1 on top, the image below text1, and text2 below the image.</td> </tr> </tbody> </table> <p><b>p1</b> - layout percentage 1. Sets the boundaries between cell components in different layouts. An integer between 10 and 90 that sets the boundary between components as a percentage of the cell dimension. The percentage can be specified as a number between 5-95 with an optional percentage sign '%' at the end. <b>p2</b> - layout percentage 2. Sets the boundaries between cell components in different layouts. An integer between 10 and 90 that sets the boundary between components as a percentage of the cell dimension. The percentage can be specified as a number between 5-95 with an optional percentage sign '%' at the end. <b>filter</b> - Enable or disable the search filter on the Listview. To enable set to 'true', 'on', or '1'. To disable set to 'false', 'off', or '0'. <i>Note: Valid tags for the filter parameter are f= and filter=.</i> <b>filterheight</b> - An integer or percentage that sets the height of the filter in the Listview. The value can be an integer &gt;= the minimum filter height (24), or a percentage of the list height (5% to 25%). To specify a percentage, append a '%' to the end of the value.</p>	Component Value	Description	1	The image (i) is used in the cell.	2	The primary text field (t1) is used in the cell.	4	The secondary text field (t2) is used in the cell	Component Combinations	Description	0	Invalid. No component displayed.	1	The image (i) is the only component displayed.	2	The primary text field (t1) is the only component displayed.	3	The image (i) and the primary text field (t1) are displayed.	4	Secondary text (t2) only. Invalid. Secondary text (t2) cannot be displayed without the primary text (t1).	5	Secondary text (t2) and image (i). Invalid. Secondary text (t2) cannot be displayed without the primary text (t1).	6	The primary text (t1) and secondary text (t2) are displayed.	7	The image (i), primary text (t1), and secondary text (t2) are displayed	Layout Value	Description	1	Horizontal layout with image on the left and text(s) on the right. If multiple texts are selected then the texts are stacked vertically.	2	Horizontal layout with image on the right and text(s) on the left. If multiple texts are selected then the texts are stacked vertically.	3	Horizontal layout with text1 on the left, image in the center, and text2 on the right. If multiple texts are selected then the texts are stacked vertically.	4	Vertical layout with the image on the top and text(s) below the image. If multiple texts are selected then text1 is below the image and text2 is below text1.	5	Vertical layout with the image on the bottom and text(s) above the image. If multiple texts are selected then text1 is on top, text2 is below text1, and the image is below text2.	6	Vertical layout with text1 on top, the image below text1, and text2 below the image.
	Component Value	Description																																							
	1	The image (i) is used in the cell.																																							
	2	The primary text field (t1) is used in the cell.																																							
	4	The secondary text field (t2) is used in the cell																																							
	Component Combinations	Description																																							
	0	Invalid. No component displayed.																																							
	1	The image (i) is the only component displayed.																																							
	2	The primary text field (t1) is the only component displayed.																																							
	3	The image (i) and the primary text field (t1) are displayed.																																							
	4	Secondary text (t2) only. Invalid. Secondary text (t2) cannot be displayed without the primary text (t1).																																							
	5	Secondary text (t2) and image (i). Invalid. Secondary text (t2) cannot be displayed without the primary text (t1).																																							
	6	The primary text (t1) and secondary text (t2) are displayed.																																							
	7	The image (i), primary text (t1), and secondary text (t2) are displayed																																							
	Layout Value	Description																																							
	1	Horizontal layout with image on the left and text(s) on the right. If multiple texts are selected then the texts are stacked vertically.																																							
	2	Horizontal layout with image on the right and text(s) on the left. If multiple texts are selected then the texts are stacked vertically.																																							
	3	Horizontal layout with text1 on the left, image in the center, and text2 on the right. If multiple texts are selected then the texts are stacked vertically.																																							
	4	Vertical layout with the image on the top and text(s) below the image. If multiple texts are selected then text1 is below the image and text2 is below text1.																																							
5	Vertical layout with the image on the bottom and text(s) above the image. If multiple texts are selected then text1 is on top, text2 is below text1, and the image is below text2.																																								
6	Vertical layout with text1 on top, the image below text1, and text2 below the image.																																								

## Listview Commands

	<p>Note: Valid tags for the filterheight param is fh= and filterheight=. <b>alphascroll</b> - Enable or disable the alpha scroll on the Listview. To enable set to 'true', 'on', or '1'. To disable set to 'false', 'off', or '0'.</p> <p>Note: Valid tags for the alphascroll parameter are as= and alphascroll=.</p> <ul style="list-style-type: none"> <li>• <b>Examples:</b></li> </ul> <p>SEND_COMMAND Panel,"^LVL-42, layout=1, comp=7, columns=1, cellheight=120, p1=40%, p2=66%"</p> <p>Sets the Listview configuration display an image and 2 text fields (comp=7), in a layout 1 configuration (layout=1 horizontal layout of the image on left and text1 and text2 to the right of the image). There is 1 column (columns=1) and the cell is 120 pixels high (h=120). The image width will be 40% of the cell width (p1=40%) with text1 and text2 having a width of 60% of the cell width. The height of text1 will be 66% of the cell height (p2=66%) with text2 height of 34% of the cell height.</p> <p>SEND_COMMAND Panel,"^LVL-42,l=4, c=3, ch=150, nc=4, p1=70%"</p> <p>Sets the Listview configuration display an image and 1 text fields (c=4), in a layout 4 configuration (l=4 vertical layout of the image on top and text1 below the image). There are 4 columns (nc=4) and the cell is 150 pixels high (ch=150). The image height will be 70% of the cell height (p1=70) with text1 having a height of 30% of the cell height.</p> <p>SEND_COMMAND Panel,"^LVL-42,layout=3, comp=6, ch=100, numcol=1, p1=50%"</p> <p>Sets the Listview configuration display 2 text fields (comp=6), in a layout 3 configuration (layout=2 horizontal layout of text1 on the left and text2 on the right). There is 1 column (numcol=1) and the cell is 100 pixels high (ch=100). The text1 width will be 50% of the cell width (p1=50) with text2 having a width of 50% of the cell width.</p> <p>SEND_COMMAND Panel,"^LVL-42,filter=1, fh=10%, as=false"</p> <p>Sets the Listview search filter enabled (filter=1), the search filter textview height to 10% of the Listview height (fh=10%), and disables the alphascroller on the Listview.</p>
<p><b>^LVM</b></p>	<p>Listview Map Fields - This command maps the fields from the data source to the display elements of a Listview entry. Each list entry corresponds to a record if the data came from the NetLinx data access API or XPort. If the data source is a csv file, then each list entry corresponds to a row in the file. A list entry can have up to two lines of text and a URL that points to an image. Each display element for a list entry has to be mapped to a field in the record. If no mapping is specified, then a default mapping is used which is simply to map the fields in order based on the screen layout of the list entry. So, if the list type was an image and two lines of text, the first content field in the record would be interpreted as the URL to the image, the next field would be the first line of text and the next field would be the second line of text. To override this default behavior, the ^LVM command should be used to specify the correct mapping.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b></li> </ul> <p>""^LVM-&lt;addr range&gt;,&lt;display_element=field_expression &lt;display_element= field_expression&gt; ...""</p> <li>• <b>Variable:</b> address range: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address.</li> <p>display element list: A pipe character " " separated list of mapping expressions. A pipe is used because typical field expressions may use more common characters such as the comma or semicolon. Display Elements: t1 - the first text element t2 - the second text element i1 - the first image future display types may support more text and image elements which will follow the same convention: t3... i2...</p> <ul style="list-style-type: none"> <li>• <b>Field Expressions:</b></li> </ul> <p>An expression that can be used to map field values to display elements. Any time a field name is used, it follows the form <b>\$(field_name)</b>. Other text characters can be used to construct a more complex string using multiple fields.</p> <ul style="list-style-type: none"> <li>• <b>Examples:</b></li> </ul> <p>SEND_COMMAND Panel,"^LVM-42,i1=\${image}"</p> <p>Configures the Listview widget to map an image field to the image display element. In this example, the Listview type is assumed to be a single image only.</p> <p>SEND_COMMAND Panel,"^LVM-42,i1=\${image} t1=\${lname}, \${fname} t2=\${number}"</p> <p>The Listview widget is the type that has an image and two lines of text. The top line will consolidate two different fields in the form of last name, first name. The second line of text will be the phone number.</p> <p>SEND_COMMAND Panel,"^LVM-42,t1=\${column2}, \${column1} t2=\${column3} i1=\${column4}"</p> <p>This is the same example as the one above it but the source of the data</p>
<p><b>^LVN</b></p>	<p>Listview Navigate - This command can be used to move the Listview widget. Navigation commands will be range checked. The command will attempt to position the specified list entry on the top line of the Listview widget. When navigating at the end of the list, however, the widget will position the last item in the list on the bottom line and will not leave blank lines at the bottom. The only exception to this case will be when the Listview has fewer entries than the number of displayable entries. If the optional select boolean is present, and the navigation command used support the select option, the item at the destination will be selected and a item selected custom event will be initiated.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b></li> </ul> <p>""^LVN-&lt;addr range&gt;,&lt;navigation_command&gt;[,&lt;boolean_select_param&gt;]"</p> <li>• <b>Variables:</b> address range: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. navigation command. optional select boolean</li> <p><b>Navigation Commands:</b> t or T - move to the top of the list (supports an optional select boolean). b or B - move to the bottom of the list (supports an optional select boolean). d or D - page down (DOES NOT support the optional select boolean. A select boolean will be ignored if present). n - move to a specific list entry number at position n. n is a zero based index. (supports an optional select boolean).</p> <p>(Note: If n is &lt; 0 and select is true then the current selected item is deselected.) u or U - page up (DOES NOT support the optional select boolean. A select boolean will be ignored if present).</p> <ul style="list-style-type: none"> <li>• <b>Examples:</b></li> </ul> <p>SEND_COMMAND Panel,"^LVN-42,B"</p> <p>Move to the bottom of the list.</p> <p>SEND_COMMAND Panel,"^LVN-42,d"</p> <p>Move the list down a page.</p>

## Listview Commands

	<p>SEND_COMMAND Panel,"^LVN-42,3,1" Move the list to position 3 in the list and select the item at position 3.</p>
<b>^LVR</b>	<p>Listview Refresh Data - This command has two different functions. If it is sent without any parameters, it causes the Listview widget to load data from its configured data source. If optional parameters are included with the command, then the automatic data refresh options are configured. The typical behavior for auto refresh is that the last modified time of the data source is tracked. At the refresh interval, the last modified time of the data source is compared against the stored value. If the data is newer, then it is reloaded and the Listview widget is refreshed with the updated data. If the data is unchanged, then it is not reloaded. The default for auto refresh is off.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> "^^LVR-&lt;addr range&gt;[,&lt;refresh_interval&gt;,&lt;force_reload&gt;]"</li> <li>• <b>Variable:</b> <i>address range</i>: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>refresh_interval</i> - the optional interval (in seconds) at which to check for newer data. 0 (the default) means auto refresh is off. Minimum is 5 seconds. If not specified, the current refresh interval is retained. <i>force_reload</i> - the optional parameter to force the Listview to ignore and data file timestamps and to force a clear on image caches for refreshed Listview images. Not specified or 0 will not force a reload, 1 will force a reload of data file and images associated with data file. <i>Note:</i> This can cause the images in a Listview to flicker upon the reload. This is the expected behavior due to the images being reloaded from the server.</li> <li>• <b>Examples:</b> SEND_COMMAND Panel,"^LVR-42" Commands the Listview widget to load the data from the data source and populate the Listview display widget. SEND_COMMAND Panel,"^LVR-42,15" Commands the Listview widget to check for an updated data source every 15 seconds. SEND_COMMAND Panel,"^LVR-42,600,1" Commands the Listview widget to check for an updated data source every hour, and to force a reload of the data and the images.</li> </ul>
<b>^LVS</b>	<p>Listview Sort Data - This command sets the columns that are used for sorting of lists, as well as the type of sorting that is done. The multiple columns are allowed in the sort procedure. The order of the columns in the command determine the order of the sorting. The first column is the primary sorting data, the second would be used for sorting with rows of data that are equal in the primary columns, and so on for however many columns are used for sorting. If no columns are listed in the command, then the current sorting columns are used if they have been previously defined. The type of sort is an optional part of the command and follows the sort columns.</p> <p>Initially, there are four different sort types available.</p> <ul style="list-style-type: none"> <li><i>None (n)</i> - No sorting is performed.</li> <li><i>Ascending (a)</i> - Ascending sort using localized character weighting.</li> <li><i>Descending (d)</i> - Descending sort using localized character weighting.</li> <li><i>Override (*)</i> - Override sort syntax portion of command determines sorting.</li> </ul> <p>The override sort syntax allows for complex SQLite ORDER BY syntax for sorting. When override is selected, the sort columns that were set in the command or previously are ignored and the entire sorting statement must be in the override sort syntax. The words ORDER BY should not be in the syntax. They are inserted by the firmware.</p> <ul style="list-style-type: none"> <li>• <b>Syntax:</b> "^^LVS-&lt;addr range&gt;,&lt;primary sort column name, secondary sort column name,..., final sort column name&gt;[:&lt;sort type&gt;[:&lt;override sort syntax&gt;]]"</li> <li>• <b>Variables:</b> <i>address range</i>: Address codes of buttons to affect. A '.' between addresses includes the range, and &amp; between addresses includes each address. <i>Sort columns</i> - comma separated list of sort columns in the order of sort priority. Sort columns can be specified using the \${column name} syntax that is used in the ^LVM command. Columns can be Content Fields or Metadata Fields in the controller Datafeed XML file generated by the controller. Metadata fields are prepended with "meta" in front of the "label" attribute of the field. <i>Sort Type</i> - A character indicating the sorting algorithm to use.     'a' - ascending     'd' - descending     '*' - override. Sort command syntax must follow in the next part of the command.     'n' - none (default). Any character that is not a,d, or * will set sort to none. <i>Override sort syntax</i> - A SQLite ORDER BY statement to use as the sort.</li> </ul>
<b>^LVS (Cont.)</b>	<ul style="list-style-type: none"> <li>• <b>Examples:</b> SEND_COMMAND Panel,"^LVS-42, \${artist name},\${title};a " Commands the Listview widget to sort the data source by the artist name and then title in an ascending order. Equates to "artistname, title COLLATE LOCALIZED ASC" override syntax. SEND_COMMAND Panel,"^LVS-42, \${artist name},\${title};d " Commands the Listview widget to sort the data source by the artist name and then title in an descending order. Equates to "artistname COLLATE LOCALIZED DESC, title COLLATE LOCALIZED DESC" override syntax. SEND_COMMAND Panel,"^LVS-42;n" Commands the Listview widget to not sort the current data. SEND_COMMAND Panel,"^LVS-150,\${user name},\${text};*;meta\${Record timestamp} ASC" Commands the panel to sort by the meta data field Record timestamp in ASCENDING order. The username and test fields are ignored.</li> </ul>

## Listview Commands

	<p>SEND_COMMAND Panel,"^LVS-150,;*;meta\${Record timestamp} ASC"          Commands the panel to sort by the meta data field "Record timestamp" in ASCENDING order. The username and test columns are ignored.</p> <p>SEND_COMMAND Panel,"^LVS-150,;*;LENGTH(\${description}),\${description} ASC"          Command the panel to sort by the number of characters in the description field, and then by the contents of the description field in ASCENDING order.</p>
--	--

**Note:** Refer to Appendix B: Using NetLinx to Define a Data Source (Listview Buttons) for information on using NetLinx Code to define a data source for Listview buttons.

### Notes on Using Image URLs With Listview Buttons

Since a Listview button can retrieve images to display as part of the Listview, the column in the data table that sets the image URL will require the server's username and password be included as part of the image URL.

The following example represents the contents of a .CSV file that has image URLs as part of the data. The URL Path column has some URLs with using http and no authentication credentials, some using http and user/password credentials, and one using https and user/password credentials:

File Type	No.	URL Path
GIF	1,	http://www.w3schools.com/images/compatible_chrome.gif
GIF	2,	http://www.w3schools.com/images/compatible_ie.gif
GIF	3,	http://www.w3schools.com/images/compatible_firefox.gif
PNG	4,	http://user:password@controller-ni3100/xsimple_green.png
PNG	5,	https://user:password@controller-nx1200/_AMX_Varia-mute-off.png
PNG	6,	http://user:password@controller-nx1200/_AMX_Varia-mute-on.png

**NOTE:** HTTPS is supported in G5 panel firmware version v1.4.9 and higher.

**NOTE:** HTTPS is not supported by TPDesign5 dynamic image resources at this time.

## Programming Numbers

Color Table										
Index No.	Name	Red	Green	Blue		Index No.	Name	Red	Green	Blue
0	Very Light Red	255	0	0		45	Medium Aqua	0	80	159
1	Light Red	223	0	0		46	Dark Aqua	0	64	127
2	Red	191	0	0		47	Very Dark Aqua	0	48	95
3	Medium Red	159	0	0		48	Very Light Blue	0	0	255
4	Dark Red	127	0	0		49	Light Blue	0	0	223
5	Very Dark Red	95	0	0		50	Blue	0	0	191
6	Very Light Orange	255	128	0		51	Medium Blue	0	0	159
7	Light Orange	223	112	0		52	Dark Blue	0	0	127
8	Orange	191	96	0		53	Very Dark Blue	0	0	95
9	Medium Orange	159	80	0		54	Very Light Purple	128	0	255
10	Dark Orange	127	64	0		55	Light Purple	112	0	223
11	Very Dark Orange	95	48	0		56	Purple	96	0	191
12	Very Light Yellow	255	255	0		57	Medium Purple	80	0	159
13	Light Yellow	223	223	0		58	Dark Purple	64	0	127
14	Yellow	191	191	0		59	Very Dark Purple	48	0	95
15	Medium Yellow	159	159	0		60	Very Light Magenta	255	0	255
16	Dark Yellow	127	127	0		61	Light Magenta	223	0	223
17	Very Dark Yellow	95	95	0		62	Magenta	191	0	191
18	Very Light Lime	128	255	0		63	Medium Magenta	159	0	159
19	Light Lime	112	223	0		64	Dark Magenta	127	0	127
20	Lime	96	191	0		65	Very Dark Magenta	95	0	95
21	Medium Lime	80	159	0		66	Very Light Pink	255	0	128
22	Dark Lime	64	127	0		67	Light Pink	223	0	112
23	Very Dark Lime	48	95	0		68	Pink	191	0	96
24	Very Light Green	0	255	0		69	Medium Pink	159	0	80
25	Light Green	0	223	0		70	Dark Pink	127	0	64

## Color Table

26	Green	0	191	0		71	Very Dark Pink	95	0	48
27	Medium Green	0	159	0		72	White	255	255	255
28	Dark Green	0	127	0		73	Grey1	238	238	238
29	Very Dark Green	0	95	0		74	Grey3	204	204	204
30	Very Light Mint	0	255	128		75	Grey5	170	170	170
31	Light Mint	0	223	112		76	Grey7	136	136	136
32	Mint	0	191	96		77	Grey9	102	102	102
33	Medium Mint	0	159	80		78	Grey4	187	187	187
34	Dark Mint	0	127	64		79	Grey6	153	153	153
35	Very Dark Mint	0	95	48		80	Grey8	119	119	119
36	Very Light Cyan	0	255	255		81	Grey10	85	85	85
37	Light Cyan	0	223	223		82	Grey12	51	51	51
38	Cyan	0	191	191		83	Grey13	34	34	34
39	Medium Cyan	0	159	159		84	Grey2	221	221	221
40	Dark Cyan	0	127	127		85	Grey11	68	68	68
41	Very Dark Cyan	0	95	95		86	Grey14	17	17	17
42	Very Light Aqua	0	128	255		87	Black	0	0	0
43	Light Aqua	0	112	223		255	TRANSPARENT	99	53	99
44	Aqua	0	96	191						

## Justification Values

Button State Number Justification Value		
Justification	Justification Value	Justification Parameters
Absolute	0	0,<x offset,y offset>
top-left	1	none
top-middle	2	none
top-right	3	none
center-left	4	none
center-middle	5	none
center-right	6	none
bottom-left	7	none
bottom-center	8	none
bottom-right	9	none
scaled-to-fit	10	none
scale-maintain-aspect-ratio	11	none

## Border Styles

Border Styles							
#	Border Style	#	Border Style	#	Border Style	#	Border Style
1	None	41	Diamond 65	81	Menu Btm Rounded 25	121	Menu Rt Rounded 45
2	AMX Elite -L	42	Diamond 75	82	Menu Btm Rounded 35	122	Menu Rt Rounded 55
3	AMX Elite -M	43	Diamond 85	83	Menu Btm Rounded 45	123	Menu Rt Rounded 65
4	AMX Elite -S	44	Diamond 95	84	Menu Btm Rounded 55	124	Menu Rt Rounded 75
5	Bevel -L	45	Diamond 105	85	Menu Btm Rounded 65	125	Menu Rt Rounded 85
6	Bevel -M	46	Diamond 115	86	Menu Btm Rounded 75	126	Menu Rt Rounded 95
7	Bevel -S	47	Diamond 125	87	Menu Btm Rounded 85	127	Menu Rt Rounded 105
8	Circle 15	48	Diamond 135	88	Menu Btm Rounded 95	128	Menu Rt Rounded 115
9	Circle 25	49	Diamond 145	89	Menu Btm Rounded 105	129	Menu Rt Rounded 125
10	Circle 35	50	Diamond 155	90	Menu Btm Rounded 115	130	Menu Rt Rounded 135
11	Circle 45	51	Diamond 165	91	Menu Btm Rounded 125	131	Menu Rt Rounded 145
12	Circle 55	52	Diamond 175	92	Menu Btm Rounded 135	132	Menu Rt Rounded 155
13	Circle 65	53	Diamond 185	93	Menu Btm Rounded 145	133	Menu Rt Rounded 165
14	Circle 75	54	Diamond 195	94	Menu Btm Rounded 155	134	Menu Rt Rounded 175
15	Circle 85	55	Double Bezel -L	95	Menu Btm Rounded 165	135	Menu Rt Rounded 185
16	Circle 95	56	Double Bezel -M	96	Menu Btm Rounded 175	136	Menu Rt Rounded 195
17	Circle 105	57	Double Bezel -S	97	Menu Btm Rounded 185	137	Menu Lt Rounded 15
18	Circle 115	58	Double Line	98	Menu Btm Rounded 195	138	Menu Lt Rounded 25
19	Circle 125	59	Fuzzy	99	Menu Top Rounded 15	139	Menu Lt Rounded 35

Border Styles							
20	Circle 135	60	Glow -L	100	Menu Top Rounded 25	140	Menu Lt Rounded 45
21	Circle 145	61	Glow -M	101	Menu Top Rounded 35	141	Menu Lt Rounded 55
22	Circle 155	62	Glow -S	102	Menu Top Rounded 45	142	Menu Lt Rounded 65
23	Circle 165	63	Help Down	103	Menu Top Rounded 55	143	Menu Lt Rounded 75
24	Circle 175	64	Neon Active -L	104	Menu Top Rounded 65	144	Menu Lt Rounded 85
25	Circle 185	65	Neon Active -S	105	Menu Top Rounded 75	145	Menu Lt Rounded 95
26	Circle 195	66	Neon Inactive -L	106	Menu Top Rounded 85	146	Menu Lt Rounded 105
27	Cursor Bottom	67	Neon Inactive -S	107	Menu Top Rounded 95	147	Menu Lt Rounded 115
28	Cursor Bottom w/hole	68	Oval H 60x30	108	Menu Top Rounded 105	148	Menu Lt Rounded 125
29	Cursor Top	69	Oval H 100x50	109	Menu Top Rounded 115	149	Menu Lt Rounded 135
30	Cursor Top w/hole	70	Oval H 150x75	110	Menu Top Rounded 125	150	Menu Lt Rounded 145
31	Cursor Left	71	Oval V 30x60	111	Menu Top Rounded 135	151	Menu Lt Rounded 155
32	Cursor Left w/hole	72	Oval V 50x100	112	Menu Top Rounded 145	152	Menu Lt Rounded 165
33	Cursor Right	73	Oval V 75x150	113	Menu Top Rounded 155	153	Menu Lt Rounded 175
34	Cursor Right w/hole	74	Oval V 100x200	114	Menu Top Rounded 165	154	Menu Lt Rounded 185
35	Custom Frame	75	Picture Frame	115	Menu Top Rounded 175	155	Menu Lt Rounded 195
36	Diamond 15	76	Quad Line	116	Menu Top Rounded 185		
37	Diamond 25	77	Single Line	117	Menu Top Rounded 195		
38	Diamond 35	78	Windows Style Popup	118	Menu Rt Rounded 15		
39	Diamond 45	79	Windows Style Popup (status bar)	119	Menu Rt Rounded 25		
40	Diamond 55	80	Menu Btm Rounded 15	120	Menu Rt Rounded 35		

## ISO-8859-1 Character Encoding/Decoding table

ISO-8859-1 Character Encoding/Decoding					
	Character value (decimal)	Character value (hex)	^TXT and ^UTF interchangeable	?TXT Response Flag in Backwards Compatibility Mode (^ENC-1 was sent)	?TXT Response Flag in default (UTF-8) Mode
<b>ASCII</b>	0-127	0x00-0x7F	Yes	0 (Latin-1)	2 (UTF-8)
<b>Latin-1 (Windows-1252 remap range)</b>	128-159	0x80-0x9F	No	1 (Hex-quad)	2 (UTF-8)
<b>Latin-1</b>	160-255	0xA0-0xFF	No	0 (Latin-1)	2 (UTF-8)
<b>Unicode</b>	>255	>0xFF	No	1 (Hex-quad)	2 (UTF-8)

## Resource Escape Codes

Resource Escape Codes			
Sequence	Panel Information	Sequence	Panel Information
\$DV	Device number	\$AP	Address port

## Resource Escape Codes

\$SY	System number	\$CC	Channel code
\$IP	IP address	\$CP	Channel port
\$HN	Host name	\$LC	Level code
\$MC	MAC address	\$LP	Level port
\$PX	X resolution of current panel mode/file	\$BX	X resolution of current button
\$PY	Y resolution of current panel mode/file	\$BY	Y resolution of current button
\$ST	Current state	\$BN	Name of button
\$AC	Address code		

## Virtual Keystroke Commands

### Virtual Keystroke Commands

Keycode	Key	Keycode	Key	Keycode	Key
1	Soft-L	74	;	147	Numpad 3
2	Soft-R	75	Apostrophe	148	Numpad 4
3	Home	76	/	149	Numpad 5
4	Back	77	@	150	Numpad 6
5	Call	78	Num	151	Numpad 7
6	End Call	79	Headset Hook	152	Numpad 8
7	0	80	Focus	153	Numpad 9
8	1	81	+	154	Numpad /
9	2	82	Menu	155	Numpad *
10	3	83	Notification	156	Numpad -
11	4	84	Search	157	Numpad +
12	5	85	Media Play/Pause	158	Numpad .
13	6	86	Media Stop	159	Numpad ,
14	7	87	Media Next	160	Numpad Enter
15	8	88	Media Prev	161	Numpad =
16	9	89	Media Rew	162	Numpad (
17	*	90	Media FF	163	Numpad )
18	#	91	Mute	164	Volume Mute
19	DPad-U	92	Page Up	165	Info
20	DPad-D	93	Page Down	166	Chan Up
21	DPad-L	94	Pict Symbols	167	Chan Down
22	DPad-R	95	Switch Charset	168	Zoom In
23	DPad-Center	96	Button A	169	Zoom Out
24	Vol Up	97	Button B	170	TV
25	Vol Dn	98	Button C	171	Window
26	Power	99	Button X	172	Guide
27	n/a	100	Button Y	173	DVR
28	Clear	101	Button Z	174	Bookmark
29	A	102	Button L1	175	Captions
30	B	103	Button R1	176	Settings
31	C	104	Button L2	177	TV Power
32	D	105	Button R2	178	TV Input

## Virtual Keystroke Commands

33	E	106	Button Thumb L	179	STB Power
34	F	107	Button Thumb R	180	STB Input
35	G	108	Button Start	181	AVR Power
36	H	109	Button Select	182	AVR Input
37	I	110	Button Mode	183	Prog Red
38	J	111	Escape	184	Prog Green
39	K	112	Forward Delete	185	Prog Yellow
40	L	113	Ctrl-L	186	Prog Blue
41	M	114	Ctrl-R	187	App Switch
42	N	115	Caps Lock	188	Button 1
43	O	116	Scroll Lock	189	Button 2
44	P	117	Meta L	190	Button 3
45	Q	118	Meta R	191	Button 4
46	R	119	Function	192	Button 5
47	S	120	SysReq / Print Screen	193	Button 6
48	T	121	Break	194	Button 7
49	U	122	Move Home	195	Button 8
50	V	123	Move End	196	Button 9
51	W	124	Insert	197	Button 10
52	X	125	Forward	198	Button 11
53	Y	126	Media Play	199	Button 12
54	Z	127	Media Pause	200	Button 13
55	,	128	Media Close	201	Button 14
56	.	129	Media Eject	202	Button 15
57	Alt-L	130	Media Record	203	Button 16
58	Alt-R	131	F1	204	Language Switch
59	Shift-L	132	F2	205	Manner Mode
60	Shift-R	133	F3	206	3D Mode
61	TAB	134	F4	207	Contacts
62	Space	135	F5	208	Calendar
63	Sym	136	F6	209	Music
64	Explorer	137	F7	210	Calculator
65	Envelope	138	F8	211	Zenkaku Hankaku
66	Enter	139	F9	212	Eisu
67	Delete	140	F10	213	Mhenkan
68	Grave	141	F11	214	Henkan
69	-	142	F12	215	Katakana Hiragana
70	_	143	Num Lock	216	Yen
71	[	144	Numpad 0	217	Ro
72	]	145	Numpad 1	218	Kana
73	\	146	Numpad	219	Assist

# Appendix A: Upgrading Firmware via NetLinX Studio

## Overview

The latest firmware (.kit) file for each panel is available to download from [www.amx.com](http://www.amx.com). To download firmware files, go to the catalog page for your panel type, and click the link under “Firmware Files” on the right side of the catalog page. The ZIP file that is downloaded via this link contains the firmware (.kit) file that can be loaded on the panel, as well as release notes and any relevant programming instructions.

## Upgrading Firmware via NetLinX Studio (v4 or Higher)

G5 touch panels use an Ethernet connection for programming, firmware updates, and touch panel file transfer via NetLinX Studio. If you have access to the panel's network, you may transfer files directly to the panel through NetLinX Studio.

NetLinX Studio features the ability to transfer G5 firmware files directly to a G5 touch panel via HTTP (via a stand-alone web server). This feature is provided to shorten the amount of time required for transferring a G5 \*.kit file by removing the NetLinX Controller from the transfer path.

\*.kit files for G5 panels contain a token to signify to NetLinX Studio that a web server file transfer can take place, as indicated in the file information window of the Send To NetLinX Device dialog:

Look for “\*\*\*\*\* HTTP File Transfer Capable \*\*\*\*\*” at the end of the file.

When NetLinX Studio detects that the file is a G5 \*.kit file, it will automatically attempt to send the file via HTTP (using the standalone web server that is started by NetLinX Studio).

1. In NetLinX Studio, open the *Online Tree* tab of the Workspace bar.
2. Under *System*, select a G5 panel for the firmware update (FIG. 157):

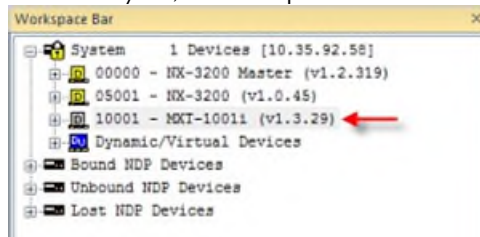


FIG. 157 NetLinX Studio Online Tree (MXT-1001 selected)

3. Right-Click on the G5 panel, and select **Firmware Transfer** from the context menu (FIG. 158):


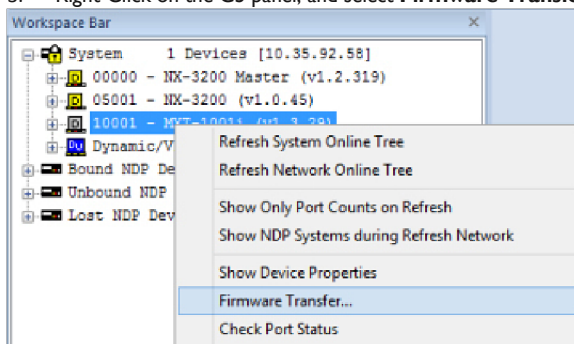



FIG. 158 NetLinX Studio Online context menu (Firmware Transfer selected) This invokes the Send To *NetLinX Device* dialog.

4. Under *Location*, click the *Browse (...)* button to locate and select the directory containing the G5 firmware (\*.kit) file that will be transferred, in the *Browse For Folder* dialog.
5. Click **OK** to close the *Browse For Folder* dialog and populate the *Files* window with a listing of \*.kit files found in the selected folder.
6. In the *Files* window, click to select the G5 \*.kit file to transfer (FIG. 159):

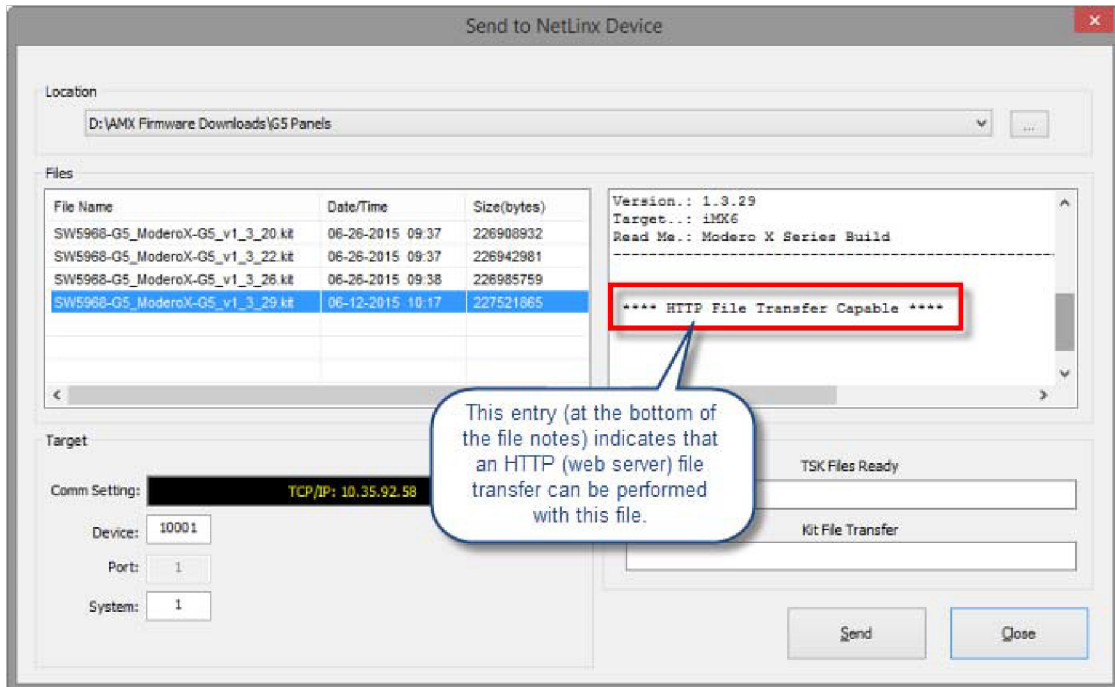

**FIG. 159** NetLinX Studio - Send to NetLinX Device dialog This invokes the Send To *NetLinX Device* dialog.

7. Click **Send** to initiate the firmware file transfer. The progress of the transfer is indicated in the progress bars (FIG. 160):

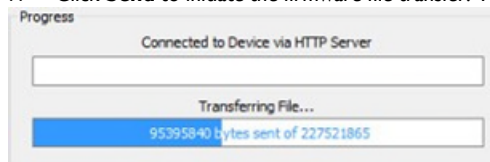


**FIG. 160** NetLinX Studio - Send to NetLinX Device dialog (Progress bars indicating an active firmware file transfer)

8. The Panel will display the Message “*Updating System Files*”, then restart itself.
9. The *Installing System Update* page will be displayed on the panel until the firmware upgrade process is complete. At this point, the panel will reboot and open it’s home page.

## HTTP Server Transfer Error

If an error occurs during this type of transfer, then the HTTP Server Transfer Error dialog is invoked (FIG. 161):

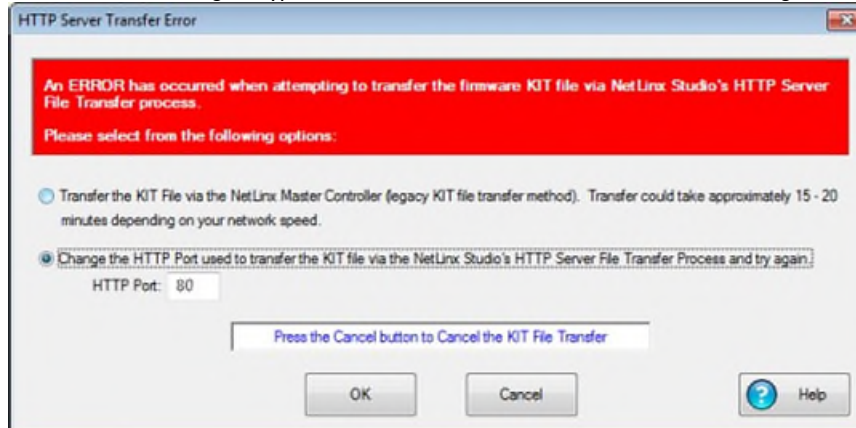

**FIG. 161** NetLinX Studio v3.4 or higher - HTTP Server Error dialog

In this case, there are two options for proceeding with the firmware transfer:

- Select **Transfer the KIT File via the NetLinx Controller Controller (legacy KIT file transfer method)...** to proceed using the standard (non-HTTP) method used for other NetLinx Devices (via the controller controller) when OK is clicked. Note that depending on network speed and the size of the \*.kit file, this method could take up to 20-30 minutes to complete. More specifically, timed tests indicate that it takes approximately 60 seconds per 9.5MB of a \*.kit file to transfer.

The following table indicates the approximate length of time to send a \*.kit file via the legacy file transfer method:

File Size	Time Required to Complete Transfer (legacy file transfer method)
0-150MB	10 - 15 minutes
150-200MB	15 - 20 minutes
200-250MB	20 - 25 minutes
250-300MB	25 - 30 minutes
300-350MB	30 - 35 minutes
>350MB	> 35 minutes

- By default, **Change the HTTP Port used to transfer the KIT file...** is selected. Use this option to change the HTTP port assignment, in cases where the IP port (default = 80) is in conflict or blocked on the PC. This option will restart the web server with a different HTTP port assignment and restart the file transfer when **OK** is clicked.
- Select the appropriate option and click **OK** to restart the file transfer.
- Click **Cancel** to cancel the current file transfer.

# Appendix B: Using NetLinx to Define a Data Source (Listview Buttons)

## Example Listview Workflow - NetLinx Data Source

The following section describes an example workflow for implementing a Listview button that uses NetLinx code as the data source. The use case for this example is that of a contact list for a SIP phone system. In this case, the user finds and presses a contact on the screen to initiate the call.

The workflow in this example describes each step required to implement a data source for a Listview button via NetLinx Code:

1. Creating a Listview button on a G5 panel page and set button properties
2. Creating a data source in NetLinx code
3. Configuring and populating the Listview
4. Configuring a response to a user selection

### I) Create the Listview Button and Set Button Properties

Create a Listview button in TPDesign5 and configure the display characteristics for the default and selected states.


Although not currently being rendered correctly in the screenshot below, this Listview has two lines of text and an image Varia on the left for each Listview entry.

1. In TPDesign5 (v1.0.2 or greater), use the Button Draw Tool to draw a new button.
2. In the General tab of the Properties window, select Listview as the Type (FIG. 162):



**FIG. 162** TPDesign5 - Listview button

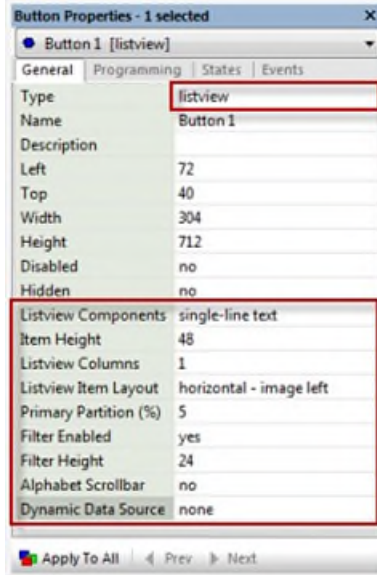


3. Use the TPD5 Properties window to set General, Programming, States and Events properties to configure the list items and the display characteristics for the Default and Selected states, as well as provide the Listview button with an Address code assignment. Note that Listview buttons use standard button properties, as well as several new properties that are specific to Listview buttons:
  - a. In the General tab, set properties to specify basic display characteristics for the selected Listview button (FIG. 163).




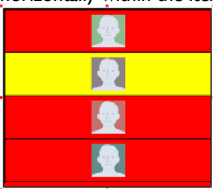
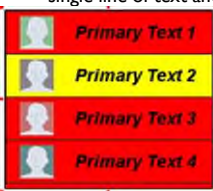
**FIG. 163** TPDesign5 - General Properties for Listview buttons

General button properties that are specific to Listview buttons include:

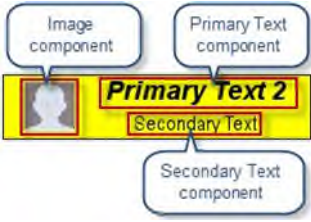**Listview Buttons - General Properties**

<p><b>List View Components</b></p>	<p>This property controls which components (<i>Primary Text, Secondary Text and Image</i>) will be displayed on the selected Listview button.</p> <p>With a Listview button selected in the Design View, click the browse (...) button on the Listview Components (General) property to open the <i>Edit Listview Components</i> dialog. Use this dialog to specify which components (Primary Text, Secondary Text and Image) will be displayed on the selected Listview button.</p>  <p>If only <b>Primary Text</b> is selected in the <i>Edit Listview Components</i> dialog (the default setting for new Listview buttons), each list item is represented with a single line of text using center-middle justification and the font face and size specified by the <i>Text Color, Font and Font Size (State)</i> properties (as well as <i>Text Effect</i> and <i>Text Effect Color</i> if desired).</p>  <ul style="list-style-type: none"> <li>The <i>List View Components (General)</i> Property will indicate <b>single-line text</b>.</li> </ul> <p>If <b>Primary Text</b> and <b>Secondary Text</b> are selected, each list item is represented with a two lines of text.</p>  <ul style="list-style-type: none"> <li>The two lines of text are stacked vertically, with each line centered horizontally.</li> <li>The font face and size are specified by the <i>Secondary Font</i> and <i>Secondary Font Size (State)</i> properties.</li> <li>The text is rendered within a two-pixel margin of the button boundary.</li> <li>Note that the <i>Secondary Text</i> option is only enabled if <i>Primary Text</i> is selected.</li> <li>Secondary Text uses the same <i>Text Color</i> settings as the Primary Text.</li> <li>The <i>List View Components (General)</i> Property will indicate <b>two-line text</b>.</li> </ul>
------------------------------------	---

## Listview Buttons - General Properties

<p><b>List View Components</b> (Cont.)</p>	<p>If <b>Primary Text</b>, <b>Secondary Text</b> and <b>Image</b> are selected, each list item is represented with two lines of text and an image on the left side.</p>  <ul style="list-style-type: none"> <li>The image is left-justified within a six-pixel margin of the top, bottom, and left item boundaries, and is scaled-to-fit within a square region.</li> <li>The two lines of text are stacked vertically and centered horizontally in the remaining item region. The top line (Primary Text) is rendered using the font face and size specified by the <i>Font</i> and <i>Font Size (State)</i> properties. The bottom line (Secondary Text) is rendered using the font face and size specified by the <i>Secondary Font</i> and <i>Secondary Font Size (State)</i> properties. The text is rendered within a two-pixel margin of the button boundary.</li> <li>The <i>List View Components (General)</i> Property will indicate <b>two-line text w/ Image</b>.</li> </ul> <p>If only <b>Image</b> is selected in the <i>Edit Listview Components</i> dialog, each list item is represented with a single image centered horizontally within the item region, within a six-pixel margin of the item region.</p>  <ul style="list-style-type: none"> <li>The <i>List View Components (General)</i> Property will indicate <b>image only</b>.</li> <li>If <b>Primary Text</b> and <b>Image</b> are selected in the <i>Edit Listview Components</i> dialog, each list item is represented with a single line of text and an image on the left side.</li> </ul>  <ul style="list-style-type: none"> <li>The image is left-justified within a six-pixel margin of the top, bottom, and left item boundaries, and is scaled-to-fit within a square region.</li> <li>The text is center-middle justified in the remaining portion of the item region within a two-pixel margin, using the font and font size specified by the <i>Font</i> and <i>Font Size (States)</i> properties.</li> <li>The <i>List View Components (General)</i> Property will indicate <b>single-line text w/ Image</b>.</li> </ul>
<p><b>Item Height</b></p>	<p>This property controls the height for the list view items (in pixels).</p>
<p><b>List View Columns</b></p>	<p>This property controls the number of columns to display. By default, this value is set to 1. This property provides the ability to present a "grid view" on the Listview button, if desired.</p>
<p><b>List View Item Layout</b></p>	<p>This property controls the layout of the components (<i>Primary Text</i>, <i>Secondary Text</i> and <i>Image</i>) specified to display on the list view items in the selected Listview button. Listview components are selected via the <i>List View Components (General)</i> property. Click in this field to select from a drop-down of layout options for list items (horizontal - image left, horizontal - image right and vertical - image top).</p>
<p><b>Primary Partition (%)</b></p>	<p>This property sets the position of the separation between the Image and the Primary/Secondary Text components.</p>
<p><b>Secondary Partition (%)</b></p>	<p>If the <i>List View Item Layout</i> property is set to is set to horizontal - image left (the default setting), the Secondary Partition (%) sets the position of the separation between the Primary Text and the Image as a percentage of cell height (allowed range = 5%-95%).</p> <ul style="list-style-type: none"> <li>If the <i>List View Item Layout</i> property is set to is set to horizontal - image right, the Secondary Partition (%) sets the position of the separation between the Primary Text and the Image as a percentage of cell height (allowed range = 5%-95%):</li> <li>If the <i>List View Item Layout</i> property is set to vertical- image top, the Secondary Partition represents the area used by the Image. In this case, Secondary Partition (%) sets the position of the separation between the Image and the Primary Text as a percentage of cell height (allowed range = 5%-95%).</li> </ul>

Listview Buttons - General Properties	
<b>Filter Enabled</b>	Use this property to enable/disable the filter (Search) feature on the selected Listview button. By default, this property is set to no (disabled). To enable this feature, select yes from the drop-down menu. If enabled, a search window will be rendered at the top of the Listview button, with a height specified by the Filter Height property. The remaining area of the Listview button will be available for the display of list items:
<b>Filter Height</b>	<ul style="list-style-type: none"> <li>Use this property to specify the height of the filter entry box for a Listview button (in pixels). Note that this property is available only if Filter Enabled is set to Yes. The minimum allowed value (and the default setting) is 24 pixels.</li> </ul>
<b>Alphabet Scrollbar</b>	This property enables/disables the alphabet scrollbar feature for Listview buttons.
<b>Dynamic Data Source</b>	This property specifies the data source (CSV or XML) to use as the source for content that will be displayed on the selected Listview button.

b. In the Programming tab, assign a unique Address Port and Address Code to the selected Listview button:

Listview Buttons - Programming Properties	
<b>Address Code</b>	<p>Select or enter the address code sent to the controller on the specified Address Port.</p> <p>The options available to the Address Code property depend on the Address Port selection:</p> <ul style="list-style-type: none"> <li>If I is selected as the Address Port, then the options for Address Code are None and Auto-Assign. Select None to leave the Address Code unspecified. Select Auto-Assign to automatically assign the next available Address Code to the selected TPD5 element.</li> <li>If 0-Setup Port is selected as the Address Port, then the options for Address Code are Advanced Codes or Basic Codes. By default, the Basic Address Codes are displayed: Click on Date Display to select from a list of date display formats. Click on Time Display to select from a list of time display formats. Click Advanced Codes to view the Advanced Channel Code options: Click on None to leave the Address Code unspecified. Click on Panel Setup to select Connection Status. This option will display the panel's current connection status on the selected element.</li> </ul>
<b>Address Port</b>	<p>Select or enter the port to which the selected element's Address Code will be associated. The options are "I" (the default setting) and "0-setup port":</p> <ul style="list-style-type: none"> <li>If I is selected as the Address Port, then the options for the Address Code property are None and Auto-Assign.</li> <li>If 0-Setup Port is selected as the Address Port, then the options for Address Code are Advanced Codes or Basic Codes. By default, the Basic Address Codes are displayed.</li> </ul>
<p>Note that Listview buttons do not use Channel Port and Channel Code assignments. The combination of Address Port and Address Code must be unique. See Address Codes (Basic and Advanced) in the TPD5 online help for details.</p>	

c. In the States tab, set (font) properties to specify font display characteristics for the Default and Selected states for the selected Listview button. States properties that are specific to Listview buttons include:

- Secondary Font
- Secondary Font Size

d. In the Events tab, set event properties for the selected Listview button. Listview button support three Events properties that are specific to Listview buttons. However, these Events support the same actions as existing events:

- Item Selected
- Scrollbar Begin
- Scrollbar End

**NOTE:** Refer to the TPDesign5 online help for descriptions of all button properties.

## 2) Create the Data Source

Follow the example NetLinX code (below) to create a data source in NetLinX and publish the data source to the NetLinX Controller's internal web server.

The "Data\_PublishFeed()" function (see *NetLinX.axi*) will return a URL for the published data.

### NetLinX Usage Example - ASCII

```
PROGRAM_NAME='Listview Example'
```

```

DEFINE_DEVICE
dvTP = 10001:1:0

DEFINE_CONSTANT
// Listview button address
INTEGER btnListview = 11

DEFINE_VARIABLE
CHAR publishedURL[DATA_MAX_VALUE_LENGTH] CHAR recordsetID[DATA_MAX_ID_LENGTH]

DEFINE_FUNCTION CreateDataFeed()
{
    STACK_VAR DATA_FEED datafeed
    STACK_VAR DATA_RECORD record

// -----
// CREATE A NEW DATA FEED
// ----- datafeed.name = 'phonest'
datafeed.description = 'Employees'
datafeed.source = 'netlinx Listview Example code' DATA_CREATE_FEED(datafeed)

// A recordset id is required for adding records to the feed recordsetID = 'phonest'

// -----
// DEFINE AND POPULATE THE DATA FIELDS
// This example will have 10 names in a phone list
// -----
// Records can have metadata fields and content fields. In this
// example we won't use any metadata
SET_LENGTH_ARRAY(record.metadata, 0)

// We will have 3 content fields per record: photo, name and phone number SET_LENGTH_ARRAY(record.content, 3)

// Initialize the field attributes that will be the same for every record
// the first field in a record will be the image
record.content[1].id = 'photo'; record.content[1].type =
DATA_TYPE_IMAGE; record.content[1].format = DATA_FORMAT_URL;

// The label can be something different from the id but in our case we'll
// keep them the same record.content[1].label = 'photo';

// The second field in a record will be the name record.content[2].id =
'name'; record.content[2].type = DATA_TYPE_STRING;
record.content[2].format = "; record.content[2].label = 'name';

// The third field will be the phone number record.content[3].id = 'number';
record.content[3].type = DATA_TYPE_STRING; record.content[3].format =
DATA_FORMAT_PHONE; record.content[3].label = 'number';

// The next step is to put in the actual values for the 3 fields
// Do this for the first record
record.content[1].value = 'http://192.168.222.333/ftp/listview/hunter.jpg' record.content[2].value = 'Hunter
Pence' record.content[3].value = '888-555-1111'

// Add the record to the feed
DATA_ADD_RECORD(datafeed.name, recordsetID, record)
// The same record can be reused for the rest of the list // Just change the relevant values and add
the record to the feed record.content[1].value = 'http://192.168.222.333/ftp/listview/pablo.jpg'
record.content[2].value = 'Pablo Sandoval' record.content[3].value = '888-555-2222'
DATA_ADD_RECORD(datafeed.name, recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/buster.jpg' record.content[2].value =
'Buster Posey' record.content[3].value = '888-555-3333' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/angel.jpg' record.content[2].value =
'Angel Pagan' record.content[3].value = '888-555-4444' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

```

```

record.content[1].value = 'http://192.168.222.333/ftp/listview/jeremy.jpg' record.content[2].value =
'Jeremy Affeldt' record.content[3].value = '888-555-5555' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/madison.jpg' record.content[2].value =
'Madison Bumgarner' record.content[3].value = '888-555-6666' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/timh.jpg' record.content[2].value =
'Tim Hudson' record.content[3].value = '4888-555-7777' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/timl.jpg' record.content[2].value =
'Tim Lincecum' record.content[3].value = '888-555-8888' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/javier.jpg' record.content[2].value =
'Javier Lopez' record.content[3].value = '888-555-9999' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/jake.jpg' record.content[2].value =
'Jake Peavy' record.content[3].value = '888-555-1010' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/sergio.jpg' record.content[2].value =
'Sergio Romo' record.content[3].value = '888-555-1020' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/ryan.jpg' record.content[2].value =
'Ryan Vogelsong' record.content[3].value = '888-555-1030' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/brandon.jpg' record.content[2].value =
'Brandon Belt' record.content[3].value = '888-555-1040' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/andrew.jpg' record.content[2].value =
'Andrew Susac' record.content[3].value = '888-555-1050' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/gregor.jpg' record.content[2].value =
'Gregor Blanco' record.content[3].value = '888-555-1060' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)

record.content[1].value = 'http://192.168.222.333/ftp/listview/michael.jpg' record.content[2].value =
'Michael Morse' record.content[3].value = '888-555-1070' DATA_ADD_RECORD(datafeed.name,
recordsetID, record)
// The final step is to publish the feed
publishedURL = DATA_PUBLISH_FEED(datafeed.name)
}

DEFINE_START
    CreateDataFeed()

DEFINE_EVENT
DATA_EVENT[dvTP
]{
    ONLINE:
    {
        // Set the URL for the data source for the listviewer in the panel
        SEND_COMMAND dvTP,"^LVD-',ITOA(btnListview),',',publishedURL"
        // Map the fields in the listviewer to the columns
        SEND_COMMAND dvTP,"^LVM-',ITOA(btnListview),',i1=${photo}|t1=${name}|t2=${number}"
        // Sort by name
        SEND_COMMAND dvTP,"^LVS-',ITOA(btnListview),',${name};a"
        // Command the listview to load the data from the controller
        SEND_COMMAND dvTP,"^LVR-',ITOA(btnListview)"
    }
}
}

```

```

// The custom event that is raised whenever a listview item is selected on the panel CUSTOM_
EVENT[dvTP,btnListview,LISTVIEW_ON_ROW_SELECT_EVENT] {

    SLONG payloadId
    SLONG payloadType
    CHAR fields[2][16]
    CHAR name[DATA_MAX_VALUE_LENGTH] CHAR number[DATA_MAX_VALUE_LENGTH]
    DATA_RECORD record
    // Get the data access ID from the custom event    payloadId = custom.value1
    // Get the data type from the custom event    payloadType =
    custom.value2

    if (payloadId > 0 && payloadType == DATA_STRUCTURE_DATARECORD)
    {
        // Specify which fields we want to retrieve from the payload    fields[1] = 'name'
        fields[2] = 'number'
        // Populate a record with the requested fields from the event    if
        (DATA_GET_EVENT_RECORD(dvTP, payloadId, fields, record) > 0)
        {

            // All is well so far so retrieve the values that we are
            // interested in from the selection that the user made on // the panel.
            name = record.content[1].value            number =
            record.content[2].value

            // Put the name and number that was selected on a popup and
            // show the popup
            SEND_COMMAND dvTP,"^TXT-50,0,'name"
            SEND_COMMAND dvTP,"^TXT-51,0,'number"
            SEND_COMMAND dvTP,"^PPN-Calling"

        }
    }
}

(*****
*)            THE ACTUAL PROGRAM GOES BELOW            *)
(*****

DEFINE_PROGRAM
(*****
*)            END OF PROGRAM            *)
(*)            DO NOT PUT ANY CODE BELOW THIS COMMENT            *)
(*****

```

### 3) Configure the Response to a User Selection

Follow the CUSTOM\_EVENT example at the end of the *NetLinx Usage Example - ASCII* (above) to retrieve the phone number that was selected by the user.

# Appendix C: Text Formatting

## Text Formatting Codes for Bargraphs

Text formatting codes for bargraphs provide a mechanism to allow a portion of a bargraphs text to be dynamically provided information about the current status of the level (multistate and traditional). These codes are entered into the text field along with any other text.

The following is a code list used for bargraphs:

Bargraph Text Code Inputs		
Code	Bargraph	Multi-State Bargraph
\$P	Display the current percentage of the bargraph (derived from the Adjusted Level Value as it falls between the Range Values)	Display the current percentage of the bargraph (derived from the Adjusted Level Value as it falls between the Range Values)
\$V	Raw Level Value	Raw Level Value
\$L	Range Low Value	Range Low Value
\$H	Range High Value	Range High Value
\$S	N/A	Current State
\$A	Adjusted Level Value (Range Low Value subtracted from the Raw Level Value)	Adjusted Level Value (Range Low Value subtracted from the Raw Level Value)
\$R	Low Range subtracted from the High Range	Low Range subtracted from the High Range
\$\$	Dollar sign	Dollar sign

By changing the text on a button (via a VT command), you can modify the codes on a button. When one of the Text Formatting Codes is encountered by the firmware, it is replaced with the correct value. These values are derived from the following operations:

Formatting Code Operations	
Code	Operation
\$P	$(\text{Current Value} - \text{Range Low Value} / \text{Range High Value} - \text{Range Low Value}) \times 100$
\$V	Current Level Value
\$L	Range Low Value
\$H	Range High Value
\$S	Current State (if regular bargraph then resolves to nothing)
\$A	Current Value - Range Low Value
\$R	Range High Value - Range Low Value
\$\$	Dollar sign

Given a current raw level value of 532, a range low value of 500, and a high range value of 600, the following text formatting codes would yield the following strings as shown in the table below:

Example	
Format	Display
\$P%	32%
\$A out of \$R	32 out of 100
\$A of 0 - \$R	32 of 0 - 100
\$V of \$L - \$H	532 of 500 - 600

## Text Area Input Masking

Text Area Input Masking may be used to limit the allowed/correct characters that are entered into a text area. For example, in working with a zip code, a user could limit the entry to a max length of only 5 characters; with input masking, this limit could be changed to 5 mandatory

numerical digits and 4 optional numerical digits. A possible use for this feature is to enter information into form fields. The purpose of this feature is to:

- Force the use of correct type of characters (i.e. numbers vs. characters)
- Limit the number of characters in a text area
- Suggest proper format with fixed characters
- Right to Left
- Required or Optional
- Change/Force a Case
- Create multiple logical fields
- Specify range of characters/number for each field With this feature, it is not necessary to:
- Limit the user to a choice of selections
- Handle complex input tasks such as names, days of the week, or month by name
- Perform complex validation such as Subnet Mask validation

## Input mask character types

These character types define what information is allowed to be entered in any specific instance. The following table lists what characters in an input mask will define what characters are allowed in any given position.

Character Types	
Character	Masking Rule
0	Digit (0 to 9, entry required, plus [+] and minus [-] signs not allowed)
9	Digit or space (entry not required, plus and minus signs not allowed)
#	Digit or space (entry not required; plus and minus signs allowed)
L	Letter (A to Z, entry required)
?	Letter (A to Z, entry optional)
A	Letter or digit (entry required)
a	Letter or digit (entry optional)
&	Any character or a space (entry required)
C	Any character or a space (entry optional)

**NOTE:** The number of the above characters used determines the length of the input masking box. Example: 0000 requires an entry, requires digits to be used, and allows only 4 characters to be entered/used.

Refer to the following SEND\_COMMANDs for more detailed information:

- ^BIM- Sets the input mask for the specified addresses.
- ^BMF subcommand %MK - sets the input mask of a text area.

## Input Mask Ranges

These ranges allow a user to specify the minimum and maximum numeric value for a field. Only one range is allowed per field. Using a range implies a numeric entry ONLY.

Input Mask Ranges	
Character	Meaning
[	Start range
]	End range
	Range Separator

An example from the above table:

**[0|255]** This allows a user to enter a value from 0 to 255.

## Input Mask Operations

Input Mask Operators change the behavior of the field in the following way:

Input Mask Operators	
Character	Meaning
<	Forces all characters to be converted to lowercase
>	Forces all characters to be converted to uppercase

## Input Mask Literals

To define a literal character, enter any character, other than those shown in the above table (*including spaces, and symbols*). A back-slash (\) causes the character that follows it to be displayed as the literal character. For example, \A is displayed just as the letter A. To define one of the following characters as a literal character, precede that character with a back-slash. Text entry operation using Input Masks.

A keyboard entry using normal text entry is straightforward. However, once an input mask is applied, the behavior of the keyboard needs to change to accommodate the input mask's requirement. When working with masks, any literal characters in the mask will be "skipped" by any cursor movement, including cursor, backspace, and delete keys.

When operating with a mask, the mask should be displayed with placeholders. The "-" character should display where you should enter a character. The arrow keys will move between the "-" characters and allow you to replace them. The text entry code operates as if it is in the overwrite mode. If the cursor is positioned on a character already entered and you type in a new (and valid) character, the new character replaces the old character. There is no shifting of characters.

When working with ranges specified by the [] mask, the keyboard allows you to enter a number between the values listed in the ranges. If a user enters a value that is larger than the maximum, the maximum number of right-most characters is used to create a new, acceptable value.

- **Example 1:** If you type "125" into a field accepting 0-100, then the values displayed will be "1", "12", "25".
- **Example 2:** If the max for the field was 20, then the values displayed will be "1", "12", "5".

When data overflows from a numerical field, the overflow value is added to the previous field on the chain if the overflow character was specified. In the above example, if the overflow flag was set, the first example will place the "1" into the previous logical field and the second example will place "12" in the previous logical field. If the overflow field already contains a value, the new value will be inserted to the right of the current characters and the overflow field will be evaluated. Overflow continues to work until a field with no overflow value is set or no more fields remain (i.e. reached first field).

If a character is typed and that character appears in the Next Field list, the keyboard should move the focus to the next field. For example, when entering time, a ":" is used as a next field character. If you enter "1:2", the 1 is entered in the current field (hours) and then the focus is moved to the next field and 2 is entered in that field.

When entering time in a 12-hour format, entry of AM and PM is required. Instead of adding AM/PM to the input mask specification, the AM/PM should be handled within the NetLinx code. This allows a programmer to show/hide and provide discrete feedback for AM and PM.

## Input Mask Output Examples

The following are some common input masking examples

Output Examples		
Common Name	Input Mask	Input
IP Address Quad	[0 255]{.}	Any value from 0 to 255
Hour	[1 12]{:}	Any value from 1 to 12
Minute/Second	[0 59]{:}	Any value from 0 to 59
Frames	[0 29]{:}	Any value from 0 to 29
Phone Numbers	(999) 000-0000	(555) 555-5555
Zip Code	00000-9999	75082-4567

## URL Resources

A URL can be broken into several parts. For example, with the URL <http://www.amx.com/company-info-home.asp>, this URL indicates that the protocol in use is **http** (HyperText Transport Protocol) and that the information resides on a host machine named **www.amx.com**. The image on that host machine is given an assignment (by the program) name of **company-info-home.asp** (*Active Server Page*).

The exact meaning of this name on the host machine is both protocol dependent and host dependent. The information normally resides in a file, but it could be generated dynamically. This component of the URL is called the file component, even though the information is not necessarily in a file.

A URL can optionally specify a port, which is the port number to which the TCP/IP connection is made on the remote host machine. If the port is not specified, the default port for the protocol is used instead. For example, the default port for http is 80. An alternative port could be specified as: `http://www.amx.com:8080/company-info-home.asp`. **NOTE:** Any legal HTTP syntax can be used.

## Special Escape Sequences

The system has only a limited knowledge of URL formats, as it transparently passes the URL information onto the server for translation. A user can then pass any parameters to the server side programs such as CGI scripts or active server pages. However; the system will parse the URL looking for special escape codes. When it finds an escape code, it replaces that code with a particular piece of panel, button, or state information.

For example, "`http://www.amx.com/img.asp?device=$DV`" would become `http://www.amx.com/img.asp?device=10001`. Other used escape sequences include:

Escape Sequences	
Sequence	Panel Information
\$DV	Device Number
\$SY	System Number
\$IP	IP Address
\$HN	Host Name
\$MC	Mac Address
\$PX	X Resolution of current panel mode/file
\$PY	Y Resolution of current panel mode/file
\$BX	X Resolution of current button
\$BY	Y Resolution of current button
\$BN	Name of button
\$ST	Current state
\$AC	Address Code
\$AP	Address Port
\$CC	Channel Code
\$CP	Channel Port
\$LC	Level Code
\$LP	Level Port

# Appendix D: Bargraph Functions

## Overview

For drag operations on Bargraph and Multi-State Bargraph buttons, each movement increments based on the drag increment field. For centering, the bargraph/multistate bargraph will return to the middle - either the 50% mark for bargraphs, or the median state number, once the touch point is released.

## Setup Codes

Bargraph Functions - Setup Codes		
Code	Code	Description
Channel	2	Panel Setup: Brightness Up
Channel	3	Panel Setup: Brightness Down
Channel	6	Panel Setup: Controller Volume Up
Channel	7	Panel Setup: Controller Volume Down
Channel	8	Panel Setup: Controller Volume Mute
Channel	158	Panel Setup: Mic Volume Mute
Channel	171	Panel Setup: Call Volume Up
Channel	172	Panel Setup: Call Volume Down
Channel	1403	Panel Setup: Notification Alarm Volume Mute
Channel	1404	Panel Setup: Notification Volume Up
Channel	1405	Panel Setup: Notification Volume Down
Channel	1407	Panel Setup: Alarm Volume Up
Channel	1408	Panel Setup: Alarm Volume Down
Address	33	Panel Setup: Brightness
Address	35	Panel Setup: Controller Volume
Address	144	Time Display: AM PM
Address	46	Panel Setup: Call Volume
Address	450	Panel Setup: Notification Volume
Address	451	Panel Setup: Alarm Volume
Level	1	Panel Setup: Brightness
Level	3	Panel Setup: Controller Volume
Level	9	Panel Setup: Call Volume
Level	450	Panel Setup: Notification Volume
Level	451	Panel Setup: Alarm Volume

# Appendix E: Video Streaming

## Optimizing Motion JPEG Video Presentation and Speed

In some cases, multiple Motion JPEG streams may slow presentation of individual screen popups, or prevent all of the streams from showing at the same time. This may happen even though the Panel Preview in TPDesign 5 may show no issues. To minimize this and assure a smooth and non-sluggish stream, try these options:

- Limit the number of simultaneous Motion JPEG streams to eight or fewer streams at a time.
- Remove any unnecessary buttons associated with the Motion JPEG streams.
- Make sure that the Refresh rate on a Motion JPEG is set to 0.
- Make sure to hide the preview popup before displaying the full image.
- If possible, uncheck the “Scale to Fit” option, as scaling is very resource-intensive.
- Dial down the frame rate of the server. The frame rate of a Motion JPEG is determined by the server.
- When you go from a page with multiple previews to a page with a single full screen video, it is best to do a page flip rather than popup attach, or hide the preview windows first. Otherwise, the preview windows will continue to decode (taxing the system), even though they may be completely or partially obstructed by the popup.
- Verify that the full-screen image is set for acceleration by checking the “Dynamo” box in Resource Manager.”

Motion JPEG Support for VARIA Panels	
Baseline mode:	ISO 10918-1
Encoding:	ISO-10918-5 (JFIF)
Maximum Resolution:	720p
Recommended resolution:	720x480-NTSC or 720x576-PAL (or less). If the video is defined in the Resource Manager as opposed to video fill, consideration must be made for the video being decoded by the panel, which cannot decode 720p.
Maximum Frame Rate:	Up to 30fps
Latency:	From 1-3 seconds, depending on multiple factors including button size, resolution and network performance.

## Streaming a Video File Saved on the Panel via Custom URL Scheme

To use a custom URL scheme and File Transfer (in NetLinx Studio) to play a video stored in the G5 touch panel’s internal storage:

1. In NetLinx Studio 4, select **Tools -> File Transfer** to open the *File Transfer* dialog - *Send* tab (FIG. 164):


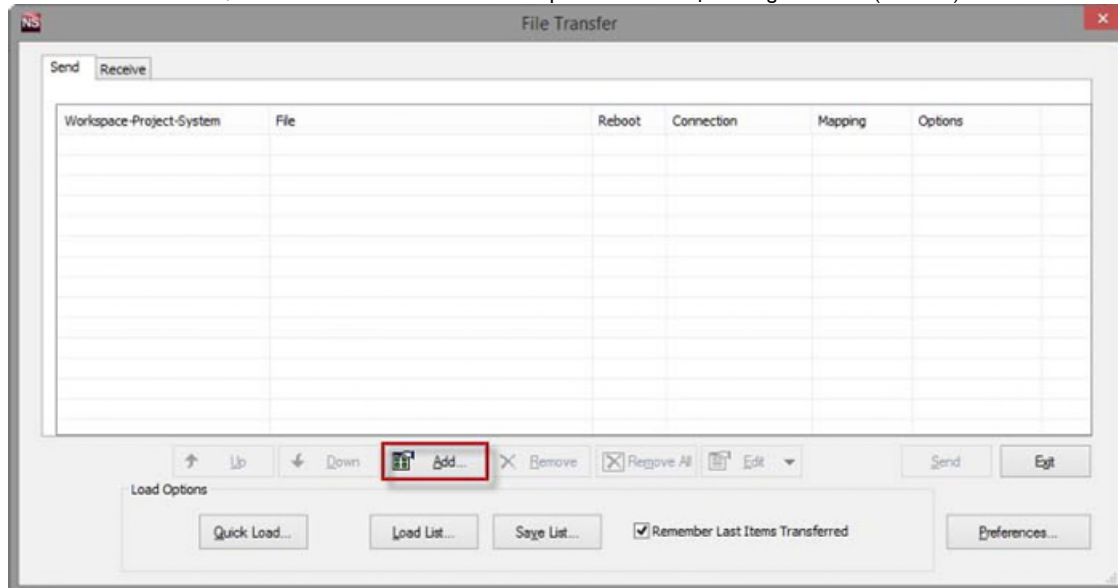



Fig. 164 NetLinx Studio 4 - File Transfer dialog

- Click **Add** to open the *Select Files for File Transfer* dialog, open the *Individual Files* tab and select **Send Non-System File** (FIG. 165):

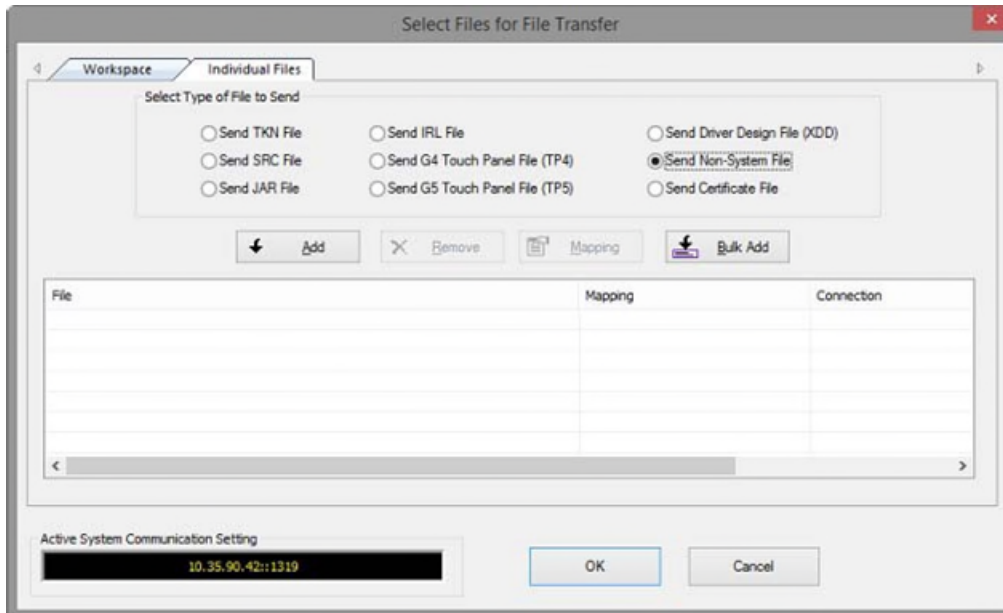


**Fig. 165** NetLinX Studio 4 - Select Files for File Transfer dialog (Individual Files tab)

- Click **Add** to select the video file you want to use: Select the video file in the *Open* dialog and click **OK** to invoke the *Enter Device Mapping Information* dialog (FIG. 166):

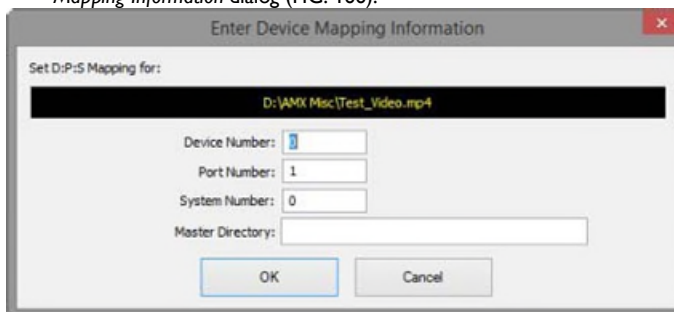


**Fig. 166** NetLinX Studio 4 - Enter Device Mapping Information dialog

- Enter device mapping information (D:P:S) for the target G5 panel. Leave the *Controller Directory* field blank.
- Click **OK** to save changes and close the *Enter Device Mapping Information* dialog.
- Click **OK** to close the *Select File For File Transfer* dialog.
- Click **Send** in the *File Transfer* dialog to transfer the file (this may take time for large video files).
- In *TPDesign5*, select the page/button state you want to play the video file.
- In the desired state tab, set the *Video Fill* property to **streaming video** (FIG. 167). Note that this selection enables the *Streaming Source* property.



**Fig. 167** TPDesign5 - Video Fill (State) property

- For the *Streaming Source* property, enter the filename of the video file with **amxdir:///** as the prefix. For example, if the video filename is "test-video.mp4" then enter the *Streaming Source* as "amxdir:///test-video.mp4" (FIG. 168):



**Fig. 168** TPDesign5 - Streaming Source (State) property

**NOTE:** There are three slashes after *amxdir*, not two as in a standard URL. If there aren't three slashes the video file won't be found.

- Load the TP5 file on the panel and the desired state should continually play the video.  
If you desire to change the video using the ^SDM command to another that you have transferred, use the same URL scheme as the prefix (**amxdir:///**).

Any file that is transferred to the `amxdir:///` directory is not cleared by a panel file transfer or "Remove User Pages". The only way to transfer is to do a Factory Data Reset, or to upload an empty file with the same filename.

To get around this, you can specify a file to be `amxdir:///AMXPanel/images/filename` instead.

To do this using NetLinx Studio File Transfer, set the "Controller Directory" to `\\AMXPanel\images\` in the device mapping. This will put the file in the panel file images directory. A TP5 file transfer will not remove the file, but a "Remove User Pages" will. The Streaming Source value in the TP5 file would have to correspond to the same path.

**NOTE:** See details on the `^SDM Button State Streaming Digital Media` command.

## Transcoding Guidelines

For certain H.264 video and audio streaming, you may observe a drift between audio and video the longer the content is streamed. This drift can be more pronounced when streaming from a non- MXA-MPL source such as a Vision 2 steaming server. If the panel detects excessive drift, it will attempt to restart the stream decode. During the restart, the audio will be temporarily interrupted and the video will be frozen on the last frame until the restart is complete (typically a couple of seconds). To reduce the drift issue for Vision 2 H264 steaming, video transcoding tools (such as HandBrake or FFMPEG) are available to convert H.264 video into lower bitrates, reduced resolution and/or lower H.264 profiles. For example you can try the H.264, 2mbps bit rate, 480p resolution, Baseline profile. If this does not work, try transcoding the stream into MPEG2 video, which is less susceptible to A/V drift.

**NOTE:** *Third-party encoders and digital television devices have not been tested with VARIA touch panels, and are not supported by AMX.*

The table below lists the typical synchronization and latency times for each supported video and audio stream:

Video Performance					
Device	Typical A/V Sync (offset/hr)	Typical A/V Sync Restart Rate	Expected Latency Typical	Expected Latency - Max	Notes:
<b>3rd Party Solutions</b>					
H.264	N/A	N/A	N/A	N/A	Third-party encoders and digital television devices have not been tested with Varia touch panels, and are not supported by AMX. Network congestion can cause video glitches. We recommend the panel be installed behind a smart Ethernet switch to filter unintended multicast packets reaching the panel and consuming panel resources. We recommend maintaining aspect ratio of source and following usage guidelines regarding window/button placement.
MPEG2	N/A	N/A	N/A	N/A	Third-party encoders and digital television devices have not been tested with Varia touch panels, and are not supported by AMX. Network congestion can cause video glitches. We recommend the panel be installed behind a smart Ethernet switch to filter unintended multicast packets reaching the panel and consuming panel resources. We recommend maintaining aspect ratio of source and following usage guidelines regarding window/button placement.

# Appendix F: Modern Authentication

Steps that are required to configure Modern Authentication (OAuth 2) support for **AMX Book** using Microsoft Graph API.

## Pre-requisites:

- An Azure account with an active subscription.
- An Azure AD tenant.
- Please note that some of the screenshots are extracted from the RMS manual and as such naming of the app registrations may reflect RMS and not AMX Book. The process and result are the same regardless.

## I. Self-signed Certificate creation

In order to use certificate as credential for the Application, you need to generate a certificate and upload it to Azure AD.

1. Open **Windows PowerShell**
2. Execute the below given command to create a Self-signed Certificate:

```
New-SelfSignedCertificate -CertStoreLocation "Cert:\LocalMachine\My" -Subject "CN=<ApplicationName>"
```

**NOTE:** Replace the *ApplicationName* with the name of your application that you create on Azure AD.

## II. Export Certificate

Export the Self-signed certificate to use with the application with **Certificate Manager** as explained below:

1. Execute **mmc** command in the **Command Prompt / Windows PowerShell**.
2. Open **File > Add/Remove Snap-In**.
3. Add the **Certificates** snap-in from the **Available snap-ins** pane to the **Selected snap-ins** pane.
4. Select the **Computer Account** radio button in the **Certificates snap-in** dialog box and click **Next**
5. Select the **Local Computer** radio button in the **Select Computer** dialog box and then click **Finish**
6. Click **OK**
7. Select **Console Root > Certificates (Local Computer) > Personal > Certificates** from the tree view on the left pane.
8. You will see the newly generated application certificate

### a. **Export Certificate - Without Private Key (.CER)**

We need to export the certificate without Private key and Base-64 Encoded X.509 .CER format to upload in Azure AD.

1. Select the application certificate and right click
2. Select **All tasks > Export** option
3. **Certificate Export Wizard** opens.
4. Click **Next** button
5. Select the **No, do not export the private key** radio button and click **Next**
6. Select the **Base-64 encoded X.509 (.CER)** radio button and click **Next**
7. Click **Browse** button and select a folder to place the exported file
8. Key in the **File name** and click **Save** button
9. Click **Next** button
10. You will see **You have successfully completed the Certificate Export Wizard**
11. Click **Finish** button
12. Click **OK** button

### b. **Export Certificate - With Private Key (.PFX)**

We need to export the certificate with Private key and PKCS #12 (.PFX) format to be loaded in RMS EWS Scheduler Interface application.


1. Select the application certificate and right click
2. Select **All tasks > Export** option
3. **Certificate Export Wizard** opens.
4. Click **Next** button
5. Select the **Yes, export the private key** radio button and click **Next**
6. Select the **Personal Information Exchange – PKCS #12 (.PFX)** radio button and click **Next**
7. For **Security**, select the **Password** checkbox
8. Key-in the password and repeat the same in **Confirm password**
9. Accept the default option in **Encryption** dropdown and click **Next** button
10. Click **Browse** button and select a folder to place the exported file
11. Key in the **File name** and click **Save** button
12. Click **Next** button
13. You will see **You have successfully completed the Certificate Export Wizard**
14. Click **Finish** button
15. Click **OK** button




## IV. Create your App registration in Azure Active Directory

Access the Azure Portal (<https://portal.azure.com>) and sign-in with the user ID that has the **Global Administrator** rights

From the Portal Menu, select the **Azure Active Directory** option

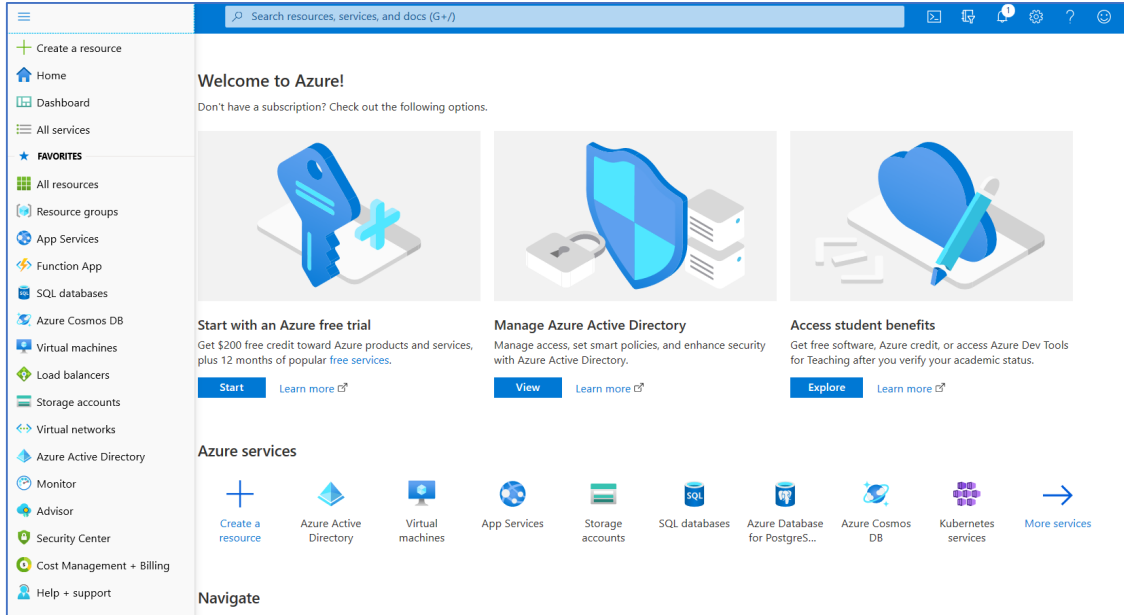

In the left navigation menu, select **App registrations** from **Manage** section of **Active Directory Menu Blade**

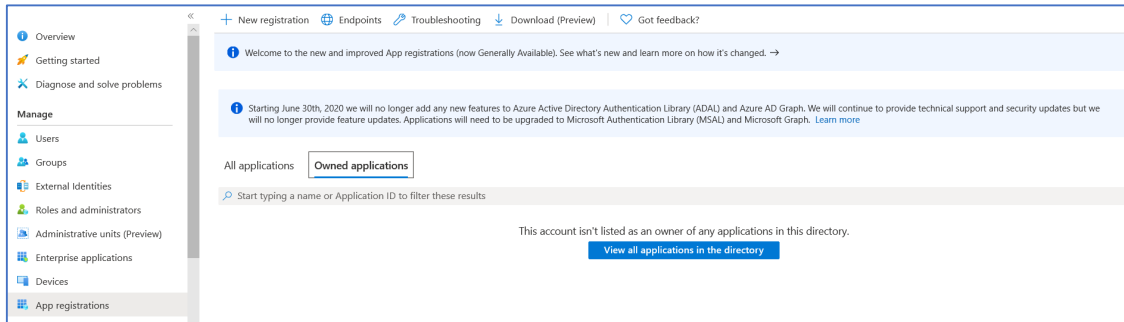

Click on the **New registration** option from the top right section.

In the 'Register an application' page:

- a. Fill in **Name** for the application.
- b. Select the **Supported account types** as "Accounts in this organization directory only"
- c. Set the **Redirect URI (optional)** as "Web" and URI as <http://localhost>

## Register an application

**\* Name**

The user-facing display name for this application (this can be changed later).

 ✓

### Supported account types

Who can use this application or access this API?

Accounts in this organizational directory only (hpro only - Single tenant)

Accounts in any organizational directory (Any Azure AD directory - Multitenant)

Accounts in any organizational directory (Any Azure AD directory - Multitenant) and personal Microsoft accounts (e.g. Skype, Xbox)

[Help me choose...](#)

### Redirect URI (optional)

We'll return the authentication response to this URI after successfully authenticating the user. Providing this now is optional and it can be changed later, but a value is required for most authentication scenarios.

Web ▼  ✓

By proceeding, you agree to the [Microsoft Platform Policies](#) ↗

**Register**

Click **Register** button.

## Overview page opens for the newly created application

The screenshot shows the Azure AD application overview page for 'RmsSchGrpCBA'. The left navigation pane includes sections for Overview, Quickstart, Integration assistant (preview), Manage (Branding, Authentication, Certificates & secrets, Token configuration, API permissions, Expose an API, Owners, Roles and administrators (Preview), Manifest), Call APIs, and Documentation. The main content area displays application details: Display name (RmsSchGrpCBA), Application (client) ID (16), Directory (tenant) ID, Object ID (fa1de2a3-acd6-4d37-87e7-021e8181d0c0), Supported account types (My organization only), Redirect URIs (1 web, 0 spa, 0 public client), Application ID URI (Add an Application ID URI), and Managed application in (RmsSchGrpCBA). A notification banner states: 'Starting June 30th, 2020 we will no longer add any new features to Azure Active Directory Authentication Library (ADAL) and Azure AD Graph. We will continue to provide technical support and security updates but we will no longer provide feature updates. Applications will need to be upgraded to Microsoft Authentication Library (MSAL) and Microsoft Graph. Learn more'. Below the notification are sections for 'Call APIs' and 'Documentation'.

Make note of the **Tenant ID**, **Client ID** values. We will be using them while configuring the **AMX Book Calendar for Modern Authentication**

## V.Add Graph API permissions to the app

In the left navigation menu, select **API Permissions** from **Manage** section of **Application Menu Blade**


**API Permissions** page opens

The screenshot shows the Azure AD API permissions page for 'RmsSchGrpCBA'. The left navigation pane is the same as in the previous screenshot, with 'API permissions' selected. The main content area shows 'Configured permissions' with a description: 'Applications are authorized to call APIs when they are granted permissions by users/admins as part of the consent process. The list of configured permissions should include all the permissions the application needs. Learn more about permissions and consent'. There is an '+ Add a permission' button. Below is a table of configured permissions:


API / Permissions name	Type	Description	Admin consent req...	Status
Microsoft Graph (1)				
User.Read	Delegated	Sign in and read user profile	-	...

Click on the **Add a permission** option from the **Configured permissions** section.

## Request API permissions page opens

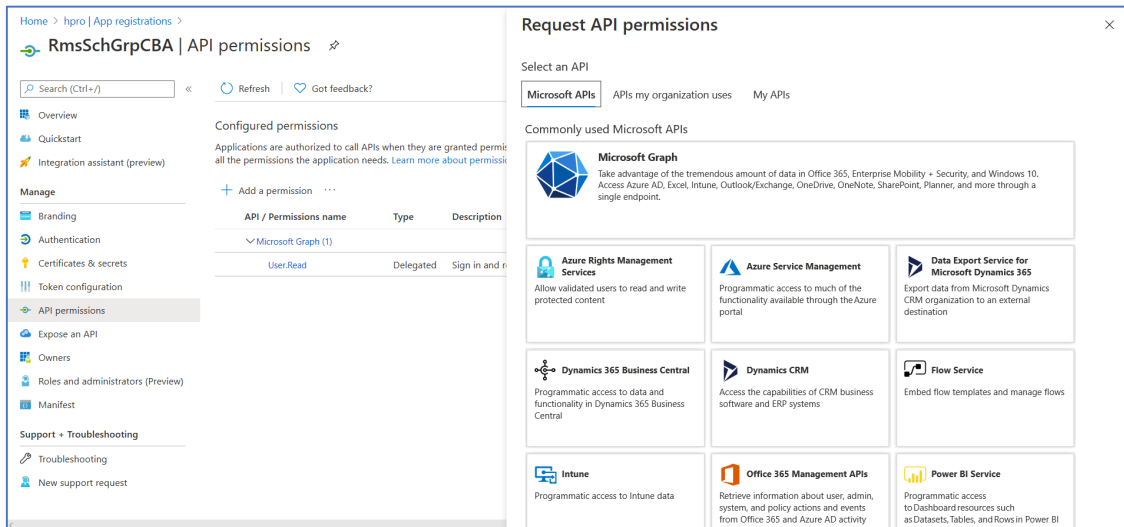


## Click on **Microsoft Graph** option from the **Commonly used Microsoft APIs** section

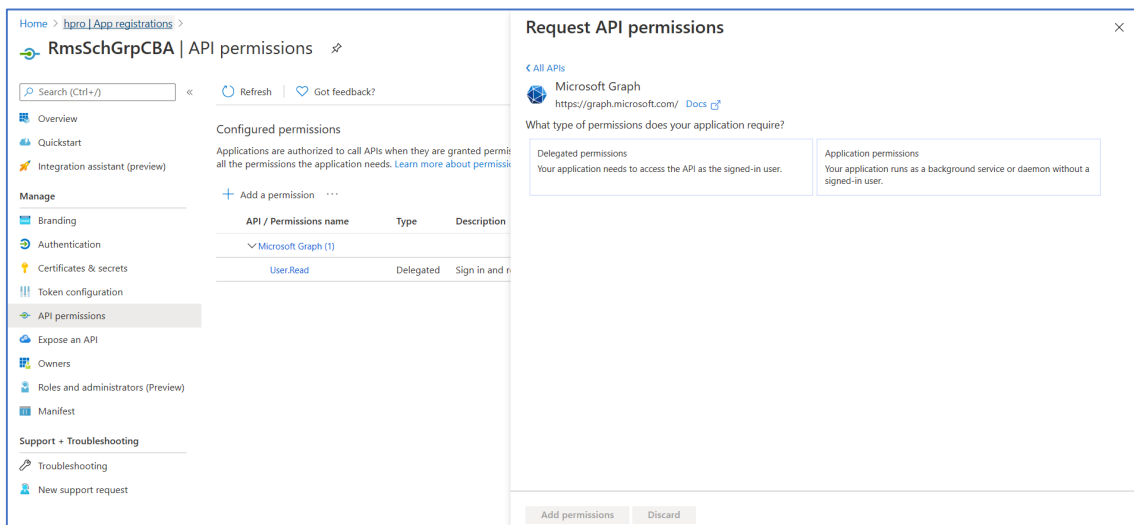


## Select the **Application Permissions** option for 'What type of permissions does your application require?'

Select the following Permissions:  
**Calendars > Calendars.ReadWrite**  
**Mail > Mail.ReadWrite**  
**Place > Place.Read.All**

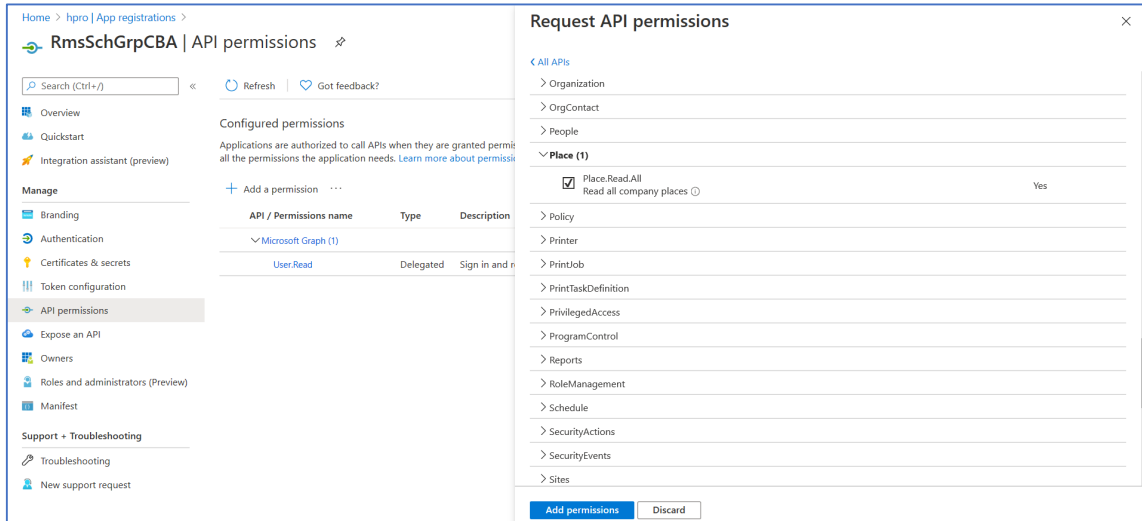


Click **Add Permissions** button

The newly added permissions are saved and listed in **Configured permissions**

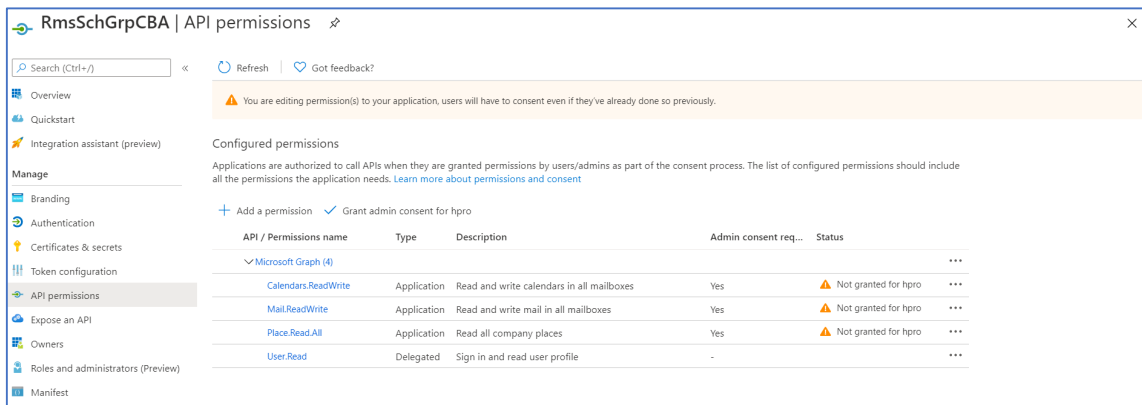


Now, Grant admin consent for the requested permissions by clicking **Grant admin consent for <domain name>** button

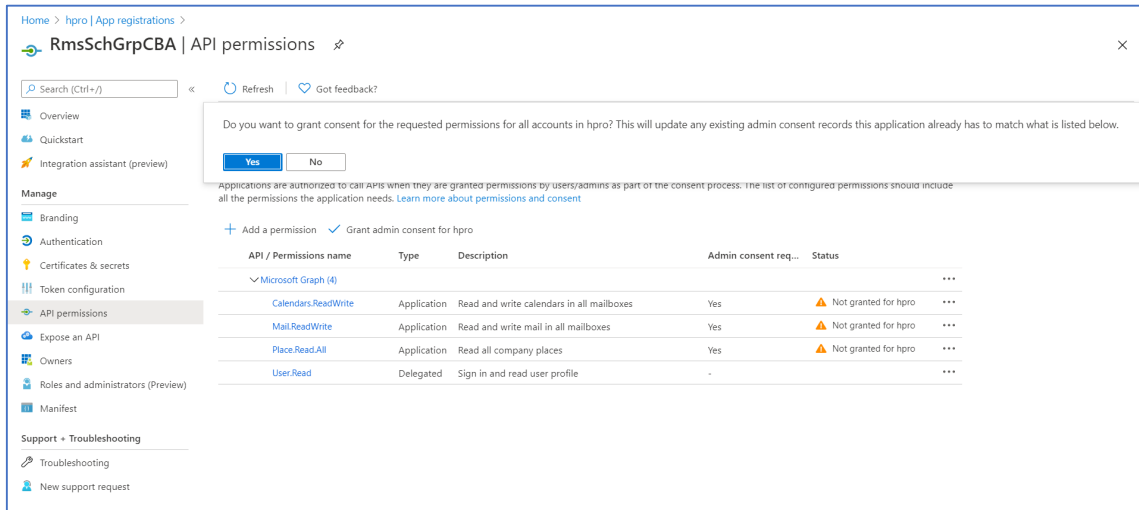

Click **Yes** button for the confirmation message

Notice that the **Admin consent** granted for the requested permissions

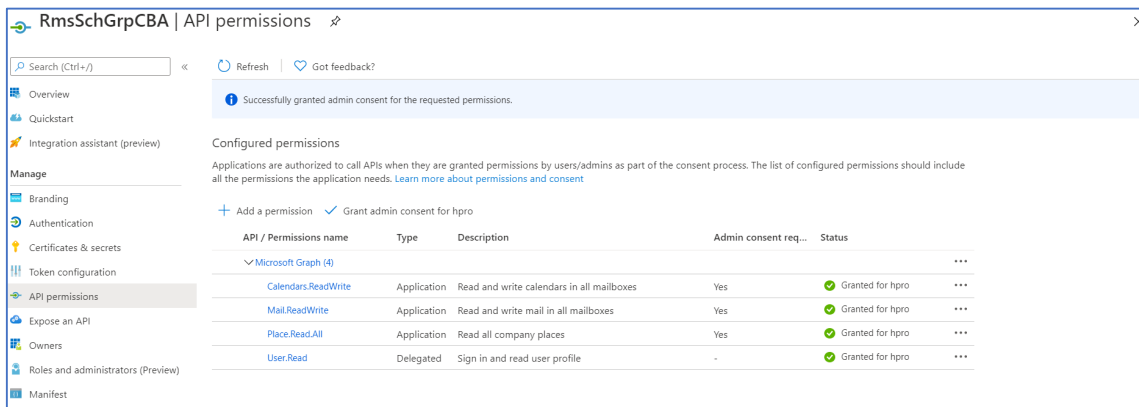

## VI. Application Credentials

Credentials enable applications to identify themselves to the authentication service when receiving tokens.

You can use either **Client Secret** or **Certificate** to achieve this, but not both. Section [VII](#) and [VIII](#) describes both methods. **Make sure to use any one.**

## VII. Adding Credentials to the Application (Client Secret)

### **Important NOTE:**

**Skip this step and go to [Adding Credentials to the Application \(Client Certificate\)](#) section below to use Certificate based authentication**

**For a higher level of assurance, recommended to use a certificate (instead of a client secret) as a credential.**

Make sure to create a new application by following the steps defined in [Create your app registration in Azure Active Directory](#)

In the left navigation menu, select **Certificates & Secrets** from **Manage** section of **Application Menu Blade**

**Certificates & Secrets** page opens

The screenshot shows the Azure Active Directory interface for the application 'RmsSchGrpSK'. The left navigation pane is expanded to 'Certificates & secrets'. The main content area is divided into two sections: 'Certificates' and 'Client secrets'. The 'Certificates' section includes an 'Upload certificate' button and a table with columns 'Thumbprint', 'Start date', and 'Expires'. Below the table, it states 'No certificates have been added for this application.' The 'Client secrets' section includes a '+ New client secret' button and a table with columns 'Description', 'Expires', and 'Value'. Below the table, it states 'No client secrets have been created for this application.'

Click **New Client secret** button

**Add a client secret** dialog opens

Key-in **Description** for the client secret

Select a value from the **Expires** section as per your need

**Add a client secret**

Description

SecretKey for RmsSchGrp

Expires

In 1 year

In 2 years

Never

**Add** **Cancel**

Click **Add** button

Once the settings are saved, the key is displayed.

Dashboard > [App registrations](#) >

**RmsSchGrpSK | Certificates & secrets**

Search (Ctrl+F) < Got feedback?

Overview  
Quickstart  
Integration assistant (preview)

**Manage**

Branding  
Authentication  
**Certificates & secrets**  
Token configuration  
API permissions  
Expose an API  
Owners  
Roles and administrators (Preview)  
Manifest

Support + Troubleshooting  
Troubleshooting  
New support request

Credentials enable confidential applications to identify themselves to the authentication service when receiving tokens at a web addressable location (using an HTTPS scheme). For a higher level of assurance, we recommend using a certificate (instead of a client secret) as a credential.

**Certificates**

Certificates can be used as secrets to prove the application's identity when requesting a token. Also can be referred to as public keys.

Upload certificate

Thumbprint	Start date	Expires
No certificates have been added for this application.		

**Client secrets**

A secret string that the application uses to prove its identity when requesting a token. Also can be referred to as application password.

+ New client secret

Description	Expires	Value
SecretKey for RmsSchGrp	8/2/2021	mCMtJM4Z3Pdjw386i3.OcIb3YV-tcv-

**Important NOTE:**

**Copy the new client secret value. You won't be able to retrieve it after you perform another operation or leave this screen.**

## VIII. Adding Credentials to the Application (Client Certificate)


### **Important NOTE:**

If you have already configured [Adding Credentials to the Application \(Client Secret\)](#), Please skip this step.

Make sure to create a new application by following the steps defined in [Create your app registration in Azure Active Directory](#)

In the left navigation menu, select **Certificates & Secrets** from **Manage** section of **Application Menu Blade**

**Certificates & Secrets** page opens

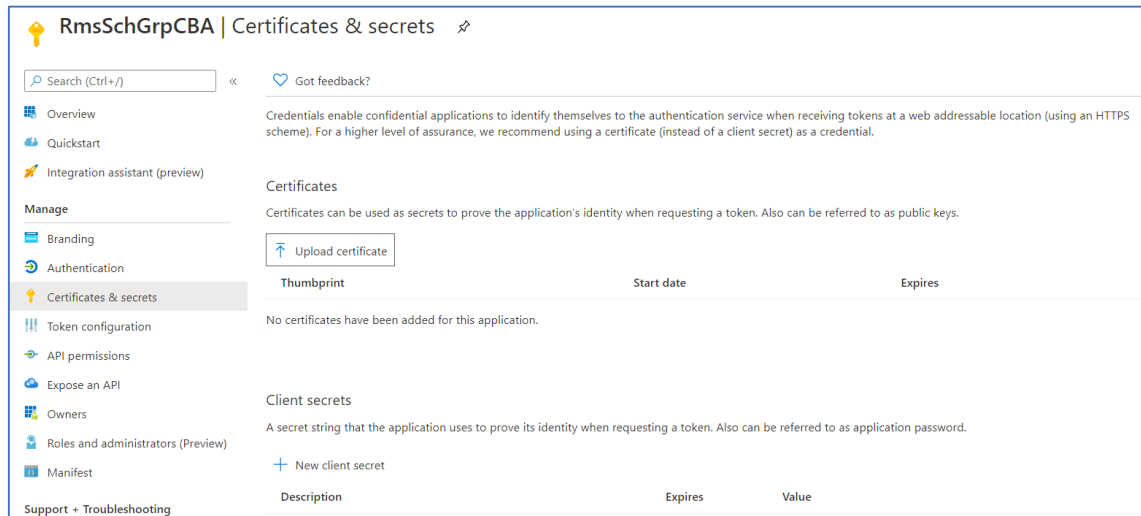

Click **Upload certificate** button

**Upload certificate** dialog opens. Click on the **Folder** icon to select a certificate file

Select the **.CER** file that exported in section [Export Certificate - Without Private Key \(.CER\)](#)

Click **Add** button



# Appendix G: Limiting application permissions to specific Exchange Online mailboxes



<https://learn.microsoft.com/en-us/graph/auth-limit-mailbox-access>

## In this article

1. [Background](#)
2. [Configure ApplicationAccessPolicy](#)
3. [Supported permissions and additional resources](#)
4. [Handling API errors](#)
5. [Related content](#)

Administrators who want to limit app access to specific mailboxes can create an application access policy by using the **New-ApplicationAccessPolicy** PowerShell cmdlet. This article covers the basic steps to configure access control. These steps are specific to Exchange Online resources and do not apply to other Microsoft Graph workloads.

## Background

Some apps call Microsoft Graph using their own identity and not on behalf of a user. These are usually background services or daemon apps that run on a server without the presence of a signed-in user. These apps make use of [OAuth 2.0 client credentials grant flow](#) to authenticate and are configured with application permissions, which by default enable such apps to access *all* mailboxes in a organization on Exchange Online. For example, the `Mail.Read` application permission allows apps to read mail in all mailboxes without a signed-in user.

### Important

By default, apps that have been granted [application permissions](#) to the following data sets can access all the mailboxes in the organization:

- Calendars
- Contacts
- Mail
- Mailbox settings

Administrators can configure [application access policy](#) to limit app access to *specific* mailboxes.

There are scenarios where administrators may want to limit an app to only specific mailboxes and *not all* Exchange Online mailboxes in the organization. Administrators can identify the set of mailboxes to permit access by putting them in a mail-enabled security group. Administrators can

then limit third-party app access to only that set of mailboxes by creating an application access policy for access to that group.

As further described in the [Supported permissions and additional resources](#) section below, application access policy restricts mailbox access for apps that have been granted any of the Microsoft Graph or Exchange Web Services permission scopes that the policy supports.

## Configure ApplicationAccessPolicy

To configure an application access policy and limit the scope of application permissions:

1. Connect to Exchange Online PowerShell. For details, see [Connect to Exchange Online PowerShell](#).
2. Identify the app's client ID and a mail-enabled security group to restrict the app's access to.
  - Identify the app's application (client) ID in the [Microsoft Entra admin center > app registrations page](#).
  - Create a new mail-enabled security group or use an existing one and identify the email address for the group.
3. Create an application access policy.

Run the following command, replacing the arguments for **AppId**, **PolicyScopeGroupId**, and **Description**.

```
PowerShell
New-ApplicationAccessPolicy -AppId e7e4dbfc-046f-4074-9b3b-2ae8f144f59b -PolicyScopeGroupId EvenUsers@contoso.com -AccessRight RestrictAccess -Description "Restrict this app to members of distribution group EvenUsers."
```

4. Test the newly created application access policy.

Run the following command, replacing the arguments for **Identity** and **AppId**.

```
PowerShellCopy
Test-ApplicationAccessPolicy -Identity user1@contoso.com -AppId e7e4dbfc-046-4074-9b3b-2ae8f144f59b
```

The output of this command will indicate whether the app has access to User 1's mailbox.

### Note

Changes to application access policies can take longer than 1 hour to take effect in Microsoft Graph REST API calls, even when `Test-ApplicationAccessPolicy` shows positive results.

## Supported permissions and additional resources

Administrators can use ApplicationAccessPolicy cmdlets to control mailbox access of an app that has been granted any of the following Microsoft Graph application permissions or Exchange Web Services permissions.

Microsoft Graph application permissions:

- Mail.Read
- Mail.ReadBasic
- Mail.ReadBasic.All

- Mail.ReadWrite
- Mail.Send
- MailboxSettings.Read
- MailboxSettings.ReadWrite
- Calendars.Read
- Calendars.ReadWrite
- Contacts.Read
- Contacts.ReadWrite

Exchange Web Services permission scope: `full_access_as_app`.

For more information about configuring application access policy, see the [PowerShell cmdlet reference for New-ApplicationAccessPolicy](#).

## Handling API errors

You might encounter the following error when an API call is denied access due to a configured application access policy.

```
JSON
{
  "error": {
    "code": "ErrorAccessDenied",
    "message": "Access to OData is disabled.",
    "innerError": {
      "request-id": "2f038156-cf40-403d-8e46-831fe42a8229",
      "date": "2019-05-24T10:16:21"
    }
  }
}
```

If the Microsoft Graph API calls from your app return this error, work with the Exchange Online administrator for the organization to ensure that your app has permission to access the mailbox resource.

Please see <https://learn.microsoft.com> for full details.

# Appendix H: Google Authentication Configuration

## Google Authentication Setup

To authenticate using the Google API, you will need to setup a new app registration in the Google API Console. You can setup a new app registration by following these steps:

### Create the App Registration

1. Login to the **Google API Console** (<https://console.cloud.google.com/>) and tap on the **Select a Project** which is located at the upper left.
2. A popup should show, and then select **New Project**.
3. Give your app registration a name.
4. Select an organization, as well as the location if needed.
5. Click **Create** to finish the app registration.

### Create the App Registration

1. Go to **APIs & Services** from the menu of the newly created app.
2. From the side menu, select **OAuth Consent Screen**.
3. Select either an **Internal** or **External** User type. This can be changed later.
4. Fill up the form fields for the **OAuth Consent Screen** section accordingly.
5. Click on **Save and Continue** to proceed.
6. Under the **Scopes** section, select the following:

#### Non-sensitive scopes

API	Scope	User-facing Description
Google Calendar API	.../auth/calendar.app.created	Make secondary Google calendars, and see, create, change, and delete events on them
Google Calendar API	.../auth/calendar.calendarlist.readonly	See the list of Google calendars you're subscribed to
Google Calendar API	.../auth/calendar.events.freebusy	See the availability on Google calendars you have access to
Google Calendar API	.../auth/calendar.events.public.readonly	See the events on public calendars
Google Calendar API	.../auth/calendar.settings.readonly	View your Calendar settings
Google Calendar API	.../auth/calendar.freebusy	View your availability in your calendars

#### Sensitive Scopes

API	Scope	User-facing Description
Google Calendar API	.../auth/calendar	See, edit, share, and permanently delete all the calendars you can access using Google Calendar

7. Click on **Save and Continue** to proceed.
8. On the Test User section, add testers accordingly.
9. Click on **Save and Continue** to proceed.
10. On the **Summary Section**, review the details if correct.
11. Tap on **Back to Dashboard** when done.

## Creating Client Credentials

1. Select **Credentials** from the side menu.
2. Click on the **Create Credentials** at the top, and select **OAuth 2.0 Client IDs**.
3. Select **Android** as the Application Type.
4. Add Name, Package name, and SHA-1 certificate fingerprint. Instructions for the SHA-1 is on the page.
5. Tap on **Create** to finish.

## Getting Client Secret and JSON

1. Select **Credentials** from the side menu.
2. Under the **OAuth 2.0 Client IDs** table, find your client credentials.
3. On the far right of the client credentials, tap on the download icon.
4. On the popup, take note of your **Client ID**. This will be used later. Assume that the real client id is: **<CLIENT\_ID>.apps.googleusercontent.com**. For example, on the pop up, the client id shown is: *0000000000-316obc54r6ttg9csq8lalv8sk0aq5ub.apps.googleusercontent.com*, assume that your real client id is: *0000000000-316obc54r6ttg9csq8lalv8sk0aq5ub*.
5. Tap on the **Download JSON** to download json file. Rename the file into **client\_secret.json**.

## Usage of Web Authentication

1. Open AMX Book.
2. Navigate into the AMX Book settings.
3. Select **Calendar**
4. Tap on Edit
5. Select **Google Calendar**
6. Tap on **Web Authentication**
7. Input client id from the previous section.
8. Tap on **Verify**. If successful, you can login to your account and then select a calendar from your account.

## Google Authentication Setup

### Create Service Account

1. Login to the **Google API Console** (<https://console.cloud.google.com/>) and tap on the **Select a Project** which is located at the upper left.
2. Select the project you have created.
3. On the options, select **IAM & Admin**.
4. On the side, select **Service Accounts**.
5. On the top, select **CREATE SERVICE ACCOUNT**.
6. Fill up as needed.
7. When done, take note of the **Email**. This will be used later.

### Creating Key for Service Account

1. Select a service account.
2. On the top, select **Keys**.
3. Tap on **ADD KEY**.
4. Tap on **Create new key**.
5. Select on **PI2** and tap **Create**.
6. Store and keep note of the PI2 file created.

## Creating Base64 from the Key

Generate the Base64 for the p12 file using this command:

```
openssl base64 -in <p12_name>.p12
```

You can also copy it directly to your clipboard using this command:

```
openssl base64 -in <p12_name>.p12 | pbcopy
```

**NOTE:** When getting it directly from the editor, make sure there are no white spaces in between. It should just be one long string with no spaces/line breaks in between.

## Usage of Service Account

1. Open AMX Book.
2. Navigate into the AMX Book settings.
3. Select **Calendar**
4. Tap on Edit
5. Select **Google Calendar**
6. Tap on **Service Account**
7. Input the service account email and key base64 string
8. Input email id of user you want to impersonate. This user must be in the organization.
9. Tap on **Verify**. If successful, you can select a calendar delegated to the user you impersonated.

# Appendix I: Hardware API

## Overview

AMX Varia panels support integration with third-party apps and web apps. Its hardware components can be accessed via the hardware API.

## Device Peripherals

Device peripherals like camera, microphone, speakers, NFC, etc. can be accessed in apps & web applications via normal Android configuration methods.

References:

- <https://source.android.com/docs/setup/about/faqs>
- <https://www.androidauthority.com/aosp-explained-1093505/>

## Any-Color Side LEDs

AMX Varia touch panels feature programmable *Any-Color Side LEDs* that can be set to one of over a million colors. These can be programmed either by an AMX Netlinx control system or via HTML calls.

Previous generation RoomBook, Acendo Book, and Modero G5 Acendo Book room scheduling panels featured similar side LEDs, but these are preprogrammed and capable of displaying either green or red only. This was based on the room's availability, available or booked, respectively.

See the table below to program the Any-Color side LEDs:

AMX Varia Any-Color Side LED usage	
<b>Web API</b>	<p>The LEDs are controlled via REST communication to an internal server. This server is NOT accessible from external IP.</p> <p>LED information can be queried with a simple GET call to <a href="http://localhost:8080/v1/led/side_led">http://localhost:8080/v1/led/side_led</a> will return the RGB value of the LED in a JSON response { "red": 0, "green": 0, "blue": 0 }</p> <p>To SET the LED, POST { "red": 255, "green": 255, "blue": 255 } to <a href="http://localhost:8080/v1/led/side_led">http://localhost:8080/v1/led/side_led</a></p>

# Appendix J: Loading Android apps to Varia Touch Panels

## Overview

AMX Varia panels support Android apps, either using the ^APP-show command in an AMX G5 Control project or by using the Any-App Custom Persona.

## Manager


Manager software is a desktop application used to discover, configure, & update AMX devices that support HControl. This includes the following product types (as of today):

- MUSE automation control processors
- CE Series I/O Expanders
- Varia Touch Panels
- SVSI encoders & decoders


Manager software can be downloaded from <https://www.AMX.com/manager>

## Discovering Devices

Manager will automatically discover network devices and display them in the grid.

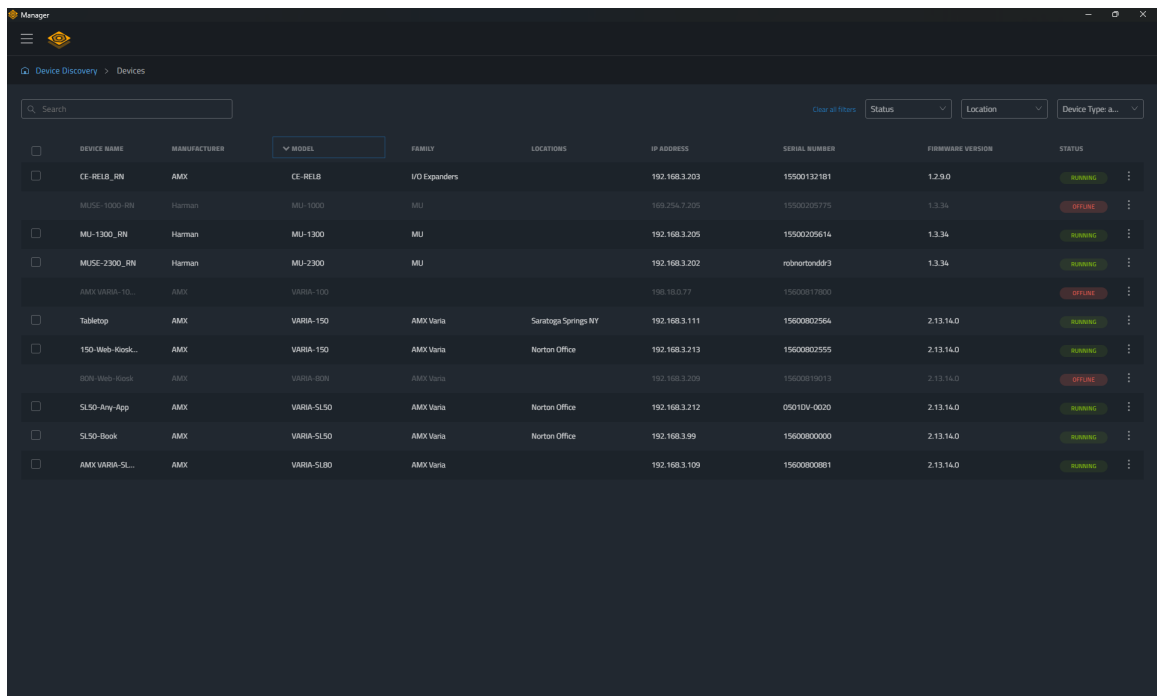



Use the checkbox on the left to select one or more devices. Based on the selections, a ribbon appears with applicable commands.

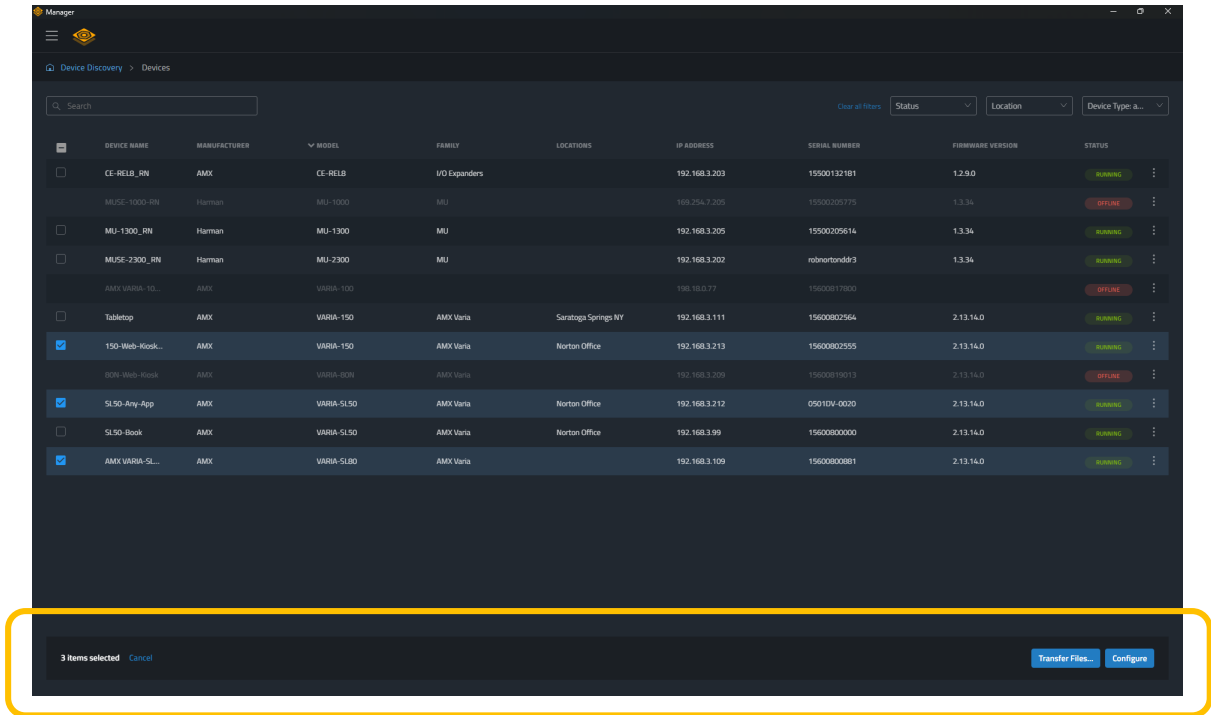


## Transferring Apps

Select a Varia panel (or multiple panels) and the select the [Transfer Files] button. A dialog appears to browse the local file system for a compatible file type. Varia touch panels accept the following file types:

File Type	Description	Example
.apk	Android app file	smarthings-1-8-27-22.apk UMABook_v1.7.3.apk
.kit, .ota	Firmware update file	SW_AMX-Varia-OS_v1.11.42.kit
.tp5	TPDesign5 UI file, for use with the AMX G5 Control app persona	large-conference-room-12.tp5
.zip	A collection of files; eg. multiple APK files	app-updates.zip SW_AMX-Varia-OS_v1.11.42.zip

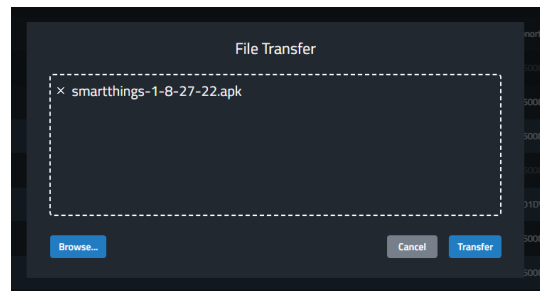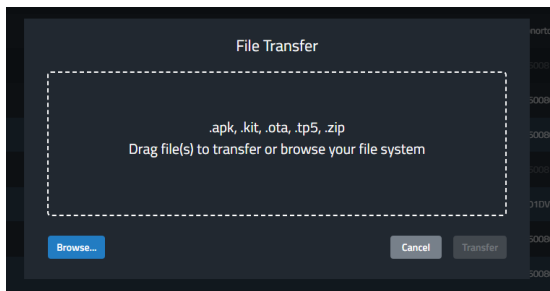

Select [Transfer] to begin transferring the file to the panel(s).

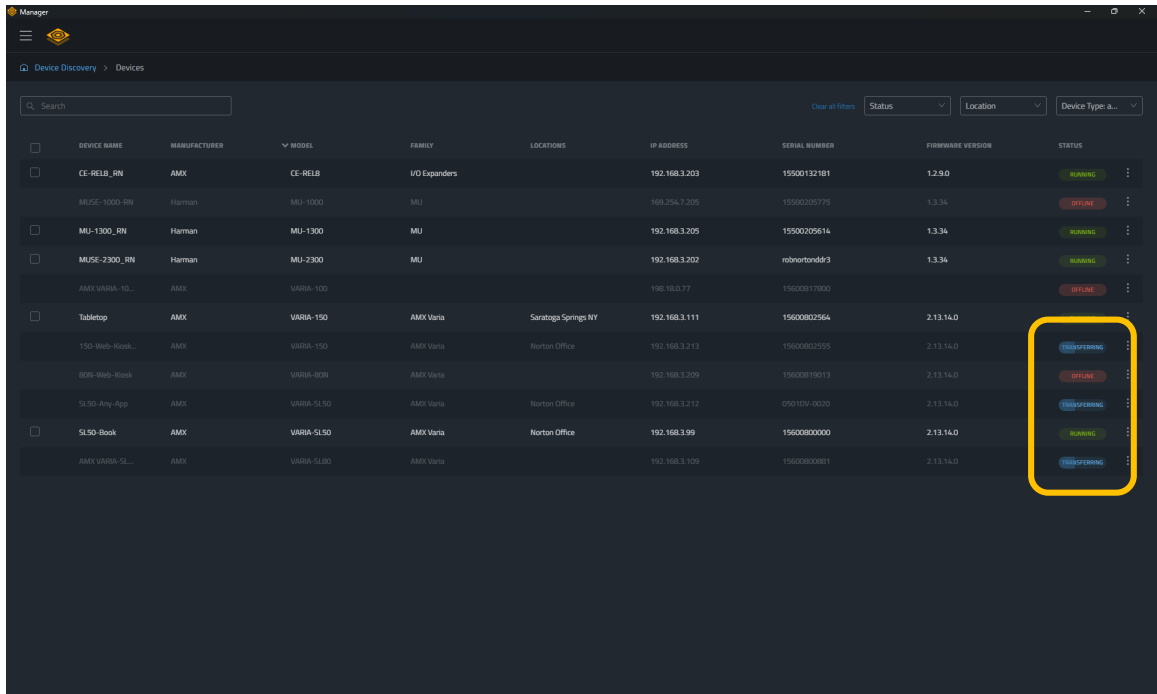

Please note that while it is possible to browse & select multiple files to transfer, if the panel is in an installation state or requires a reboot after install, the last couple of files could get missed. It is recommended to transfer one file at a time.

# Appendix K: Government Security Standards



## Overview

Varia panels align with government security standards, such as high complexity password enforcement, CAC reader compatibility, FIPS 140-3 compliance for cryptographic modules (where applicable), and it is JITC tested, making it suitable for deployment in environments with stringent security protocols, such as military installations.

## Password Complexity

There are multiple options when setting up the complexity required by commercial or military installations.

- Password complexity can be set via the Security page of the Varia panel.
- Enabling High Password Complexity will force a new password that has the following requirements: 15 to 128 characters in length, with at least 1 uppercase character, 1 lowercase character, 1 numeric character, 1 special character, and no more than 3 consecutive repeating characters.

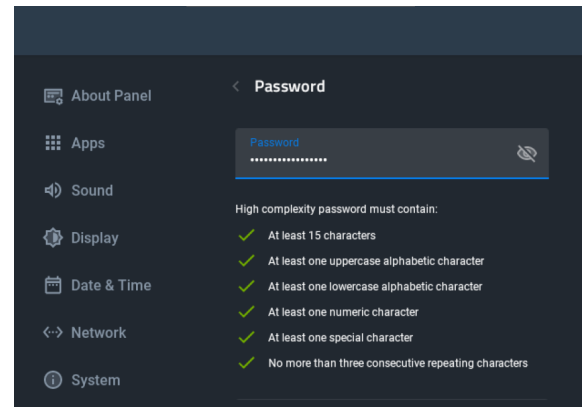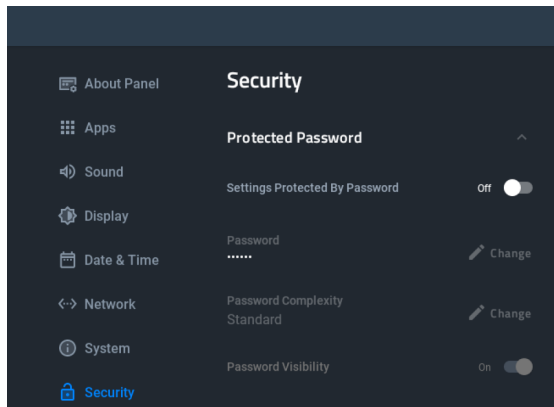

## FIPS 140-3 Encryption

The FIPS 140-3 Certification for the Varia panels will be found on certificate #4718: <https://www.wolfssl.com/license/fips/>

## Common Access Card (CAC) use for multi-factor authentication

Varia panels support USB-attached CAC readers.

CAC information is passed from the Varia panel to either an NX or MUSE controller, which passes the encrypted info to an Active Directory server to verify the credentials. Pages on the panels can be tailored to different users or to different user groups.

Multi-Factor Authentication (MFA) has been developed with MUSE controllers using Common Access Card (CAC) integration in coordination with a Varia touch-panel.



```

497 def button61port1Watch = myTp.port[1].button[61].watch({ event ->
498   log.info('MyTest: button 61 port 1 event= ' + event.value)
499   if (event.value) {
500     if (DeviceParam.CardPresent == true) {
501       log.info(' initiate CAC login')
502       myTp.login('LOGIN', 'CAC')
503     }
504     else if (DeviceParam.CardPresent == false) {
505       log.info(' initiate login')
506       myTp.login('LOGIN', 'USERNAME_PASSWORD')
507     }
508   }
509 })

```

This implementation is intended for military use only, and detailed information is available in the official Military Unique Deployment (MUD) Guide.


### Credential Storage for CA Certificates

Varia panels can use Trusted CA Certificates to verify the user login options when using multi-factor authentication.

Installing the certificates will need to be done via a USB storage device

1. Enable USB Storage in the System Settings menu
2. Access OS settings found under the System settings of Advanced Settings
3. Navigate to Advanced Settings ->Security ->More Security Settings->Encryption and Credentials ->Install a Certificate ->CA Certificate ->Install Anyway
4. Select the 3 lines in the top left and select the USB storage device
5. Browse to the needed certificate.

Once installed the certificates will show under the User certificates back under Trusted Credentials in the Encryption and Credentials page.

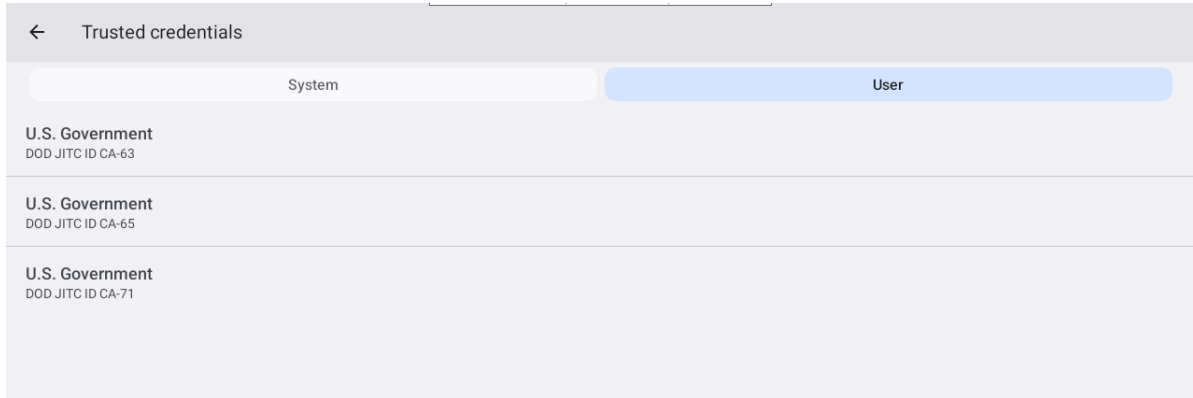

## Additional Security Features

The panels support event logging, which tracks and stores security-related activities for auditing.

Remote monitoring is available, which enables secure centralized management of the panel's status.

To protect the user interface, the panel offers customizable lockout options to prevent unauthorized changes and user role management to assign different access levels.

Varia also comes in a no-comm version for those installations that require devices with no cameras, microphones, or NFC functionality by default. (VARIA80N, VARIA-100N, & VARIA-150N)

IEEE 802.1x is available on Varia panels when implementing Port-based Network Access Control (PNAC) and can be enabled within the Advanced Settings-Network setup pages.



© 2026 Harman. All rights reserved. SmartScale, NetLinx, Enova, AMX, AV FOR AN IT WORLD, and HARMAN, and their respective logos are registered trademarks of HARMAN. Oracle, Java and any other company or brand name referenced may be trademarks/registered trademarks of their respective companies. AMX does not assume responsibility for errors or omissions. AMX also reserves the right to alter specifications without prior notice at any time. The AMX Warranty and Return Policy and related documents can be viewed/downloaded at [www.amx.com](http://www.amx.com).

3000 RESEARCH DRIVE, RICHARDSON, TX 75082 AMX.com | 800.222.0193 | 469.624.8000 | +1.469.624.7400 | fax 469.624.7153

Last Revised: 2026-02-26